

PLAYSKOOL

**AGES
6m-36m**



x3 1.5V AA LR6
**ALKALINE
BATTERIES
REQUIRED**
BATTERIES INCLUDED

Adult assembly required

Rock★tivity

FEATURES:

Music Mode:

- Play with any of the musical instruments to start the music.
- Layer instrument sounds and build a tune!
- When the music starts, play another instrument to add that instrument's sound to the mix! Continue to play the instruments during the song for more musical effects.

Learning Mode:

Play the instruments for an introduction to ABCs, 123s, shapes, colours, opposites and more! Try Spanish Mode for bilingual learning!

Slide back and forth for sounds or to call out opposites

Spins!

Tap drum to add a beat or count as you play

Turn click wheel

Press for sounds or to call out colours and shapes

Spin for music

Press keys to play notes or call out colours and ABCs

Remove microphone to start music. When music stops, replace microphone and remove again to start another song.

NOTE: If you misplace the microphone, manually press activation switch in the microphone cradle to start and stop music.




2 ways to play!



To assemble:

1. Flip table upside down
2. Insert each leg as shown into any leg opening.

NOTE: You will hear a **CLICK** when each leg is secured to the table.

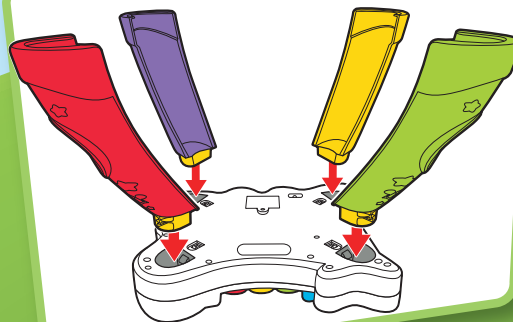


To disassemble:
Slide tab to release table leg.

TO PLAY:



Slide switch to OFF position when not in use to help conserve battery power.

PLAY MODES:

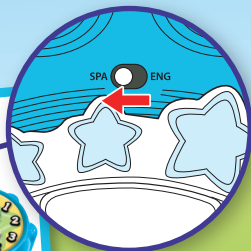

Slide switch to change from English Mode to Spanish Mode.

Learning Mode



Music Mode

Slide switch to change from Learning Mode to Music Mode

Rockin' the stages of physical development!



Jump 'n Jam Guitar
The faster you move,
the faster it plays!

Pound 'n Jam Drum
Tap a beat! It repeats!




Walk 'n Roll Rider
Makes music with every step!



Each sold separately.

To Replace Batteries:

Phillips/cross head screwdriver (not included) needed to insert batteries. Use screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Insert 3 x 1.5V fresh "AA" batteries. Alkaline batteries are required. Replace door and tighten screw.

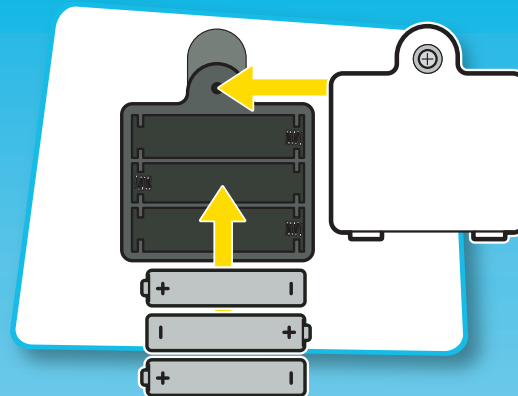

© 2012 Hasbro. All rights reserved.

Manufactured by Hasbro SA, Route de Courroux 6, 2800 Delemont CH.

Represented by Hasbro Europe, 2 Roundwood Ave, Stockley Park, Uxbridge, Middlesex, UB11 1AZ, UK.

Consumer Services: Hasbro UK Ltd., PO Box 43, Newport NP19 4YD, ☎00800 22427276.

consumer_affairs@hasbro.co.uk; www.hasbro.co.uk.

Colours and contents may vary from those shown. Please retain this information for future reference.

Distributed in Australia by Hasbro Australia Ltd., Level 2, 37-41 Oxford Street, Epping, NSW 2121, Australia, ☎ 1300 138 697.

Distributed in New Zealand by Hasbro NZ (a branch of Hasbro Australia Ltd.), 221 Albany Highway, Auckland, New Zealand.

☎ 0508 828 200. www.hasbro.com

PLAYSKOOL.com



031239974102