

! WARNING:

TO AVOID SERIOUS INJURY: Continuous adult supervision required; never use near motor vehicles, near streets, swimming pools, hills, steps or sloped driveways. Always wear shoes. Allow only one rider.

! WARNING:

Product must be assembled by an adult. This product contains small parts which are necessary for assembly. Prior to and during assembly of this product, keep small parts out of children's reach. Small parts pose a choke hazard to children under 3 years.


OVER
9

months

Adult assembly required.
Phillips/cross head screwdriver (not included) required for assembly.

NOTE TO CONSUMER:


This toy is packaged in DEMO MODE. When you bring the toy home, activate its full range of features by moving its DEMO/PLAY switch to the PLAY position.

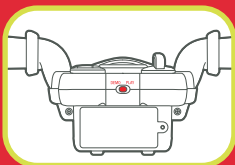


Walk 'n Roll Rider™

ASSEMBLY:

INCLUDES:


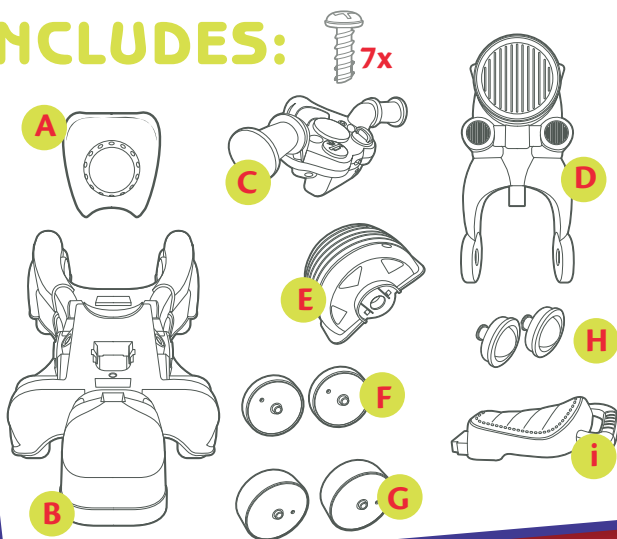


1

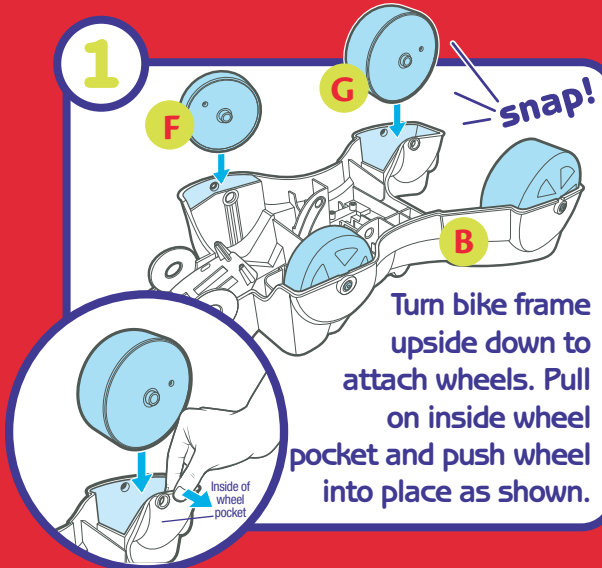



2

Line up front tire screw points and place tire inside frame. Tighten screws until fully secure.

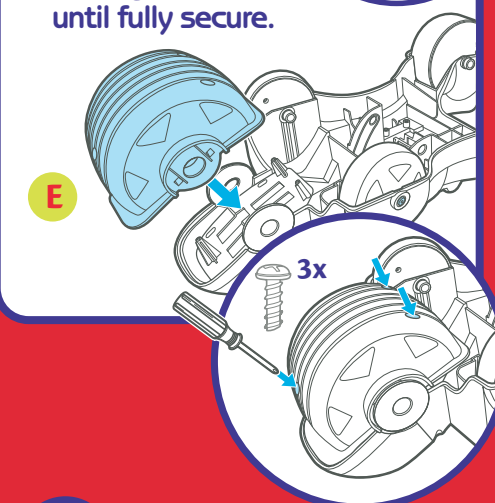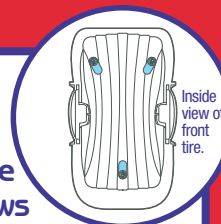


3

Flip bike frame over and attach gas tank.

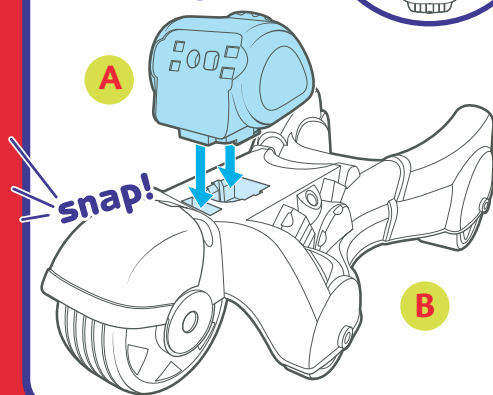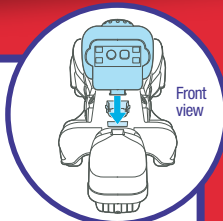


4

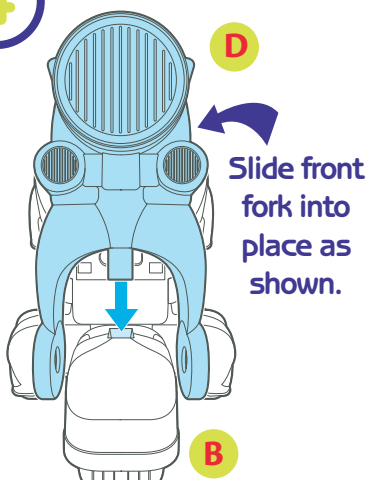


5

Press connector pin to attach front fork to gas tank. The connector pin is already connected to the front fork.

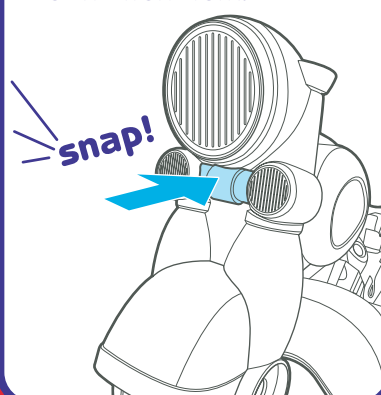


6

Place a hubcap in each hand. Press hubcaps into sides of front tire as shown. Continue to press with force until you hear them both "snap!" into place.

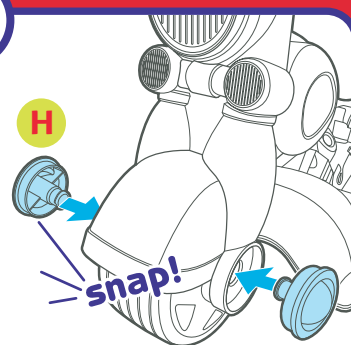


7

Slide handlebar firmly into place. Tighten screws to secure. Pull up on handlebar to make sure it is secure.

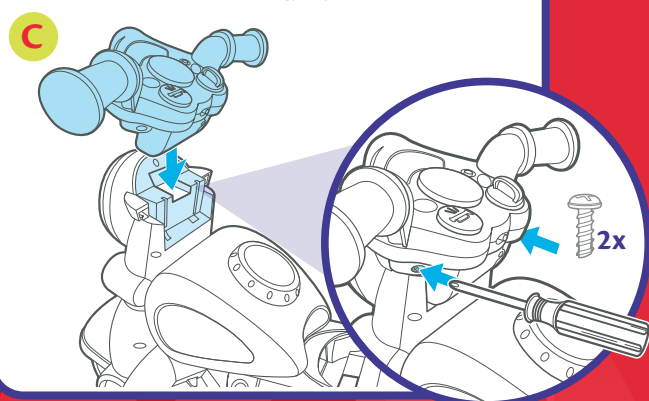

8

Slide seat into place until you hear the snap. Flip bike over and secure seat with screws as shown.

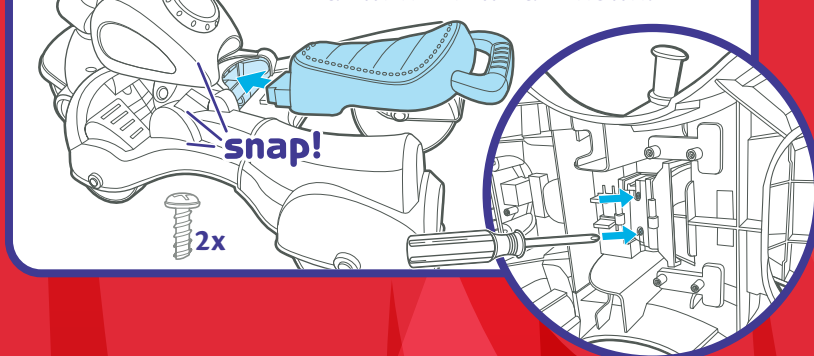

BEFORE YOU PLAY:

Tug on handlebar and seat to make sure they are secure. If either part comes loose, remove screws and press part into place using more force until you hear it snap into place. Realign and tighten screws to secure.

Maximum weight:
42 lb (19 kg)




x2 ALKALINE BATTERIES REQUIRED
15VAA DEMO BATTERIES INCLUDED

NOTE TO CONSUMER:
TO CONVERT:




WALKER MODE

- 1. Squeeze tabs under bike frame together to release seat locking mechanism.
- 2. Pull seat up to lock into place for Walker Mode. Listen for click. Push down on seat to confirm it is locked in place. CLICK!

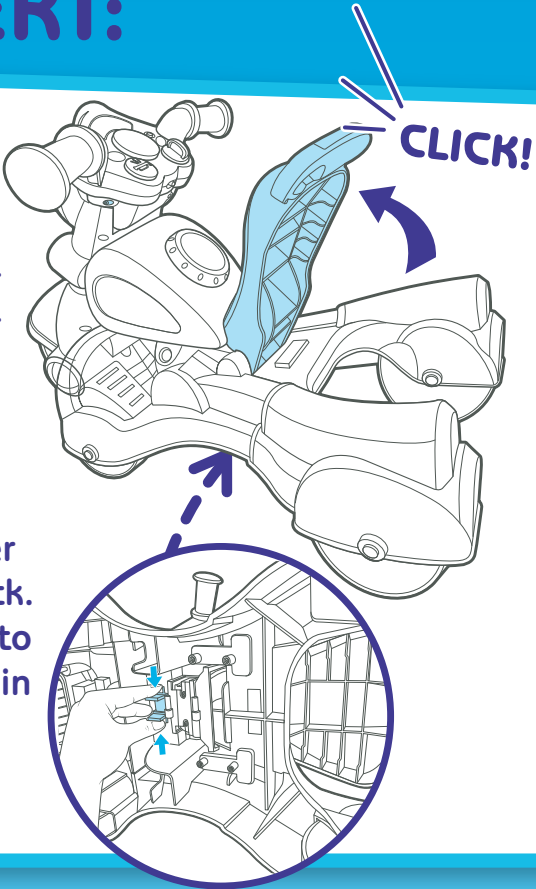


RIDE-ON MODE

- 1. Squeeze tabs under bike frame together to release seat locking mechanism.
- 2. Pull seat down to lock into place for Ride-On Mode. Listen for click. Pull up on seat to confirm it is locked in place. CLICK!

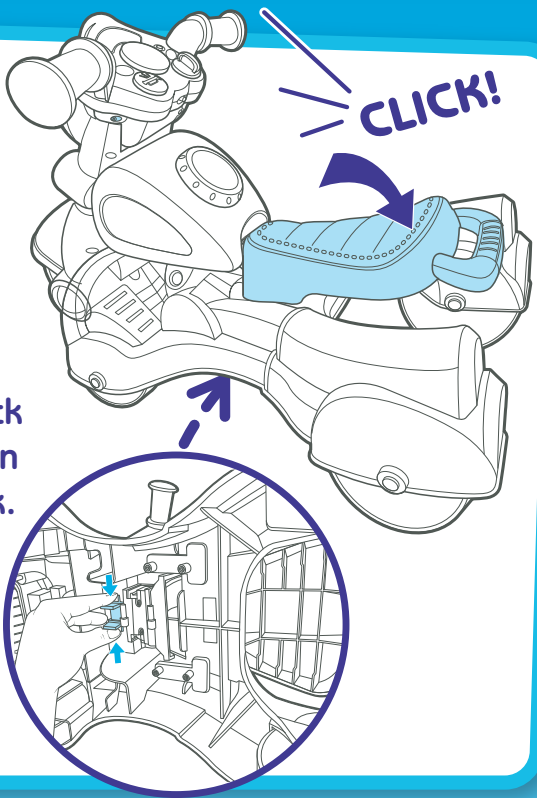

To Play:

Slide switch to OFF position when not in use to help conserve battery power.

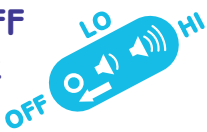

- 1. When baby walks with or scoots the bike forward, it will start the music!



- 2. The more baby rolls along with the bike, the more rockin' tunes will play!

Dashboard Activities

Press ELEFUN® character for fun phrases and lights

OFF/LO/HI switch

Turn for clicking handlebar


Press for horn sounds

Turn key to rev engine

Foot rest

To Replace Batteries:

Replace demo batteries with alkaline batteries. Phillips/cross head screwdriver (not included) needed to insert batteries. Use screwdriver to loosen screw in battery compartment door (screw remains attached to door). Remove door. Insert 2 x 1.5V fresh "AA" batteries. Alkaline batteries are required. Replace door and tighten screw.

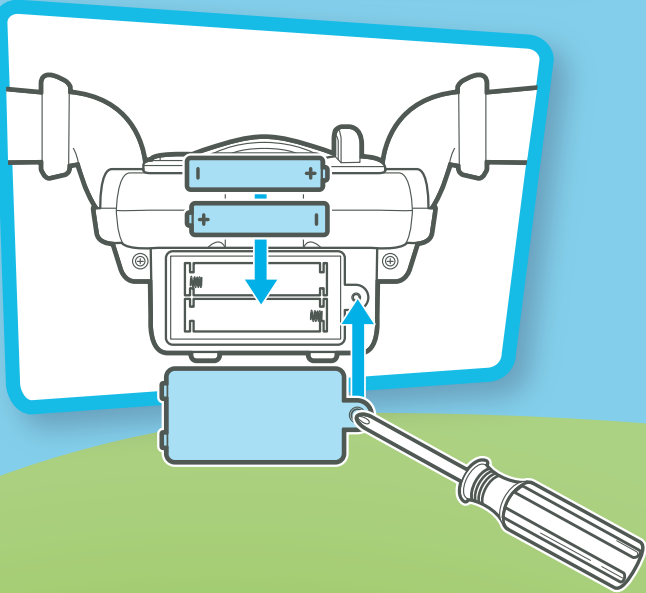

IMPORTANT: BATTERY INFORMATION

CAUTION:

- 1. TO AVOID BATTERY LEAKAGE
 - a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
 - b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
 - c. Remove exhausted or dead batteries from the product.
 - d. Remove batteries if product is not to be played with for a long time.
 - e. Do not short-circuit the supply terminals.
 - f. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.
- 2. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.

FCC STATEMENT
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



PN 7262830000
© 2012 Hasbro. All Rights Reserved.
TM & © denote U.S. Trademarks.

Look for other PLAYSKOOL®
ROCKTIVITY™ products at:

