

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Learn and play at
SesameStreet.org

32815

Questions? Call 1-800-327-8264

Product and colors may vary.

PN 7178570000



® and/or TM * & © 2011 Hasbro. All Rights Reserved. TM & © denote U.S. Trademarks.


Sesame Workshop®, Sesame Street® and associated characters, trademarks and design elements are owned and licensed by Sesame Workshop. © 2011 Sesame Workshop. All Rights Reserved.



32815


AGES 2-4Y

 Elmo's Find & Learn Alphabet Blocks

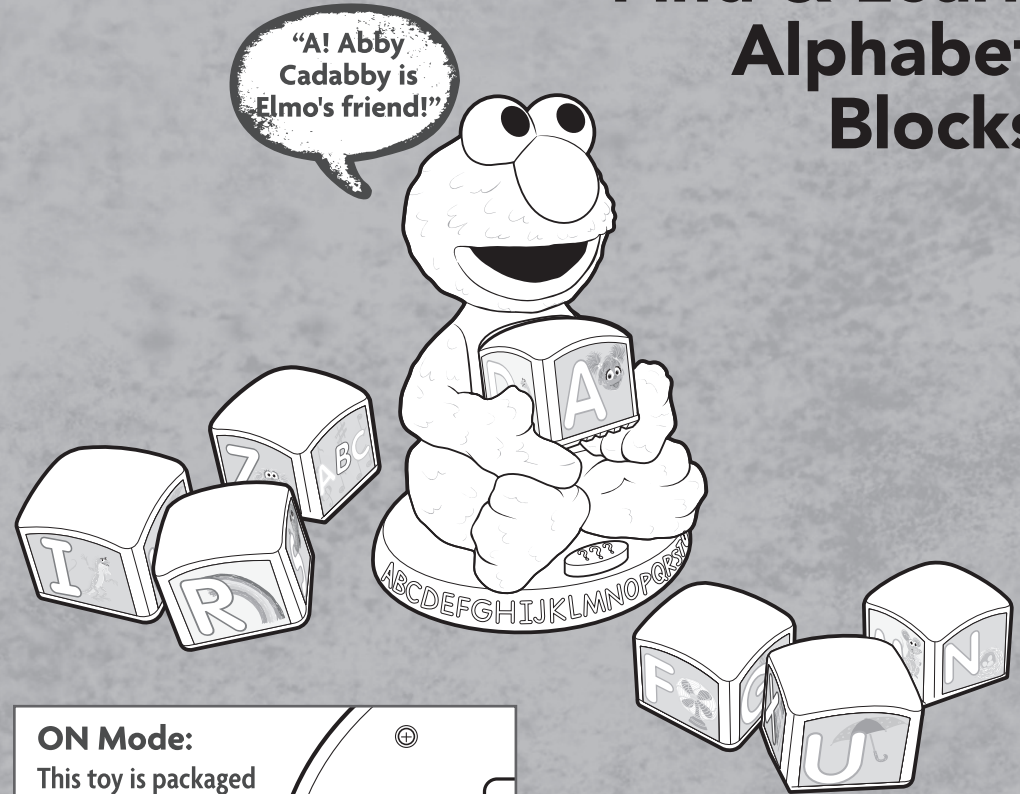

ON Mode:

 This toy is packaged in TRY ME mode. Slide the Power Switch to ON position for the full range of features.

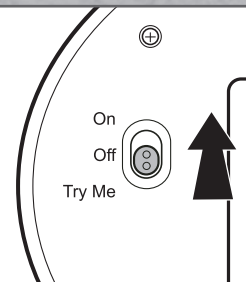


Includes Elmo and 7 blocks. Blocks and base each contain one magnet.

x4 BATTERIES INCLUDED
1.5VAA or R6 size

 Replace with 4 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to replace batteries.



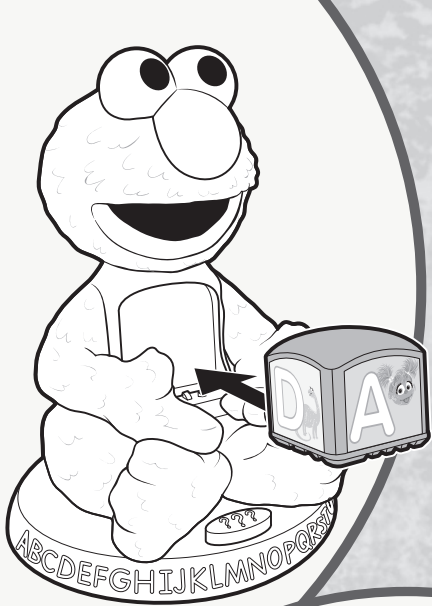


Discovery Mode:

Place a block into Elmo's hands. Elmo will move his head to take a "look" at the block. Elmo will then identify the name of the letter on the block. He will also announce what sound the letter makes, a word (pictured on the block) that starts with that letter and a fun fact.

PLAY TIP


Together with your child, learn even more about letters by encouraging her to find her favorite letter, a letter that starts with the name of an object or the first letter of her name! To explore further, help her to spell her whole name and simple words using the blocks. Ask her to say each letter as she goes!


Sleep Mode:

After a short period of inactivity, Elmo will enter sleep mode. Press the  button or slide a block into Elmo's hands to keep playing. If Elmo is in Sleep Mode too long, he will turn off to conserve battery power. Switch the TRY ME/ON/OFF button OFF and then back to ON to reactivate.



Question Mode:

Push the  button on the front of the base to enter Question Mode. Elmo will ask you to find a letter or picture on one of the blocks. Once a block is selected, place it in Elmo's hands.

After 5 questions in a row are correctly answered, Elmo will revert to Discovery Mode. Press the  button again to go back to Question Mode.

If 2 questions in a row are answered incorrectly, Elmo will revert to Discovery Mode. Practice learning more about letters in Discovery Mode before going back to Question Mode.

 
Song blocks:

Elmo comes with 2 sound blocks. Place the ABC sound block in Elmo's hands and he'll sing The Alphabet Song. Place the block with Elmo and the music notes in Elmo's hands and he'll sing the Friendship Song.

Here are the lyrics if you'd like to sing along:

The Alphabet Song:


A B C D E F G,
H I J K L M N O P,
Q R S, T U V,
W X Y and Z!

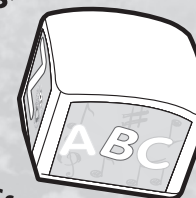

Now we know our ABCs,
next time won't you sing with Elmo!

Friendship Song:

 Elmo loves to learn.
It's fun to do,
Especially when Elmo
learns with you!
You're Elmo's good friend!
We share and play.
It's fun to learn something new with
you every day!

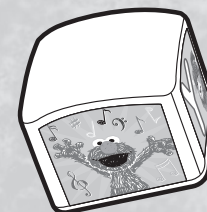

PLAY TIP

Encourage your child to point to each letter of the alphabet along Elmo's base, and sing the alphabet song together as he goes! Have him choose a Letter of the Day and then find that block. Talk about the sound that letter makes and the picture next to it. Go on a hunt to find something in the room that begins with the same letter.

TO REPLACE BATTERIES:

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Remove and discard old batteries. Replace with fresh 4 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace cover and tighten screw.

