 


**OVER  
18M - 4Y**

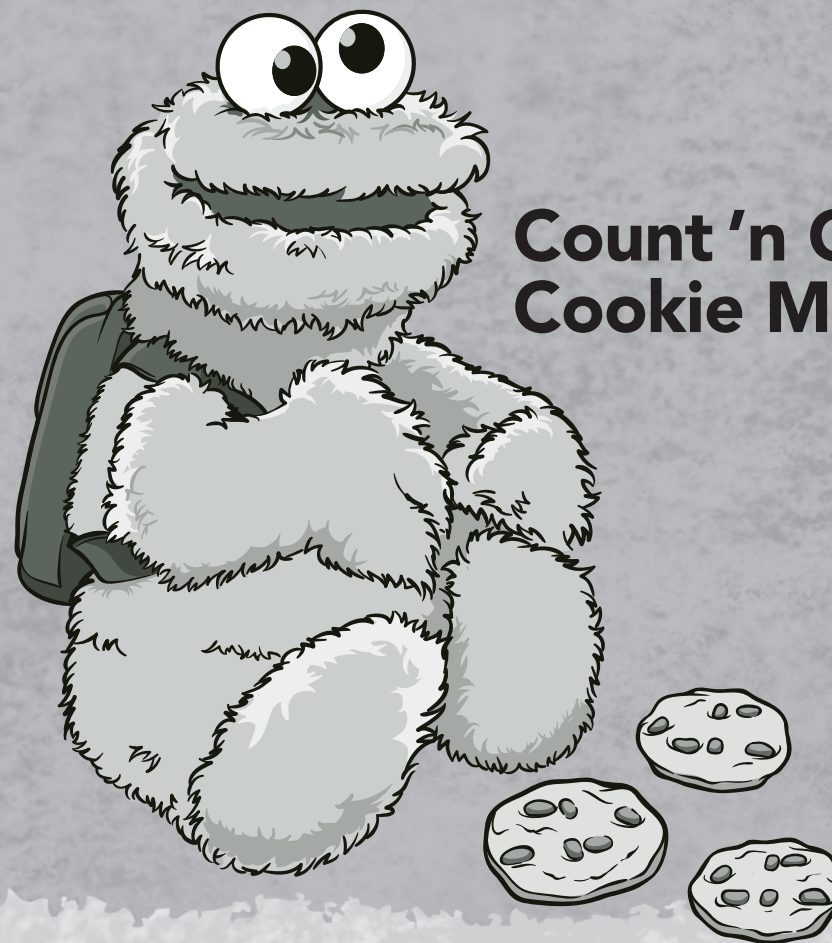

# Count 'n Crunch Cookie Monster

Learn and play at  
[SesameStreet.org](http://SesameStreet.org)



This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of them in a household waste bin.

PN 7178330001

32451

Questions? Call 1-800-327-8264  
Product and colors may vary. Retain these instructions for future reference.  
® and/or TM \* & © 2011 Hasbro, Pawtucket, RI 02862 USA. All Rights Reserved. TM & ® denote U.S. Trademarks.

Sesame Workshop®, Sesame Street® and associated characters, trademarks and design elements are owned and licensed by Sesame Workshop.  
© 2011 Sesame Workshop. All Rights Reserved.

© 2011 Hasbro. All rights reserved / Tous droits réservés.  
Manufactured by: Hasbro SA, Route de Courroux 6, 2800 Delemont CH. Represented by: Hasbro Europe, 2 Roundwood Ave, Stockley Park, Uxbridge, Middlesex, UB11 1AZ, UK.



**x4**  
1.5VAA or R6 size

 
 
## **BATTERIES INCLUDED**

Replace with 4 x 1.5V "AA" or R6 size batteries.  
Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to replace batteries.



## Note to Consumer:

Cookie Monster comes with a cardboard cookie in his mouth. Please discard cardboard cookie.

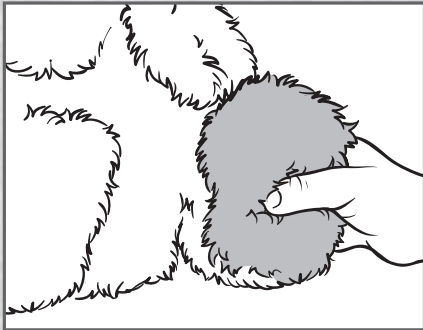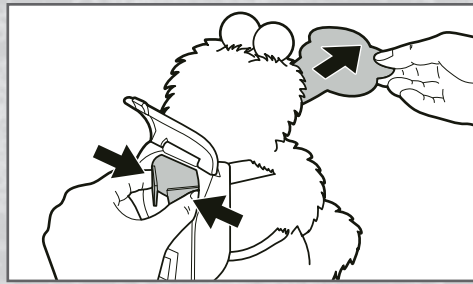

## TO PLAY:

To activate Cookie Monster, press his left foot. Cookie Monster will ask for a cookie. Place a plastic cookie in his mouth to see him “eat” it. When he is finished “eating” it, he will count it. Continue to feed Cookie Monster. He can count up to three cookies. He also sings a fun song about counting cookies.



Cookie Monster also likes to laugh. To hear Cookie Monster giggle, press his foot repeatedly.

**Sing along with Cookie Monster!**  
**Here is what he sings:**

Me count cookies,

1-2-3.

Yeah, won't you please count along with me?

## TO STORE:

Cookie Monster's cookies fit neatly in his backpack for storage

 


## Troubleshooting:

If Cookie Monster is not working, make sure to move the ON/OFF switch from TRY ME mode to the ON position. If he still does not work, replace batteries.

## TO REPLACE BATTERIES:

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Remove and discard old batteries. Replace with fresh 4 x 1.5V “AA” or R6 size batteries. Alkaline batteries recommended. Replace cover and tighten screw.

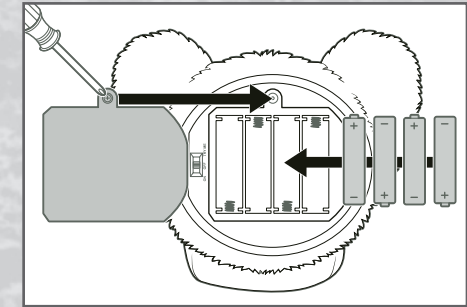

## IMPORTANT: BATTERY INFORMATION

### ⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.