

# IMPORTANT: BATTERY INFORMATION



## CAUTION:

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.
2. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
3. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
4. Remove exhausted or dead batteries from the product.
5. Remove batteries if product is not to be played with for a long time.
6. Do not short-circuit the supply terminals.
7. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
8. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Learn and play at  
[SesameStreet.org](http://SesameStreet.org)



This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of them in a household waste bin.

Questions? Call 1-800-327-8264

Product and colors may vary. Retain these instructions for future reference

PN: 7198110000

31950

®\* and/or TM\* & © 2011 Hasbro. TM & © denote U.S. Trademarks. U.S. Pat. No. 7568963.

Sesame Workshop®, Sesame Street® and associated characters, trademarks and design elements are owned and licensed by Sesame Workshop. © 2011 Sesame Workshop. All Rights Reserved.

© 2011 Hasbro. All rights reserved / Tous droits réservés.

Manufactured by: Hasbro SA, Route de Courroux 6, 2800 Delemont CH. Represented by: Hasbro Europe, 2 Roundwood Ave, Stockley Park, Uxbridge, Middlesex, UB11 1AZ, UK.




## Grover Microphone

31950  
OVER 18M-4Y



### ON Mode:

This toy is packaged in TRY ME mode. Slide the Power Switch to ON position for the full range of features.

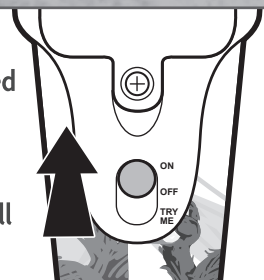

 **x3**  
1.5VAAA or R03 size

### BATTERIES INCLUDED

Replace with 3 x 1.5V "AAA" or R03 size batteries. Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to replace batteries.





## To Play:

Amplification works while the mic is active. There is no need to press or hold the silver or star button to amplify your voice.

If amplification is not working, try pressing the silver or star button to reactivate it.



Press the star button to hear Grover sing one of three songs.



Press the circle button to hear Grover say fun phrases.

## Interact with Let's Rock!™\* Elmo:

If your child owns a Let's Rock! Elmo, Elmo will interact with the Let's Rock! Grover Microphone. When playing with the Let's Rock! Grover Microphone, make sure to stand close and face Elmo's front side, and then press the star button on the Microphone. By simply pressing the star button, Elmo will recognize the Microphone and you will hear Grover and Elmo rock out together!




## Troubleshooting:

If Let's Rock! Elmo is not responding when you are playing with the Microphone, try these easy steps:

1. Make sure Elmo is turned on and active.
2. Wait for Elmo to stop singing before pressing the star button on the Microphone.
3. Make sure the speaker (bottom of Microphone) is facing Elmo's front.
4. Try standing closer to Elmo.

## TO REPLACE BATTERIES:

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Remove and discard old batteries. Replace with fresh 3 x 1.5V "AAA" or R03 size batteries. (Alkaline batteries recommended.) Replace cover and tighten screw.

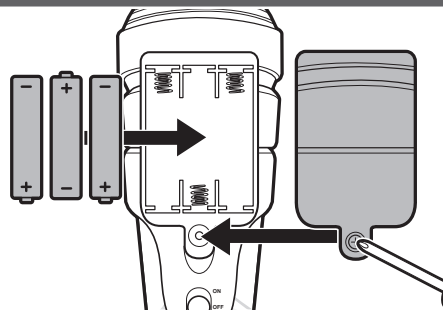

## Song lyrics:

If you'd like to sing along with Grover, here is what he sings!

### If You're Happy And You Know It

If you're happy and you know it bounce around.

If you're happy and you know it bounce around.

If you're happy and you know it and you really want to show it,

If you're happy and you know it bounce around.

If you're happy and you know it wave your hands.

If you're happy and you know it wave your hands.

If you're happy and you know it and you really want to show it,

If you're happy and you know it wave your hands.

### Wheels on the Bus

The wheels on the bus go round and round,

Round and round, round and round,

The wheels on the bus go round and round,

All through the town.

The wipers on the bus go swish swish swish,

swish swish swish, swish swish swish,

The wipers on the bus go swish swish swish,

All through the town.

### Old MacDonald Had a Farm – Dog version

Old Macdonald had a farm E-I\_E\_I\_O.

And on his farm he had a dog E-I\_E\_I\_O.

With a woof woof here and a woof woof there,

Here a woof, there a woof,

Everywhere a woof woof,

Old Macdonald had a farm E-I\_E\_I\_O.

### Old MacDonald Had a Farm – Cow version

Old Macdonald had a farm E-I\_E\_I\_O.

And on his farm he had a cow E-I\_E\_I\_O.

With a moo moo here and a moo moo there,

Here a moo, there a moo,

Everywhere a moo moo,

Old Macdonald had a farm E-I\_E\_I\_O.

### Old MacDonald Had a Farm – Pig version

Old Macdonald had a farm E-I\_E\_I\_O.

And on his farm he had a pig E-I\_E\_I\_O.

With an oink oink here and an oink oink there,

Here an oink, there an oink,

Everywhere an oink oink,

Old Macdonald had a farm E-I\_E\_I\_O.