

## IMPORTANT: BATTERY INFORMATION



### CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

### FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Learn and play at  
[SesameStreet.org](http://SesameStreet.org)



This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of them in a household waste bin.

Questions? Call 1-800-327-8264

Product and colors may vary. Retain these instructions for future reference

PN: 7176670000

31949

® and/or TM\* & © 2011 Hasbro. TM & © denote U.S. Trademarks. U.S. Pat. No. 7568963.

Sesame Workshop®, Sesame Street® and associated characters, trademarks and design elements are owned and licensed by Sesame Workshop. © 2011 Sesame Workshop. All Rights Reserved.



© 2011 Hasbro. All rights reserved / Tous droits réservés.  
Hasbro SA, Route de Courroux 6, 2800 Delemont CH. Hasbro Europe, 2 Roundwood Ave, Stockley Park, Uxbridge, Middlesex, UB11 1AZ, UK.



31949

OVER 18M-4Y

## Cookie Monster Keyboard

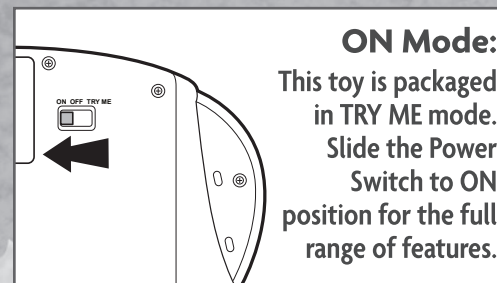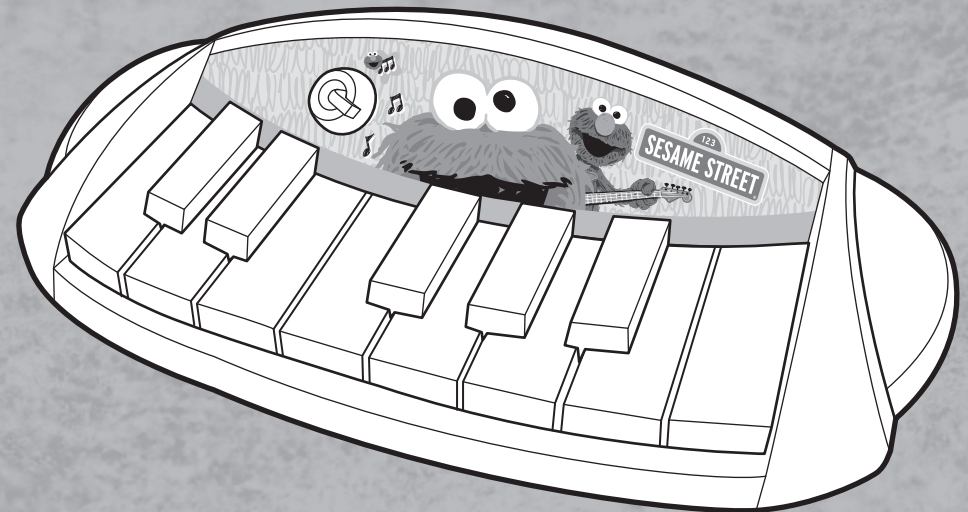

### ON Mode:

This toy is packaged in TRY ME mode. Slide the Power Switch to ON position for the full range of features.



**x3**  
1.5VAA or R6 size

### BATTERIES INCLUDED

Replace with 3 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to replace batteries.



## TO PLAY:

Let's Rock!™\* Cookie Monster Keyboard has three fun modes of play. Simply move the switch into the mode you want to play!



1. Free play –  
play anything you want!

2. Play-along song –  
follow light-up cues to play  
along to one of 3 songs!



3. Band mode –  
jam out to “The Rock ‘N Roll  
Alphabet” song!



## Interact with Let's Rock!™\* Elmo:

If your child owns a Let's Rock! Elmo, Elmo will interact with the Let's Rock! Cookie Monster Keyboard. When playing with the Let's Rock! Cookie Monster Keyboard, make sure to stand close and face Let's Rock! Elmo's front side. Switch to “Band Mode” on the Keyboard and Elmo will automatically recognize the Keyboard and sing along. Simply press any button to hear Elmo and Cookie Monster rock out!

## Troubleshooting:

If Let's Rock! Elmo is not responding when you are playing an instrument, try these easy steps:

1. Make sure Elmo is turned on and active.
2. Wait for Elmo to stop singing before playing your instrument.
3. Make sure your instrument is in “Band Mode.”
4. Make sure the speaker on your instrument is facing Elmo's front.
5. Try standing closer to Elmo.

## Song lyrics:

If you'd like to sing along with Cookie Monster, here is what he sings!

### Rock 'n Roll Alphabet Song:

A B C D E F G,  
H I J K L M N O P,  
Q R S, T U V,  
W X Y and Z!

Now you know you ABCs,

Rock 'n Roll Alphabet is fun to sing!

## TO REPLACE BATTERIES:

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment cover (screw remains attached to cover). Remove cover. Remove and discard old batteries. Replace with fresh 3 x 1.5V “AA” or R6 size batteries. Alkaline batteries recommended. Replace cover and tighten screw.

