

STORAGE

When you've finished playing, store the cards inside the Shuffle Shaker.

We will be happy to hear your questions or comments about this game. Please write to: Hasbro Games, Consumer Affairs Dept., P.O. Box 200, Pawtucket, RI 02862 USA. Tel: 888-836-7025 (toll free).

© 2009 Hasbro, Pawtucket, RI 02862. All Rights Reserved. TM & ® denote U.S. Trademarks.

www.hasbrogames.com



0509**09008**000 [00]
SHUFFLESHAKER Instructions (US)



AGES
8+

CONTENTS
1 Shuffle Shaker,
1 deck of cards
and 6
rules cards.

The Hasbro Shuffle Shaker takes the trouble out of the shuffle and lets you shake it up and shuffle like a pro! Doubles as a handy card carrier so you can take the fun with you, anytime, anywhere!
A pack of Hasbro cards and 3 simple versions of your favorite card games are included – they're all you need to get playing!


0509**09008**000 [00]
SHUFFLESHAKER Instructions (US)

HOW TO USE THE SHUFFLE SHAKER

The first time:

- Pull the two black pieces of the Shuffle Shaker apart.
- Tip out the inner red section which contains the cards and remove the deck. See Picture 1.
- Take the cards out of the cellophane and remove the 6 instruction cards and the Jokers.


Picture 1:

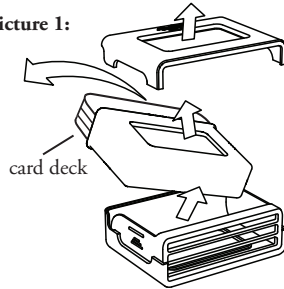

Every time you shake:

Pop the deck of cards into the red section, then slide it onto the red and black piece, as shown in Picture 2.

Picture 2:

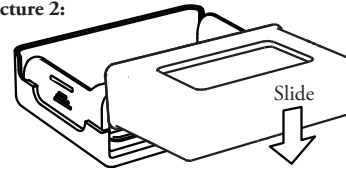

- Clip the 2 black sections back together, and shake!
- Unclip the black sections and remove your shuffled deck. You're ready to play!

TIP!

Shake with the black section downwards for a more effective shuffle!

0509**09008**000 00

SHUFFLESHAKER Instructions (US)

0509**09008**000 00

SHUFFLESHAKER Instructions (US)