

SPIDER-MAN 3

SANDMAN'S Sand Rider



WARNING:

CHOKING HAZARD-Small parts.
Not for children under 3 years.

AGES 4+

69225/69129 Asst.




CAUTION:

Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.


1

Lock bike into launcher.

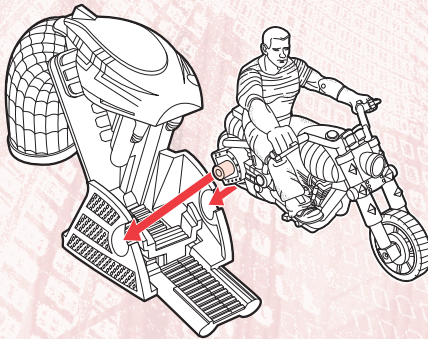


2

Insert ripcord with teeth facing up.

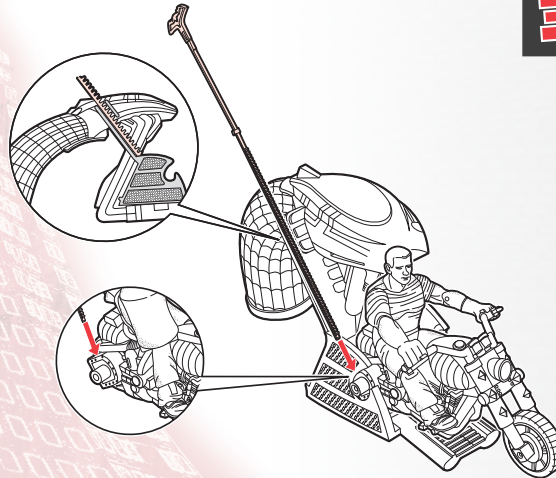


3

Holding the launcher and bike near the floor, tilt the launcher back so that the front wheel of the bike is slightly elevated.

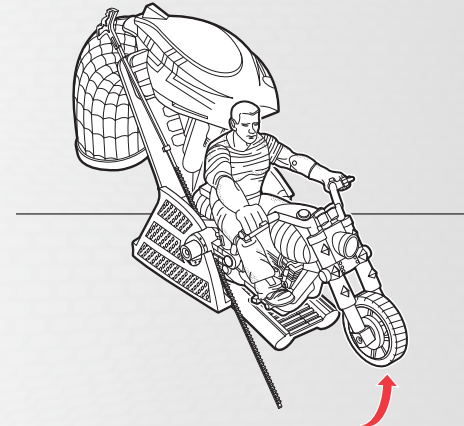


4

Quickly pull the cord out of the bike.
The bike can be launched without the launcher too!

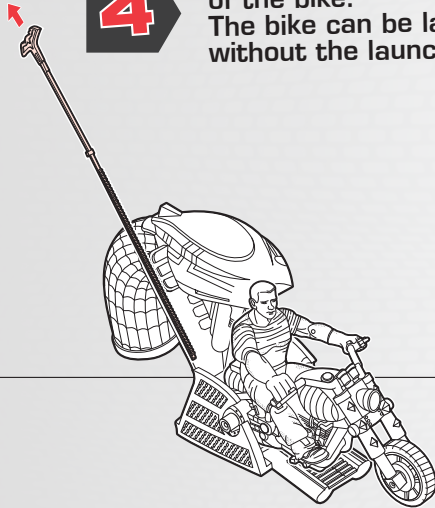

5



Lower both wheels of the bike to the floor.

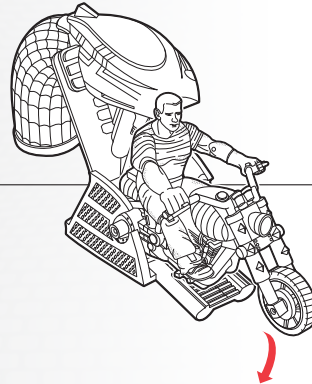

For better performance:
Give the launcher a
slight push forward as
you launch!

6

The bike will launch and race away!

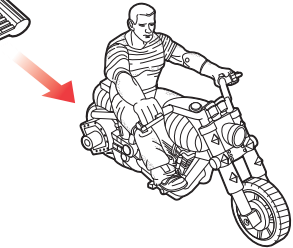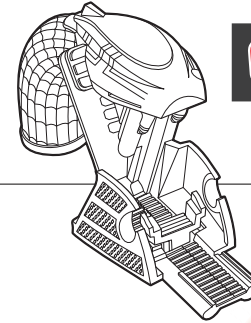

SPIDER-MAN
MERCHANDISING

COLUMBIA PICTURES

© 2006 COLUMBIA PICTURES INDUSTRIES, INC. ALL RIGHTS RESERVED.



MARVEL



Not suitable for children
under 3 years because of
small parts — choking hazard.

Spider-Man and all related characters and the distinctive likeness thereof: TM & © 2007 Marvel Characters, Inc. Spider-Man 3, the Movie: TM & © 2007 Columbia Pictures Industries, Inc. All rights reserved.

www.marvel.com

®* and/or TM* & © 2007 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

P/N: 6690060000