




AGES 5+  
79067

**X2** 1.5V AA/R6 size  
**BATTERIES INCLUDED**

Replace with 2 x 1.5V "AA" or R6 size batteries.  
Alkaline batteries recommended. Phillips/cross head  
screwdriver (not included) needed to insert batteries.

Includes:

- Two 5 oz. (142 grams) cans of triple stream Web Fluid
- Triple stream water tank
- Spider-Man glove
- Adjustable blaster housing

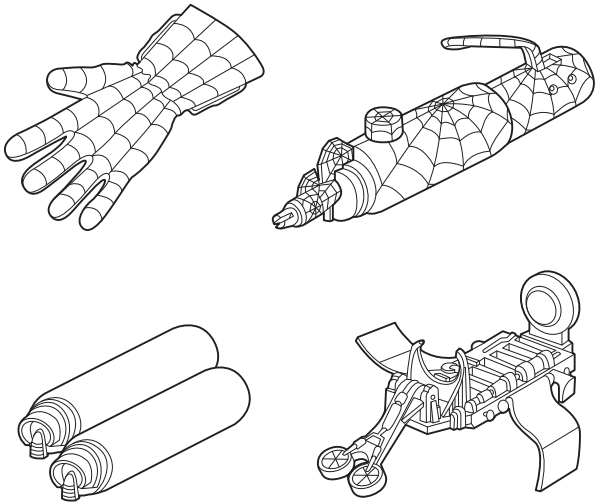


Thank you for purchasing the SPIDER-MAN SONIC WEB BLASTER.  
Please read and retain these instructions.

**WARNING:** Contents Under Pressure.  
Read all instructions before use.

To Insert Batteries:

1. Remove water tank/web fluid canister from blaster housing.
2. Using a Phillips/cross head screwdriver (not included), loosen the screw in the battery compartment door. Slide door off (screw will stay attached to door), and remove and discard dead batteries.
3. Insert 2 x fresh 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace battery compartment door and tighten screw.

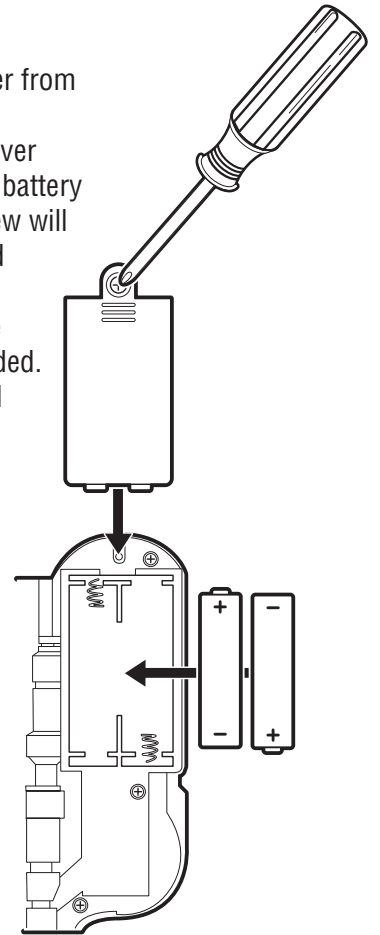

**CAUTION: TO AVOID BATTERY LEAKAGE**

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

**IMPORTANT: BATTERY INFORMATION**

Please retain this information for future reference.  
Batteries should be replaced by an adult.

**CAUTION:**


1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.


## Web Blaster Assembly & Use:

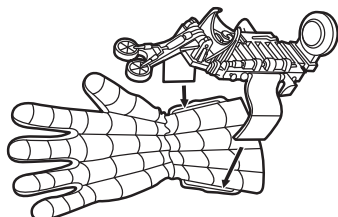


1. Attach Blaster Housing to glove by sliding straps through loops on glove.

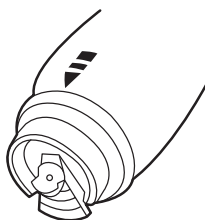


2. Rotate nozzle tab to opposite side of red dot on can.

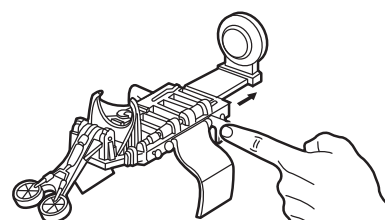


3. Push Lock Button in and pull out Rear Clamp.

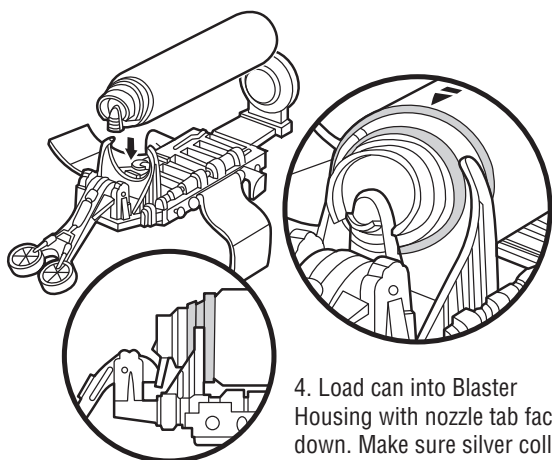

4. Load can into Blaster Housing with nozzle tab facing down. Make sure silver collar is in front of Holding Clip.

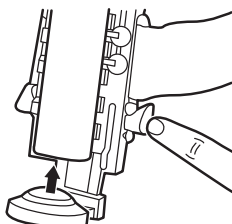


5. Push in Rear Clamp and push Lock Button.

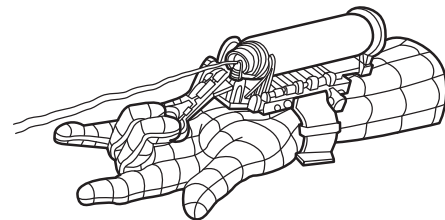


6. Place Web Blaster on forearm and fasten Velcro straps. Use middle fingers to press down on trigger to shoot web.


## Water Blaster Assembly & Use:

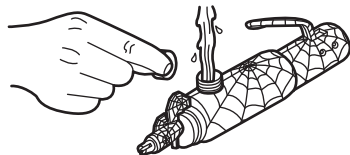

1. Unscrew cap and fill tank with clean water to water line on side of tank. Replace cap. **NOTE:** Always remove water tank from holder when filling.

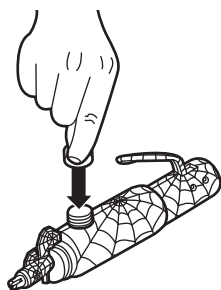


2. Push Lock Button in and pull out Rear Clamp.

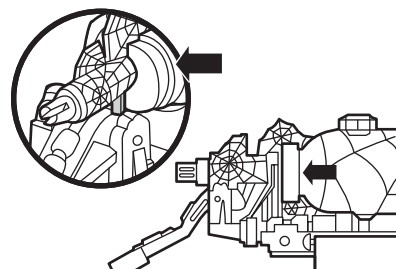


3. Snap front ring on Water Tank behind Holding Clip.



4. Push in Rear Clamp and push Lock Button.

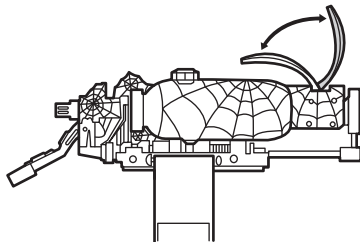

5. Pump handle 15-20 times.

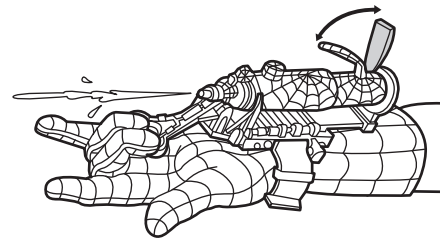

6. Continue pumping while pressing trigger with middle fingers to shoot water.

## ! WARNING: Contents Under Pressure.

Do Not Puncture Or Incinerate.

Do Not Expose to Heat or Store at Temperatures above 120° Degrees F / 48 Degrees C.

- Do Not Spray on Open Flame or Any Hot Stoves or Light Bulbs.
- Do Not Leave in Direct Sunlight or Store in a Hot Vehicle.
- Heat Can Cause Can to Burst Violently.
- Do Not Spray in Eyes or Face.
- Do Not Ingest String.

## ! CAUTION: Do not spray on walls, floors, clothing, furniture or vinyl as string may stain certain types of surfaces and fabrics. USE ONLY AS DIRECTED.

Shake well before using. Can should be used in a horizontal position.

Adult Supervision Required.

Conforms to ASTM D4236.

Non-Toxic.

Non-Flammable.

Not Recommended for Indoor Use.

Ingredients: Water HFC 134a (propellant), Acrylic Resin, Hydrocarbon solvents, Light oil, Pigment.



Product and colors may vary.  
 Spider-Man and all related characters: TM & © 2006 Marvel Characters, Inc.  
 Spider-Man movie elements: © 2002-2006 Columbia Pictures Industries, Inc. All rights reserved. Licensed by Spider-Man Merchandising L.P.  
 ®\* and/or TM\* & © 2006 Hasbro. All Rights Reserved.  
 TM & © denote U.S. Trademarks.  
 Hasbro Canada, Longueuil, QC, Canada J4G 1G2

P/N: 660407000