


SPIDER-MAN ORIGINS

AGES 4+
79799/79035 Asst.


SPIDER-MAN®

With leaping attack!


Play Instructions:

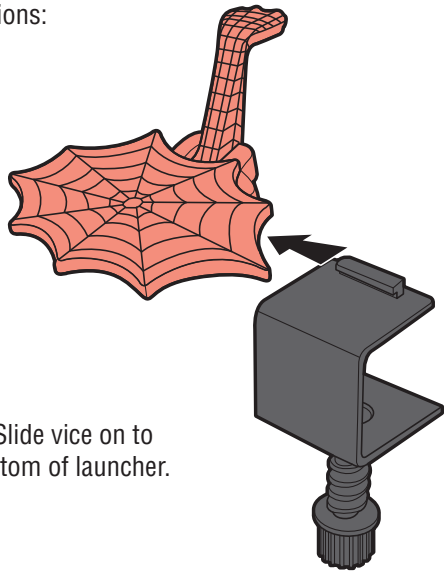


1. Slide vice on to bottom of launcher.

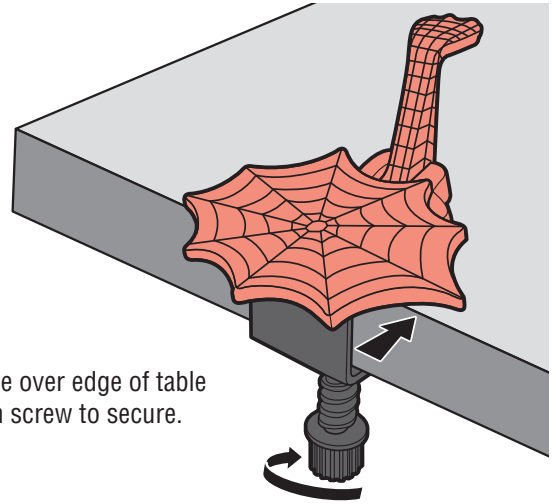


2. Slide vice over edge of table and tighten screw to secure.

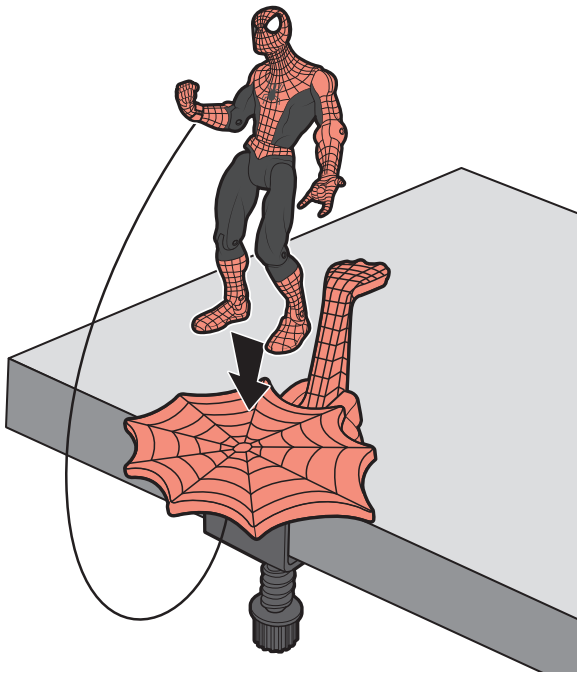

3. Set launcher. Place Spider-Man on launcher platform.

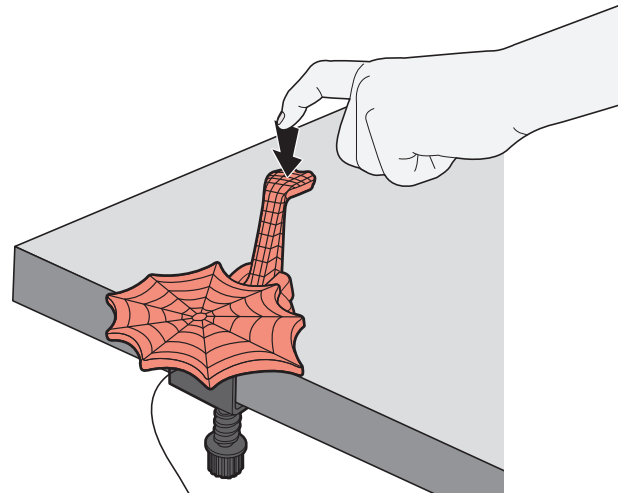

4. Press lever to send Spider-Man into a leaping attack!

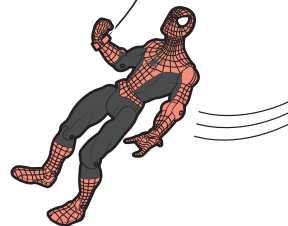

P/N: 6623750000



Not suitable for children under 3 years because of small parts — choking hazard.

Product and colors may vary.
Spider-Man and all related characters: TM & © 2006 Marvel Characters, Inc.
Spider-Man movie elements: © 2002-2006 Columbia Pictures Industries, Inc.
All rights reserved. Licensed by Spider-Man Merchandising L.P.
www.marvel.com
®* and/or TM* & © 2006 Hasbro. All Rights Reserved.
TM & © denote U.S. Trademarks.