



Not suitable for children under 3 years because of small parts — choking hazard.



MARVEL and all related character names and the distinctive likenesses thereof: TM & © 2007 Marvel Characters, Inc. All rights reserved. This action figure is produced under license from Marvel Characters, Inc.

[www.marvel.com](http://www.marvel.com)

®\* and/or TM\* & © 2007 Hasbro. All Rights Reserved.

TM & © denote U.S. Trademarks.

P/N: 6747830000

SPIDER-MAN™

**AGES 5+**  
69379/69366 Asst.


# TRIPLE FLINGER



**CAUTION:** Do not aim at eyes or face.

**TO AVOID INJURY:** Use only webs designed for this product. Do not modify webs or web blaster.


Thanks for purchasing the SPIDER-MAN® Triple Flinger. Please read and retain these instructions.

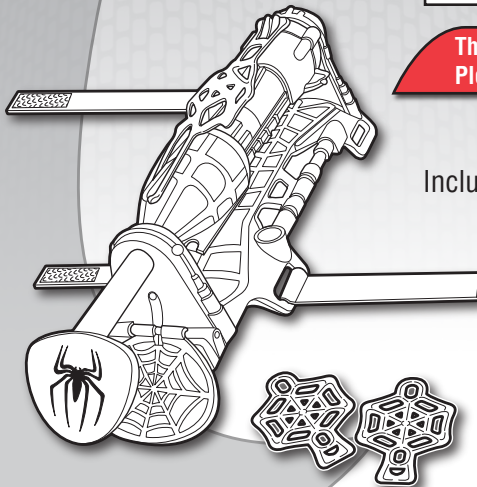


Includes: Web Flinger and 3 Webs

## Triple Flinger Assembly & Use:


**1** Hook front of Web onto flinger as shown.

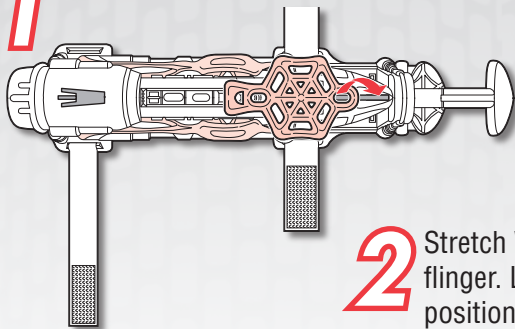


**2** Stretch Web and hook other end onto flinger. Load three webs onto the three positions on the launcher.

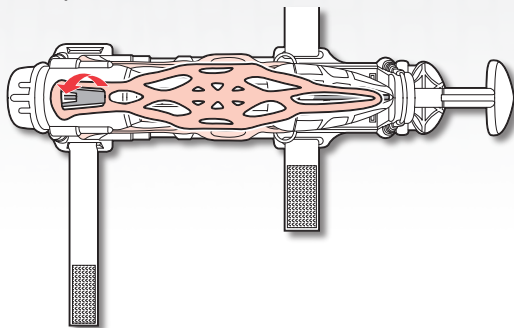

**3** Place flinger on forearm and fasten touch fastener straps.

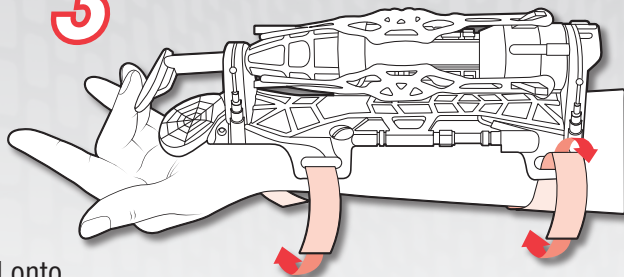

**4** Press trigger with index finger to fire.

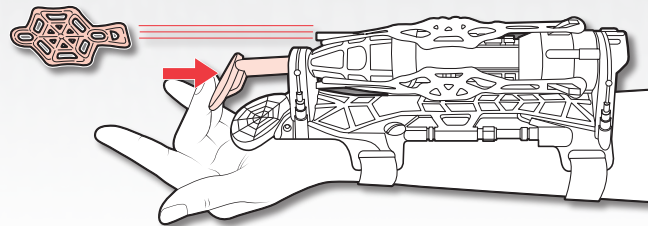

**Note:** Do not leave webs stretched or loaded on blaster when not playing.