

REVERSIBLE RED TO BLACK SPIDER-MAN MASK AND WEB BLASTER

YOU are the web-slinger!

WARNING:
Pressurized container. Read all instructions before use.

CAUTION: Do not aim at eyes or face.
TO AVOID INJURY: Use only darts designed for this product. Do not modify darts or dart blaster.


CAUTION: Do not aim at eyes or face.
TO AVOID INJURY: Use only webs designed for this product. Do not modify webs or web blaster.

Thank you for purchasing the SPIDER-MAN Mask & WEB BLASTER.
Please read and retain these instructions.

IMPORTANT! Please read all instructions before wearing this toy!


Includes:

- Adjustable Web Blaster holder
- (1) 5 oz. (142 grams) Web Fluid canister
- Dart Blaster
- 5 Web Darts
- 3 stretchy webs
- Stretchy web belt clip
- Reversible SPIDER-MAN Mask

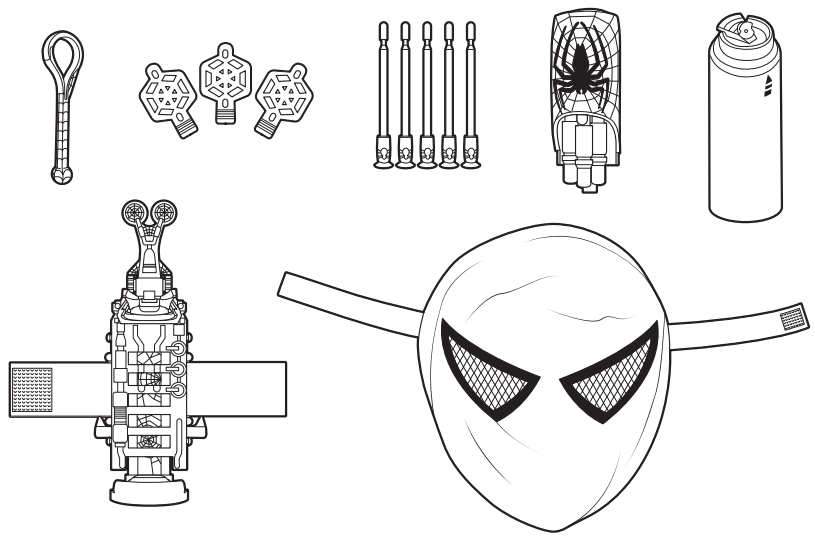


REVERSIBLE MASK:

To reverse mask from red to black, turn around and inside out. Pull strap over top of mask.

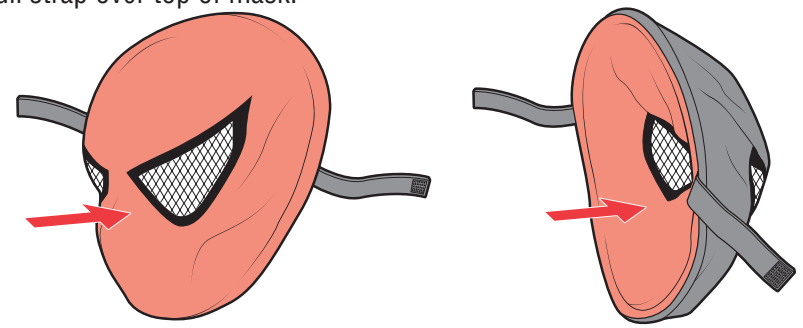


Web Blaster Assembly & Use:


1 Rotate back part of nozzle (not the gear) until the D shaped opening in the nozzle shows red dot on can. Shake can well.

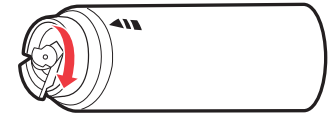


2 Push Lock Button in and pull out Rear Clamp.

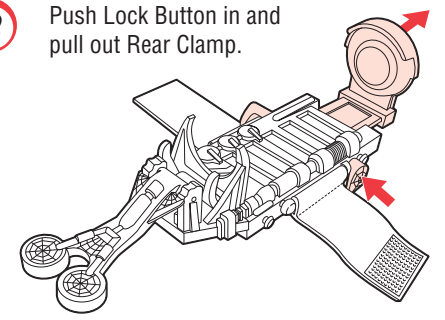


3 Load can into Blaster Housing with nozzle tab facing down. Make sure silver collar is in front of Holding Clip.

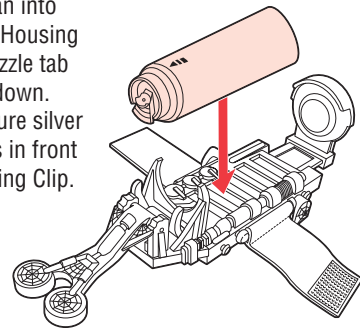

4 Push in Rear Clamp and push Lock Button.

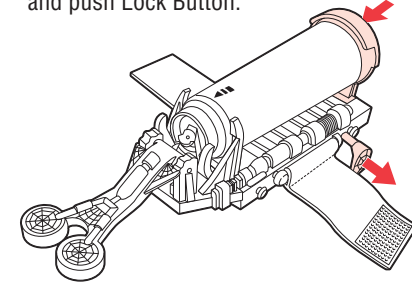

5 Place Web Blaster on forearm and fasten touch fastener straps. Use middle fingers to press down on trigger to shoot web.

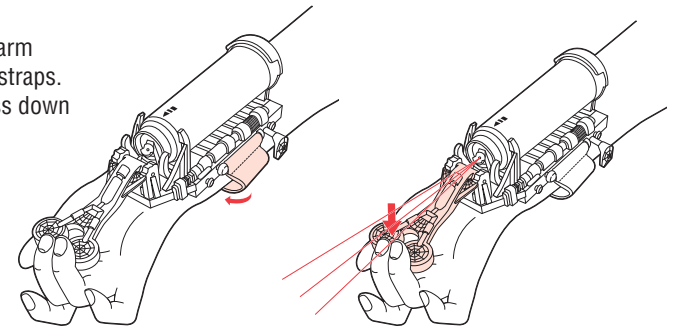

Note: Clear nozzle of any excess string for best performance. For best results aim slightly upwards.

Dart Blaster Assembly & Use:

1 Push Lock Button in and pull out Rear Clamp.

2 Load Launcher into Blaster Housing. Snap front ring on Launcher into Holding Clip.

3 Push in Rear Clamp and push Lock Button.

4 Load 5 Web Darts into Web Dart Launcher.

5 Place Web Blaster on forearm and fasten touch fastener straps. Use middle fingers to press down on trigger to shoot darts.

! WARNING: Contents Under Pressure.
 Do Not Puncture Or Incinerate.
 Do Not Expose to Heat or Store at Temperatures above 120° Degrees F / 48 Degrees C.

- Do Not Spray on Open Flame or Any Hot Stoves or Light Bulbs.
- Do Not Leave in Direct Sunlight or Store in a Hot Vehicle.
- Heat Can Cause Can to Burst Violently.
- Do Not Spray in Eyes or Face.
- Do Not Ingest String.

Shake well before using.
 Can should be used in a horizontal position.

Adult Supervision Required.
 Non-Toxic.
 Non-Flammable.
 Not Recommended for Indoor Use.

! CAUTION: Do not spray on walls, floors, clothing, furniture or vinyl as string may stain certain types of surfaces and fabrics.
USE ONLY AS DIRECTED.

Ingredients: Water HFC 134a (propellant), Acrylic Resin, Hydrocarbon solvents, Light oil, Pigment.

Launching Stretchy Webs

1 Webs hang on belt clip.

2 To launch webs, attach Dart Blaster to Blaster Housing as shown above.

3 Hook loop on end of web onto hook on Dart Blaster.

4 Using tab on Web, pull back as far as you can.

5 Release to launch!



Product and colors may vary.
 Spider-Man and all related characters and the distinctive likeness thereof:
 TM & © 2007 Marvel Characters, Inc.
 Spider-Man 3, the Movie: TM & © 2007 Columbia Pictures Industries, Inc. All rights reserved.
 ®* and/or TM* & © 2006 Hasbro. All Rights Reserved.
 TM & ® denote U.S. Trademarks.
 Hasbro Canada, Longueuil, QC, Canada J4G 1G2

P/N: 664840000