

## REVERSIBLE RED TO BLACK SPIDER-MAN MASK AND WEB BLASTER

YOU are the web-slinger!

**WARNING:**  
Pressurized container. Read all instructions before use.

**CAUTION:** Do not aim at eyes or face.  
**TO AVOID INJURY:** Use only darts designed for this product. Do not modify darts or dart blaster.


**CAUTION:** Do not aim at eyes or face.  
**TO AVOID INJURY:** Use only webs designed for this product. Do not modify webs or web blaster.

Thank you for purchasing the SPIDER-MAN Mask & WEB BLASTER.  
Please read and retain these instructions.

**IMPORTANT!** Please read all instructions before wearing this toy!


Includes:

- Adjustable Web Blaster holder
- (1) 5 oz. (142 grams) Web Fluid canister
- Dart Blaster
- 5 Web Darts
- 3 stretchy webs
- Stretchy web belt clip
- Reversible SPIDER-MAN Mask

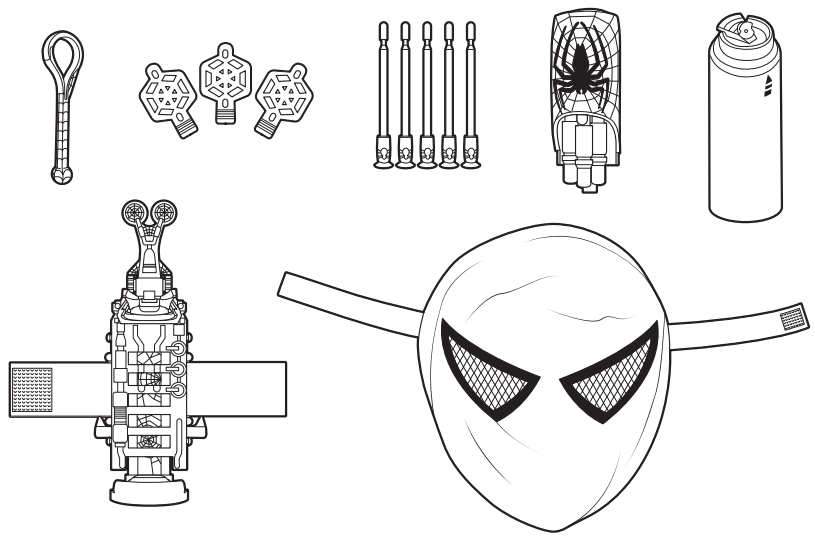


### REVERSIBLE MASK:

To reverse mask from red to black, turn around and inside out. Pull strap over top of mask.

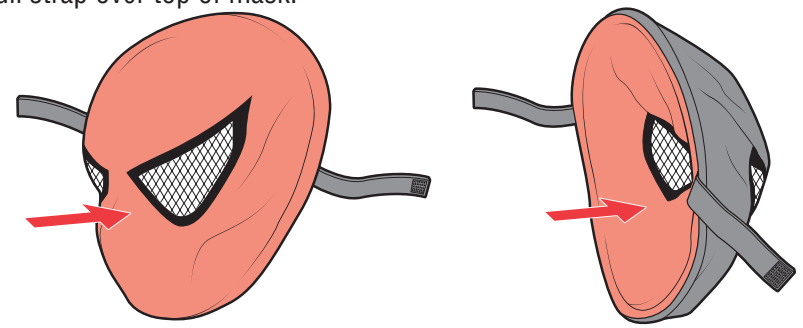


### Web Blaster Assembly & Use:


**1** Rotate back part of nozzle (not the gear) until the D shaped opening in the nozzle shows red dot on can. Shake can well.

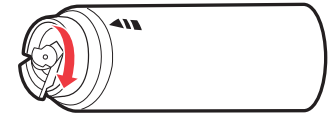


**2** Push Lock Button in and pull out Rear Clamp.

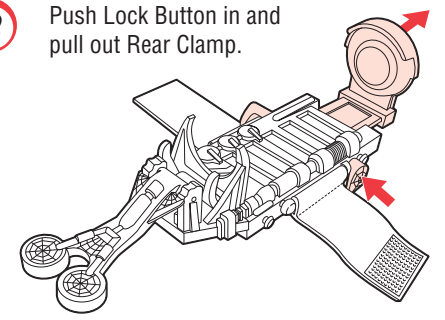


**3** Load can into Blaster Housing with nozzle tab facing down. Make sure silver collar is in front of Holding Clip.

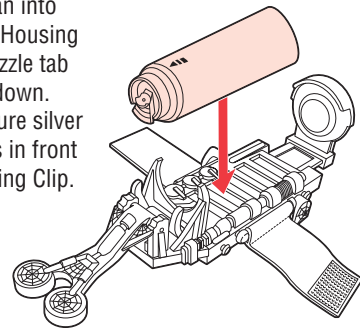

**4** Push in Rear Clamp and push Lock Button.

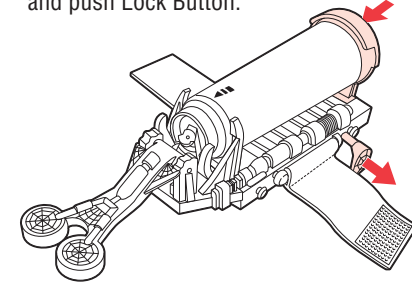


**5** Place Web Blaster on forearm and fasten touch fastener straps. Use middle fingers to press down on trigger to shoot web.

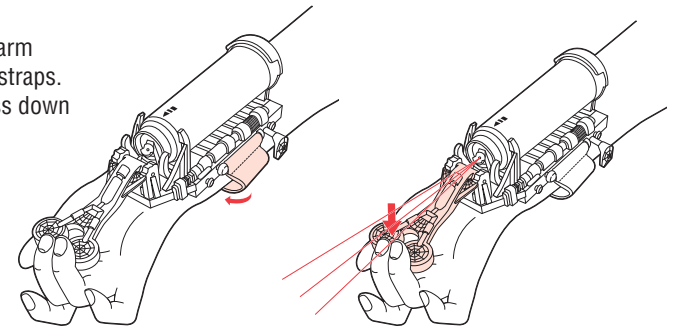


**Note:** Clear nozzle of any excess string for best performance. For best results aim slightly upwards.

**Dart Blaster Assembly & Use:**


**1** Push Lock Button in and pull out Rear Clamp.

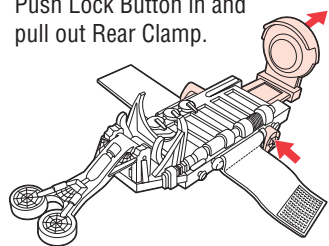


**2** Load Launcher into Blaster Housing. Snap front ring on Launcher into Holding Clip.

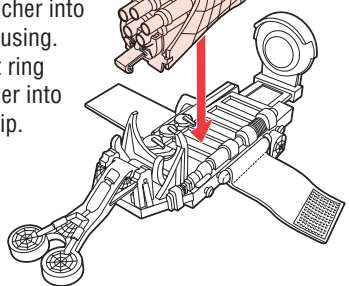


**3** Push in Rear Clamp and push Lock Button.

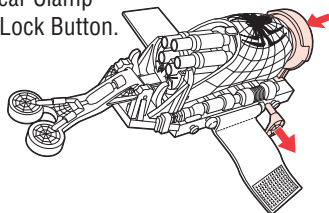

**4** Load 5 Web Darts into Web Dart Launcher.

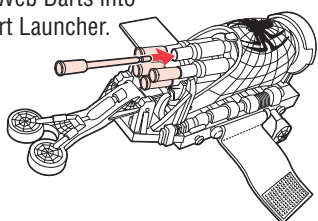

**5** Place Web Blaster on forearm and fasten touch fastener straps. Use middle fingers to press down on trigger to shoot darts.

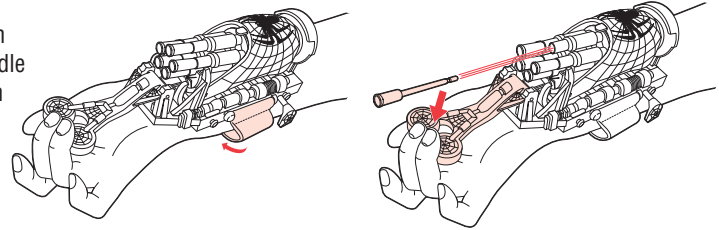

**! WARNING:** Contents Under Pressure.  
 Do Not Puncture Or Incinerate.  
 Do Not Expose to Heat or Store at Temperatures above 120° Degrees F / 48 Degrees C.

- Do Not Spray on Open Flame or Any Hot Stoves or Light Bulbs.
- Do Not Leave in Direct Sunlight or Store in a Hot Vehicle.
- Heat Can Cause Can to Burst Violently.
- Do Not Spray in Eyes or Face.
- Do Not Ingest String.

Shake well before using.  
 Can should be used in a horizontal position.


Adult Supervision Required.  
 Non-Toxic.  
 Non-Flammable.  
 Not Recommended for Indoor Use.

**! CAUTION:** Do not spray on walls, floors, clothing, furniture or vinyl as string may stain certain types of surfaces and fabrics.  
**USE ONLY AS DIRECTED.**


Ingredients: Water HFC 134a (propellant), Acrylic Resin, Hydrocarbon solvents, Light oil, Pigment.

**Launching Stretchy Webs**


**1** Webs hang on belt clip.

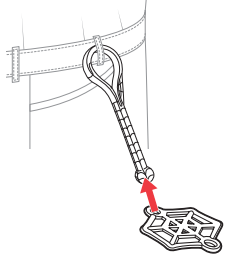


**2** To launch webs, attach Dart Blaster to Blaster Housing as shown above.

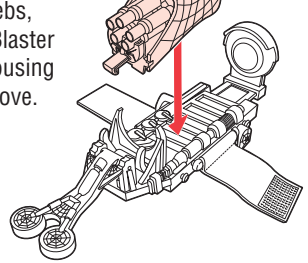


**3** Hook loop on end of web onto hook on Dart Blaster.

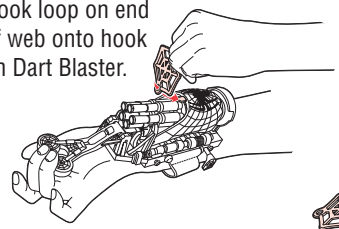

**4** Using tab on Web, pull back as far as you can.

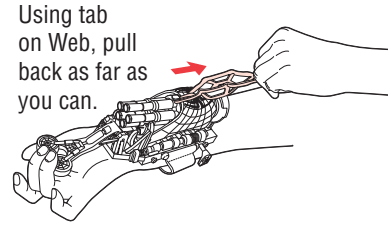

**5** Release to launch!

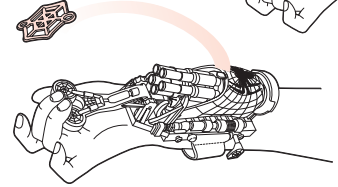


Product and colors may vary.  
 Spider-Man and all related characters and the distinctive likeness thereof:  
 TM & © 2007 Marvel Characters, Inc.  
 Spider-Man 3, the Movie: TM & © 2007 Columbia Pictures Industries, Inc. All rights reserved.  
 ®\* and/or TM\* & © 2006 Hasbro. All Rights Reserved.  
 TM & ® denote U.S. Trademarks.  
 Hasbro Canada, Longueuil, QC, Canada J4G 1G2

**P/N: 664840000**