



Not suitable for children
under 3 years because of
small parts — choking hazard.



MARVEL and all related character names and the distinctive likenesses thereof:
TM & © 2007 Marvel Characters, Inc. All rights reserved. This action figure is
produced under license from Marvel Characters, Inc.

www.marvel.com

®* and/or TM* & © 2007 Hasbro. All Rights Reserved.

TM & © denote U.S. Trademarks.

P/N: 6747830000

SPIDER-MAN™

AGES 5+
69379/69366 Asst.


**TRIPLE
FLINGER**



CAUTION: Do not aim at eyes or face.

TO AVOID INJURY: Use only webs designed for this
product. Do not modify webs or web blaster.


Thanks for purchasing the SPIDER-MAN® Triple Flinger.
Please read and retain these instructions.

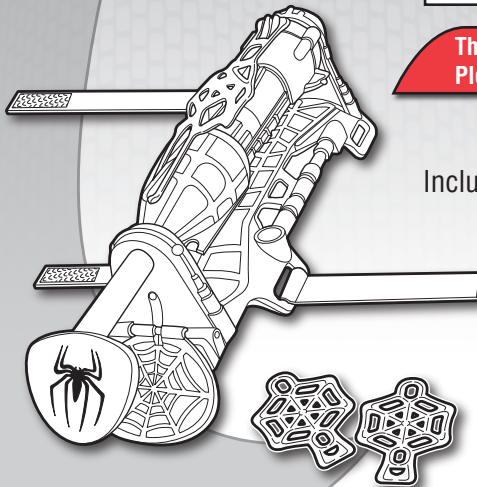


Includes: Web Flinger and 3 Webs

Triple Flinger Assembly & Use:


1 Hook front of Web onto flinger as shown.

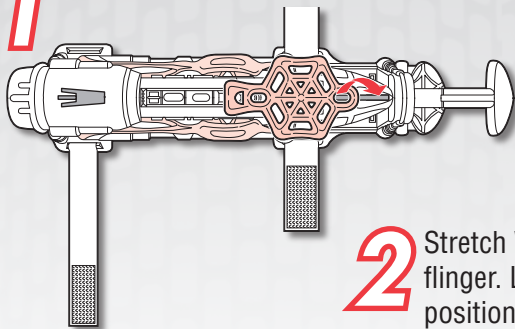


2 Stretch Web and hook other end onto flinger. Load three webs onto the three positions on the launcher.

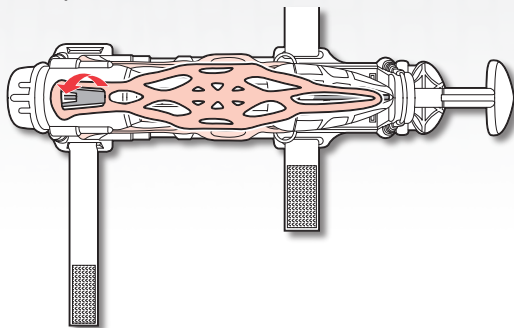

3 Place flinger on forearm and fasten touch fastener straps.

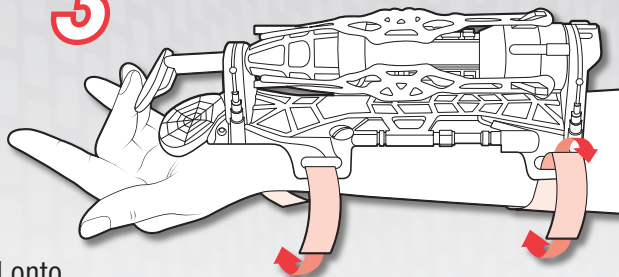

4 Press trigger with index finger to fire.

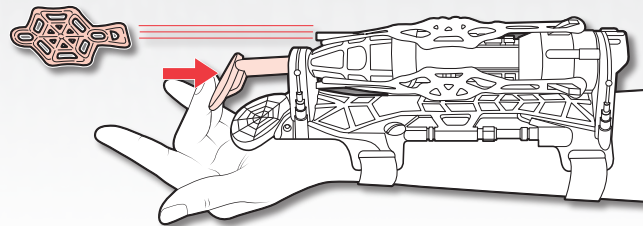

Note: Do not leave webs stretched or loaded on blaster when not playing.