




WARNING:

CHOKING HAZARD-Small parts.
Not for children under 3 years.

FOR AGES **5+**

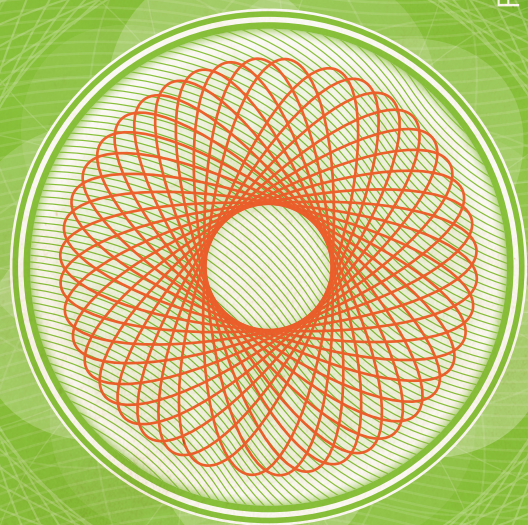

Spirograph®

SPIROGRAPH PLAYSET CONTAINS MAGNETS.

CONTENTS:


Magnetic tablet, 3 frames, 7 gears and 3 magnets.

HAVE HANDY:


Paper and pens (not included). Roller-ball pens work best.

INSTRUCTIONS:


- 1** Place a sheet of paper on the magnetic tablet.

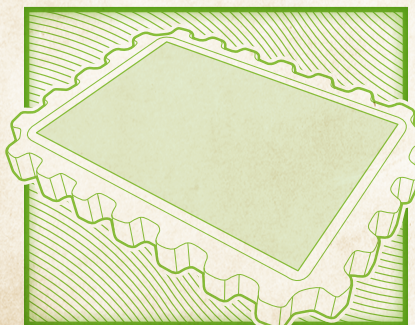


- 2** Place a frame on the sheet of paper with the teeth facing down.

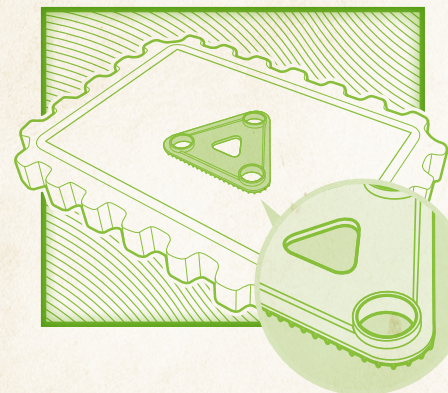

- 3** Put magnets into the holes on the frame to hold it in place.


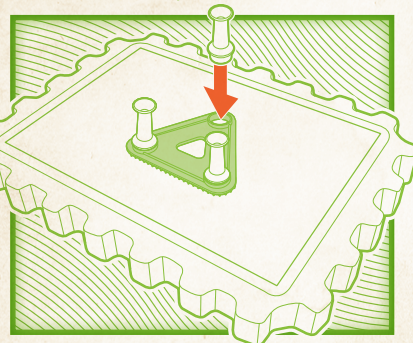


- 4** Place your gear in or around the frame.

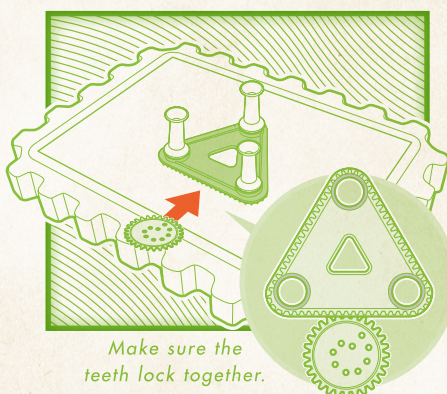

Make sure the
teeth lock together.

- 5** Put the tip of your pen into one of the holes in the gear. Hold it upright and start creating! Always make sure the teeth are locked together as you move the pen around.

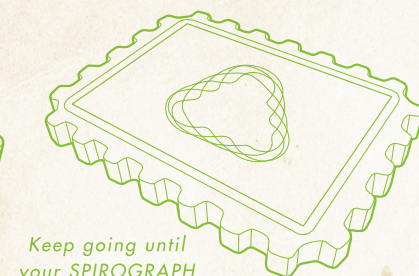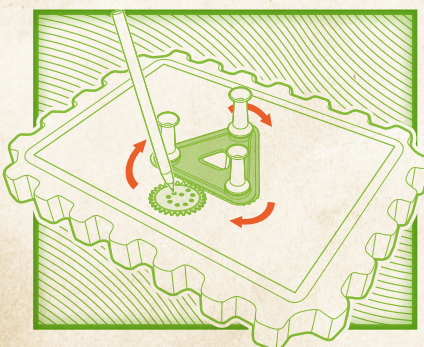


Keep going until
your SPIROGRAPH
pattern is complete.

STORAGE:

All of your equipment can be stored in the back of the tablet. Clip the gears into their numbered spaces and the frames into their lettered spaces. Place the magnets anywhere on the tablet.

To remove a frame, just release the tab

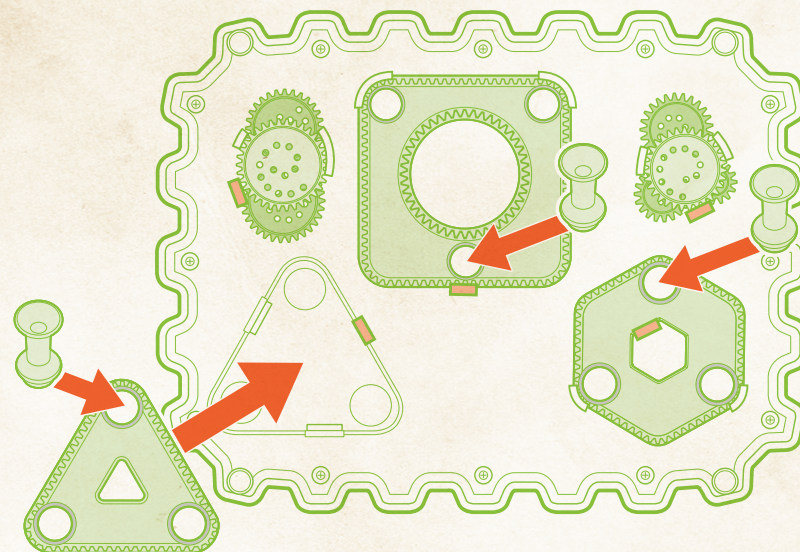

Questions? Call: 1-800-327-8264
Product and colors may vary.
© 2010 Hasbro. All Rights Reserved.
TM and ® denote U.S. Trademarks

PN: 7145240000

