

IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.




Product and colors may vary.
© 2011 Lucasfilm Ltd. & © or TM where indicated. All rights reserved.
®* and/or TM* & © 2010 Hasbro. All Rights Reserved.
TM & © denote U.S. trademarks. PN# 7162490000

STAR WARS
THE CLONE WARS™

AGES 5+
29748/29746 Asst.

GENERAL GRIEVOUS™
ELECTRONIC HELMET

INCLUDES:

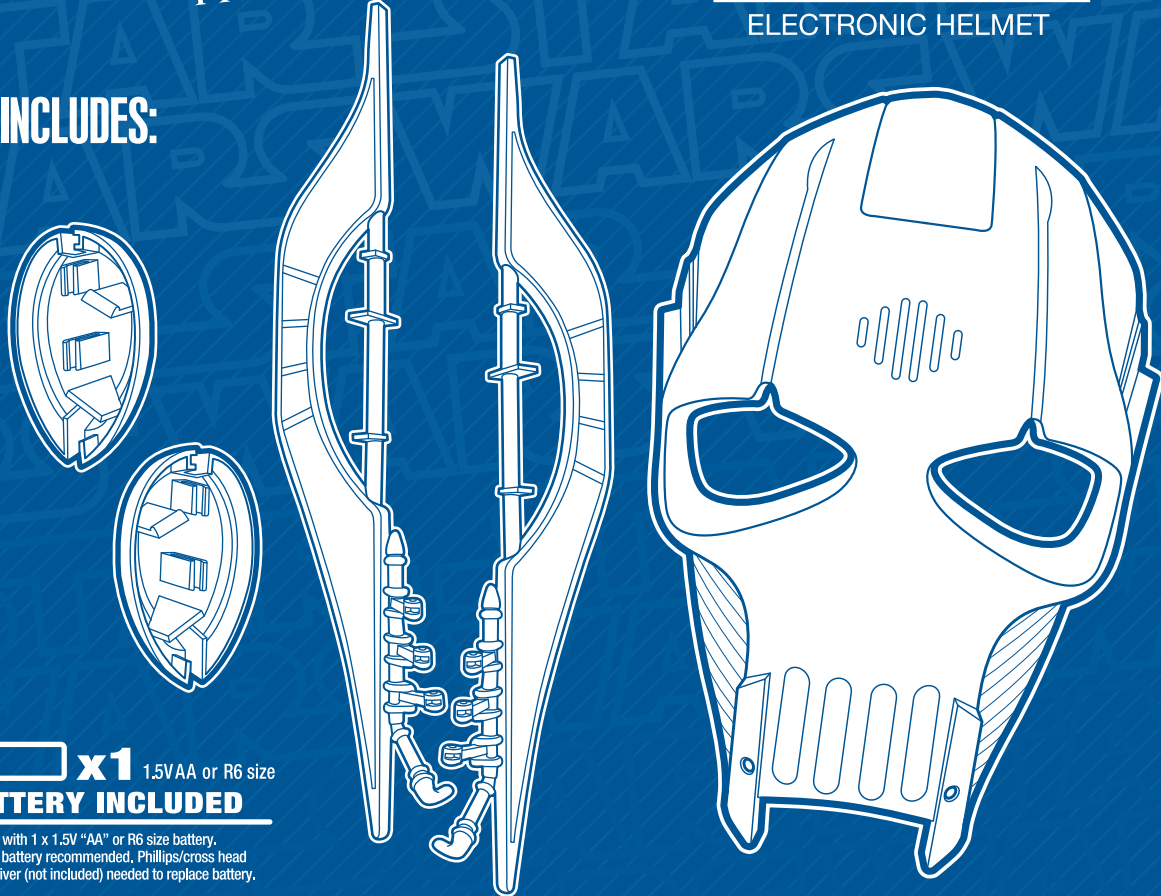


 **x1** 1.5V AA or R6 size
BATTERY INCLUDED

Replace with 1 x 1.5V "AA" or R6 size battery.
Alkaline battery recommended, Phillips/cross head
screwdriver (not included) needed to replace battery.


ASSEMBLY:

Attach wings as shown.

1

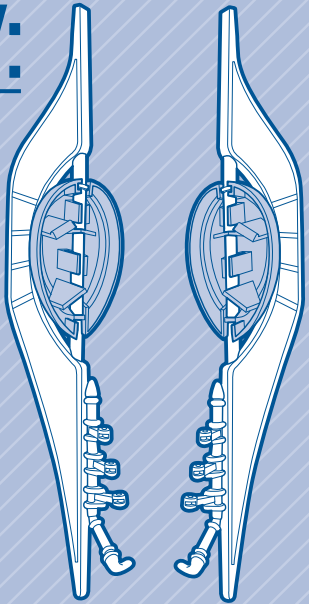


2

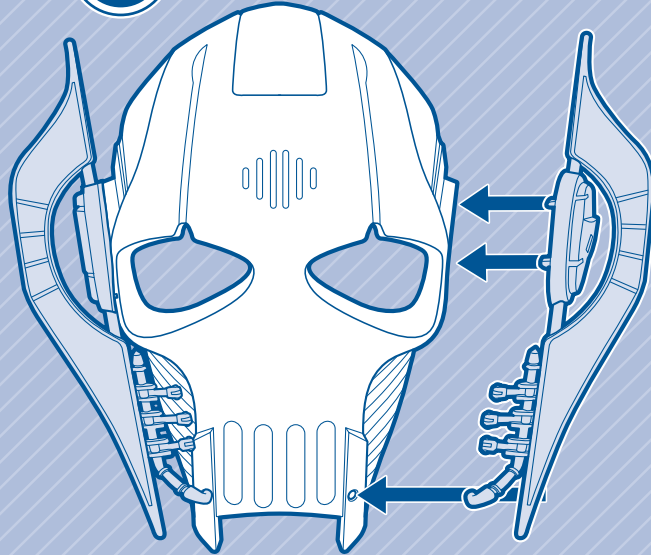

ADJUSTING THE HELMET:


1

Fit horizontal elastic strap around child's head.

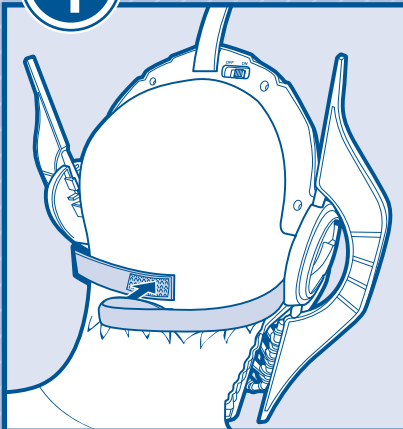


2

Adjust vertical strap so child can see through eyeholes.

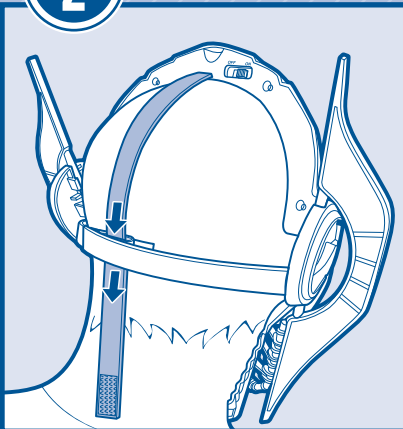

3

Attach vertical strap to fasten straps in place.

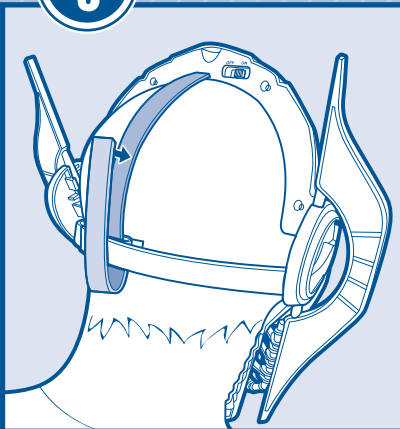


PLAY:

PHRASES BUTTON:

Press button on helmet to hear phrases.

The phrases are:

"Goodbye, Jedi."
"I wield great power, Jedi fool."
"I will deal with the Jedi myself."
"Jedi are so predictable."
"Wipe them out. We can't let a few puny clones stop us."
[Also laughter, roar and growl sounds.]

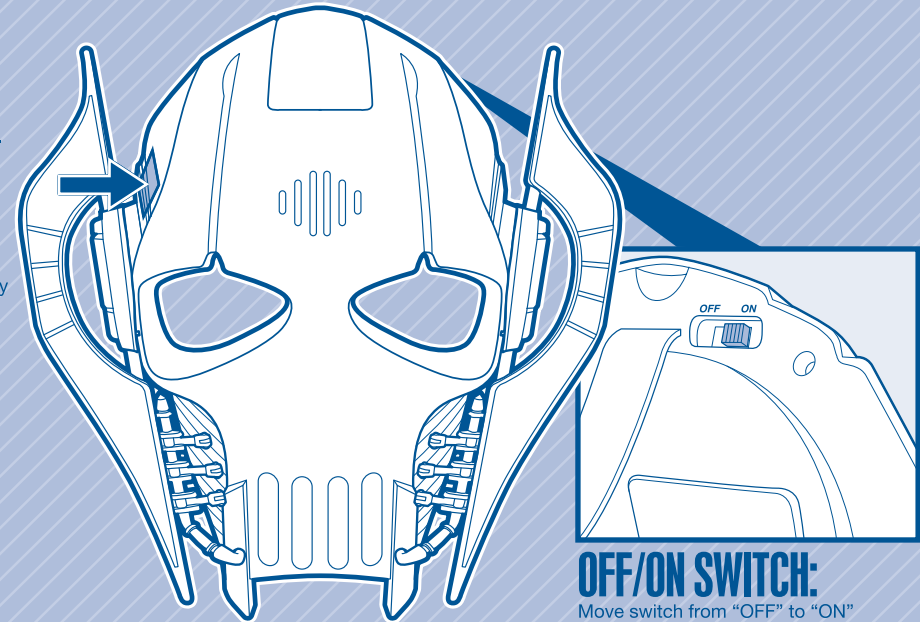


OFF/ON SWITCH:

Move switch from "OFF" to "ON" position. When helmet is not in use, slide switch to "OFF" to help conserve battery life.


TO REPLACE BATTERY:

Remove cover. Loosen screw in battery compartment door with a Phillips/cross head screwdriver (not included). Remove door. Remove and discard battery. Insert 1 x 1.5V "AA" or R6 size battery. Alkaline battery recommended. Replace door, and tighten screw. Replace cover.

1

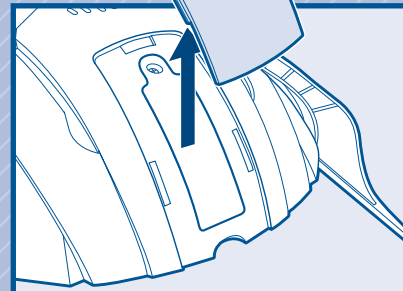

2

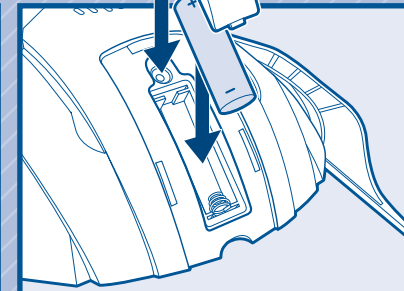

3

