



WARNING:

CHOKING HAZARD-Small parts.
Not for children under 3 years.

Ages 4 and Up

27645/26142


REBEL ARMORED

SNOWSPEEDER


ASSEMBLY:


Includes vehicle, firing launchers, non-firing weapons, projectiles and instructions.

Includes 2 firing and 2 non-firing cannons. They are interchangeable and press-fit onto the vehicle.

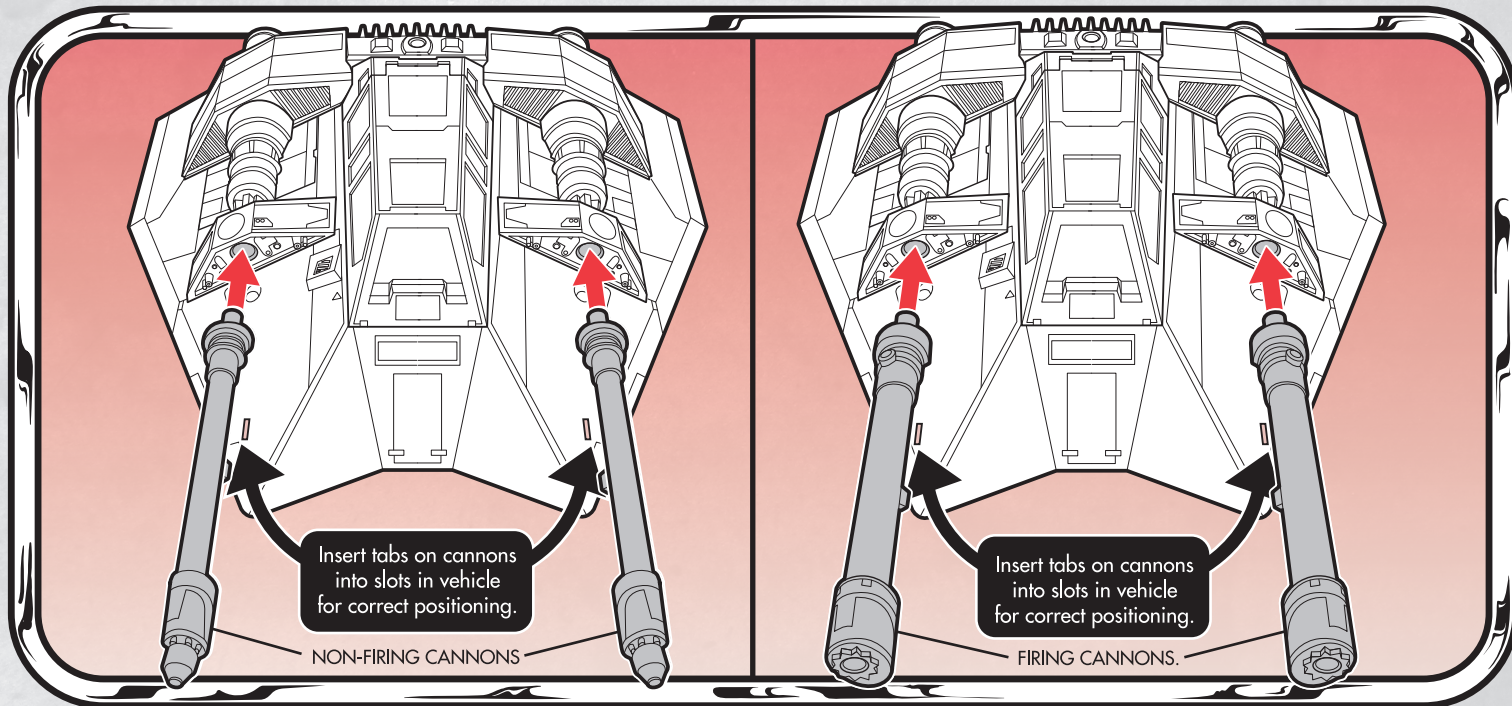


Includes one firing and one non-firing harpoon gun. They are interchangeable and press-fit onto the vehicle.

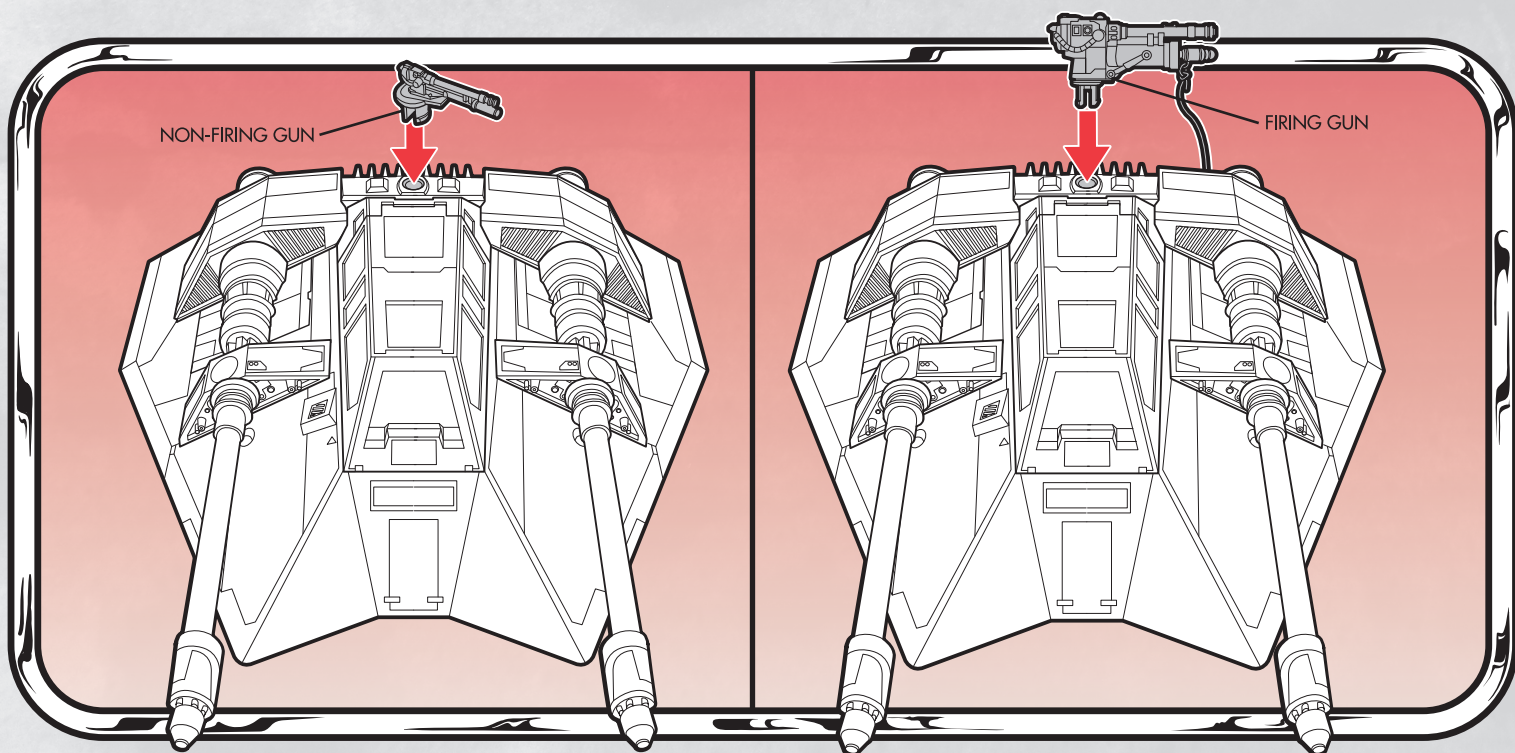

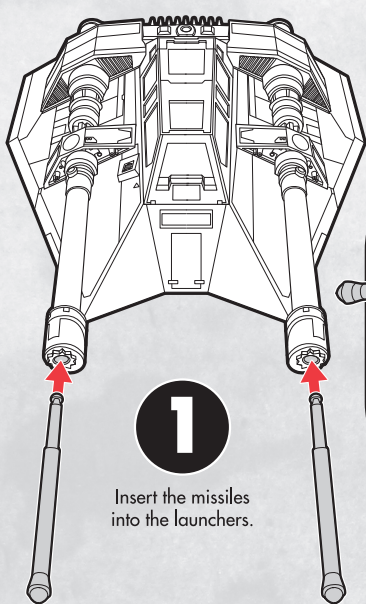


1
Insert the missiles into the launchers.

TO LOAD AND FIRE PROJECTILES:

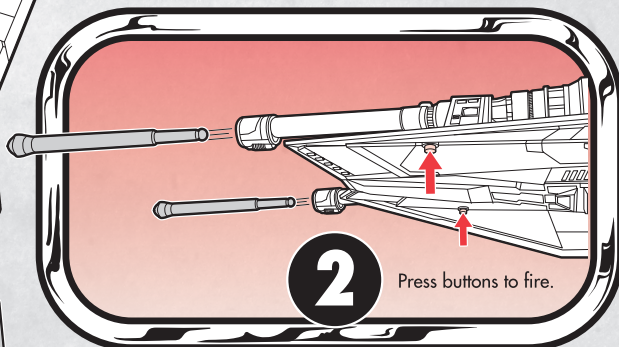

2
Press buttons to fire.


TO LOAD AND FIRE HARPOON:

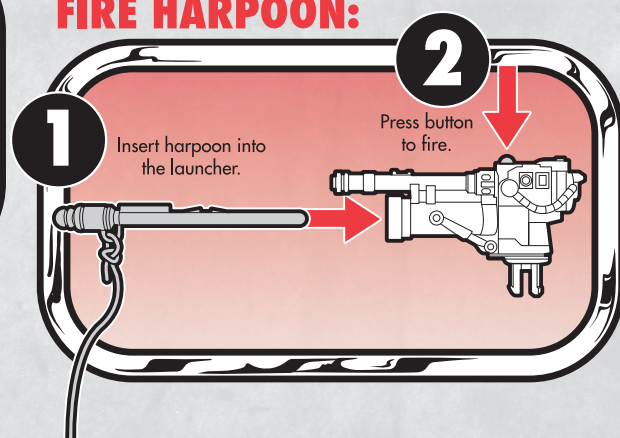

1
Insert harpoon into the launcher.

2
Press button to fire.

TO ATTACH TOW CABLE:

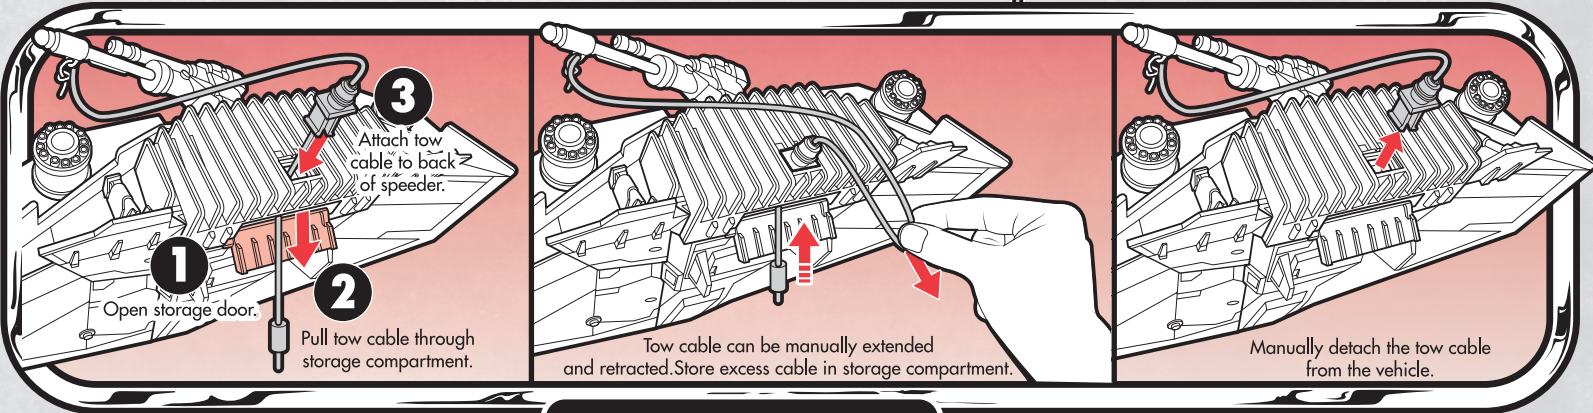

1
Open storage door.

2
Pull tow cable through storage compartment.

3
Attach tow cable to back of speeder.

Tow cable can be manually extended and retracted. Store excess cable in storage compartment.

Manually detach the tow cable from the vehicle.

The cockpit opens and figures can fit inside.
(Figures sold separately.)


Manually open and close the air brakes.

Manually open and close the air brakes.

Remove converter to access repair access panel.

Manually lower and retract the landing skid.

PEEL AND APPLY LABELS:

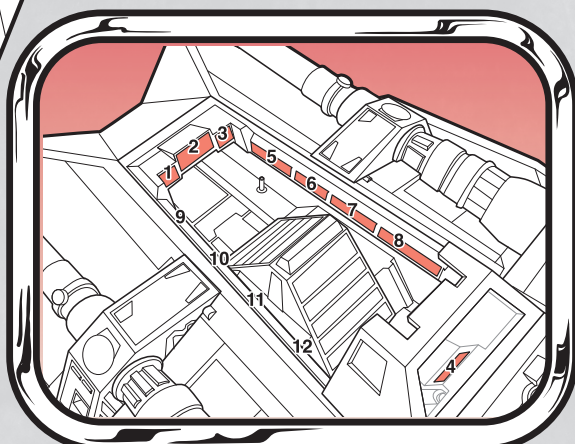

The storage area in the cockpit can hold Luke Skywalker's grappling hook.
(Figure and hook sold separately.)



Product and colors may vary.
© 2010 Lucasfilm Ltd. & ® or TM where indicated. All rights reserved.
®* and/or TM* & © 2010 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks. PN: 7079790000



Not suitable for children under 3 years because of small parts — choking hazard.