

# STAR WARS®

## Galactic Heroes

STAR WARS

THE EMPIRE STRIKES BACK™

**ADULT  
ASSEMBLY  
REQUIRED**

**AGES 3+**  
91622/89692 Asst.



**WARNING:**

CHOKING HAZARD—Small parts.  
Not for children under 3 years.

 **x2** 1.5V AA/R6 size  
**NOT INCLUDED**  
**BATTERIES REQUIRED**



Alkaline batteries recommended.  
Phillips/cross head screwdriver (not  
included) needed to insert batteries.

**AT-AT WALKER™**

### ASSEMBLY

Attach legs and  
cannons as shown.

**NOTE:** Legs  
and hips are  
numbered for  
easy assembly.

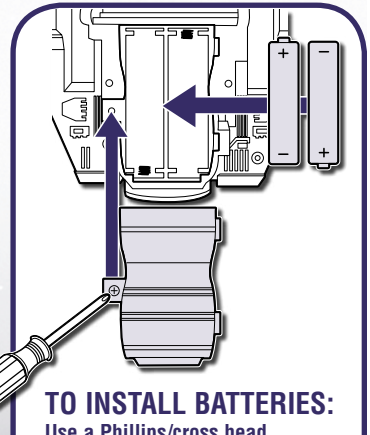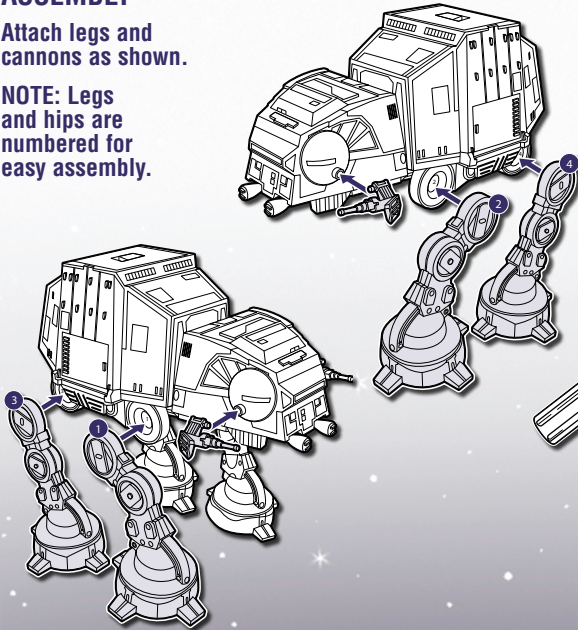

### TO INSTALL BATTERIES:

Use a Phillips/cross head  
screwdriver (not included)  
to loosen screw in battery  
compartment cover (screw  
remains attached to cover).  
Remove cover. Insert 2 x 1.5V  
“AA” or R6 size batteries. Alkaline  
batteries recommended. Replace  
cover and tighten screw.

### IMPORTANT: BATTERY INFORMATION




### CAUTION:


1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

## OPERATION


Press and release button to activate lights and weapon sounds. Press and hold button to activate walking sounds.

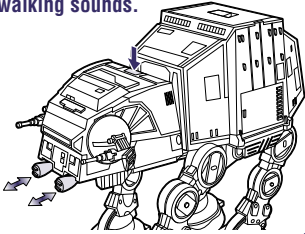

Cockpit opens.

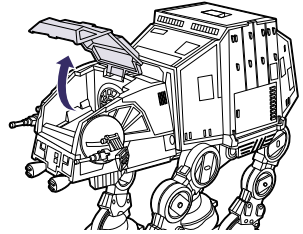


Side door opens. Speeder bike can be attached to door for transport.

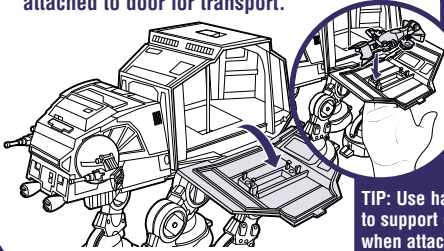


**TIP:** Use hand to support door when attaching speeder.

Trap door opens.

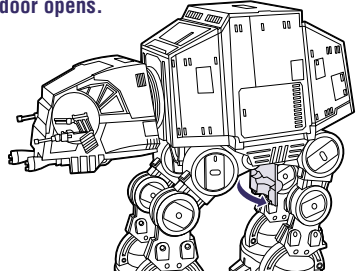


Zipline can be attached inside vehicle and be used to manually pull a figure up into the vehicle.

To attach figure to zipline:

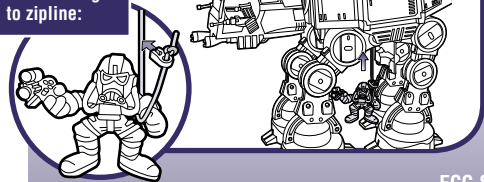

Legs are poseable.

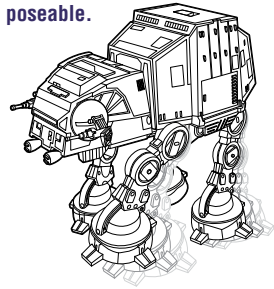

### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Some poses may require additional support. Product and colors may vary.

© 2009 Lucasfilm Ltd. & © or TM where indicated. All rights reserved.

®\* and/or TM\* & © 2009 Hasbro. All Rights Reserved.

TM & © denote U.S. Trademarks



**Not suitable for children under 3 years because of small parts — choking hazard.**

P/N 6938940001