

STAR WARS

THE FORCE UNLEASHED LIGHTSABER™

AGES 4+

 
87436

 **x3** 1.5VAA/R6 size
NOT INCLUDED
BATTERIES REQUIRED

Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to insert batteries.


TO REPLACE BATTERIES:

Using a Phillips/cross head screwdriver (not included), loosen screw in battery compartment door (screw remains attached to door). Remove door. Insert 3 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace door and tighten screw.




Press button to activate sounds and light. Light will be green when spikes are closed.

 
Flick wrist to extend blade.



 Press button to reveal Sith spikes. Blade color will change to red when spikes are extended.



 Note: Color-changing feature works at optimal efficiency only when spikes are functioning normally.

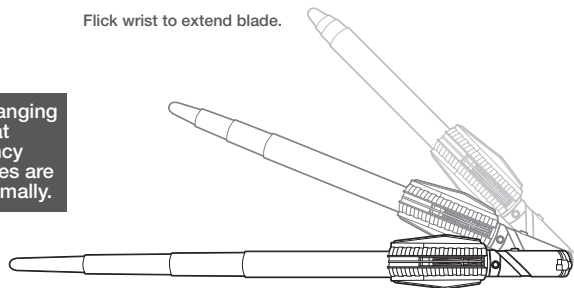

Note: If during play the spikes become out of alignment, the spring-open feature will not work properly. To reset the feature:

1. Manually adjust all the spikes so that they are all in the fully open position.
2. Manually close the spikes (moving one spike will cause all to move at the same time).
3. Press the button; the spikes should open again with their normal function.

P/N 6844080000



Product and colors may vary.
© 2007 Lucasfilm Ltd. & © or TM where indicated. All rights reserved.
®* and/or TM* & © 2007 Hasbro, Pawtucket, RI 02862 USA. All Rights Reserved.
* TM & © denote U.S. trademarks.



Not suitable for children under 3 years because of small parts — choking hazard.



CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions.
2. Do not mix old batteries and new batteries or alkaline, standard (carbon zinc) or rechargeable (nickel-cadmium) batteries.
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.



CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.