
DEFEATING THE DROID:


There are two ways to defeat the Tri-Droid:



Hit the paddles on the target ring to make it turn several times within a short period to disable the droid.

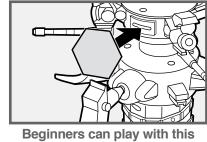

target button attached. Remove it for a tougher challenge!

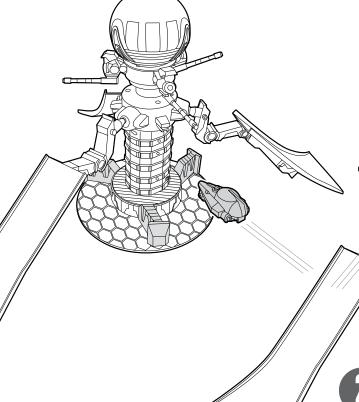


Time your launch to race up the ramp and strike the weak point under the droid's head. It takes serious Jedi skills to do this, so keep practicing!

LOADING AND LAUNCH

 Vehicles work best on a smooth, flat surface. These vehicles are for use only on the floor.







This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



separatelyat yourlocal waste recyclingcentre Donotdisposeof in your householdwaste bin.



NOTE TOUK CONSUMERSThis productand its batteries must be disposed of

Launcher must be on a flat surface to function.



© 2010 Lucasfilm Ltd. & ® or TM where indicated. M & ® denote U.S. Trademarks PN: 7082440000



Not suitable for children under 3 years because of small parts — choking hazard.





Be sure rip cord rests on launcher as shown.





TRI-DROID ATTACK SET



ALKALINE BATTERIES NOT INCLUDED REQUIRED

Phillips/cross head screwdriver (not included) needed to insert batteries.

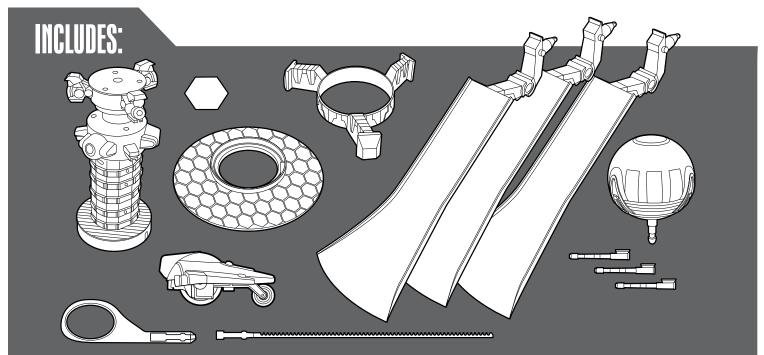

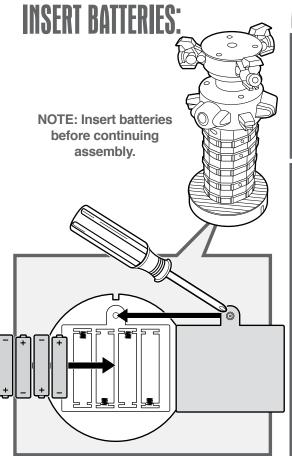

Using a Phillips/cross head screwdriver (not included), unscrew battery cover. Insert 4 fresh 1.5 V AA or LR6 size alkaline batteries. Replace battery cover and tighten screw.

ASSEMBLY: 1

IMPORTANT: BATTERY INFORMATION

CAUTION:

- 1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and polarity markings.
- 2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
- 3. Remove exhausted or dead batteries from the product.
- 4. Remove batteries if product is not to be played with for a long time.
- 5. Do not short-circuit the supply terminals.
- 6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
- 7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

