

STAR WARS

THE CLONE WARS™


AGES 6+

96795/96794 Asst.


General Grievous™ ELECTRONIC DOUBLE LIGHTSABER

INCLUDES


Lightsaber

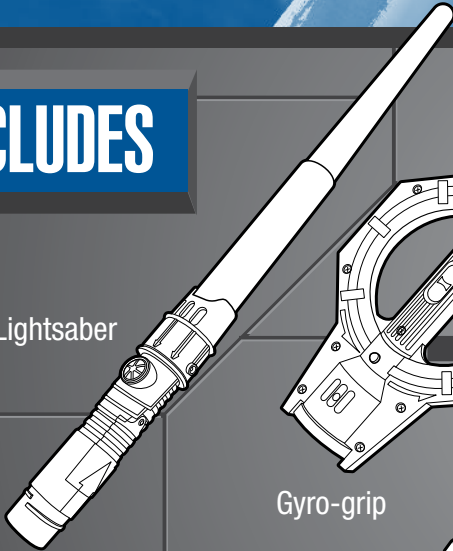

Gyro-grip


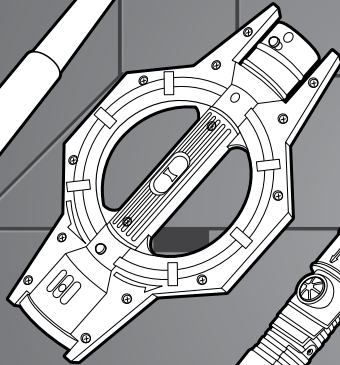


Lightsaber

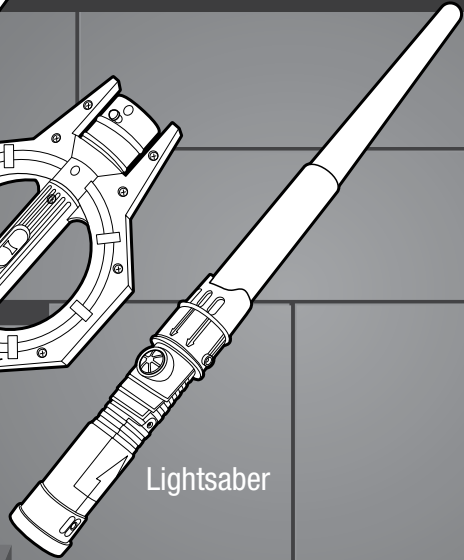


TO INSERT BATTERIES

Using a Phillips/cross head screwdriver (not included), loosen screws in battery compartment doors in each lightsaber (screws remain attached to doors). Remove doors. Insert 3 x 1.5V "AAA" or R03 size batteries in each lightsaber. Alkaline batteries recommended. Replace doors and tighten screws.

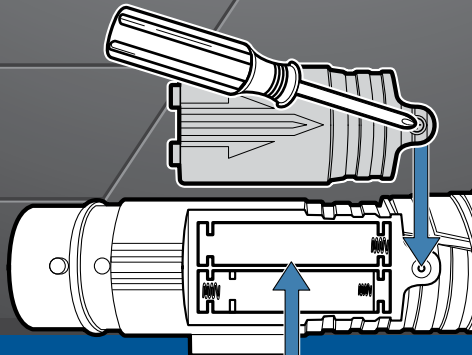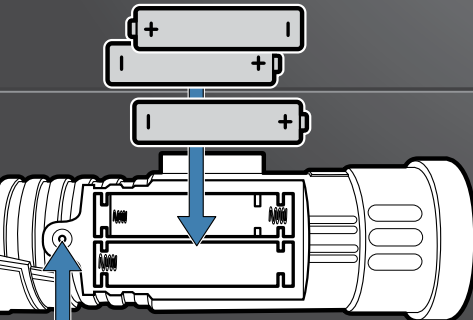

x6 1.5V AAA or R03 size
NOT INCLUDED
BATTERIES REQUIRED

Alkaline batteries recommended. Phillips/cross head screwdriver (not included) needed to insert batteries.

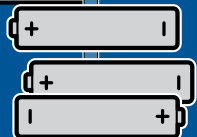


IMPORTANT: BATTERY INFORMATION

⚠ CAUTION:

1. As with all small batteries, the batteries used with this toy should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone (202) 625-3333 collect. If you reside outside the United States, have the doctor call your local poison control center.
2. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
3. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
4. Remove exhausted or dead batteries from the product.
5. Remove batteries if product is not to be played with for a long time.
6. Do not short-circuit the supply terminals.
7. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
8. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**



ASSEMBLY

Double-bladed spinning lightsaber

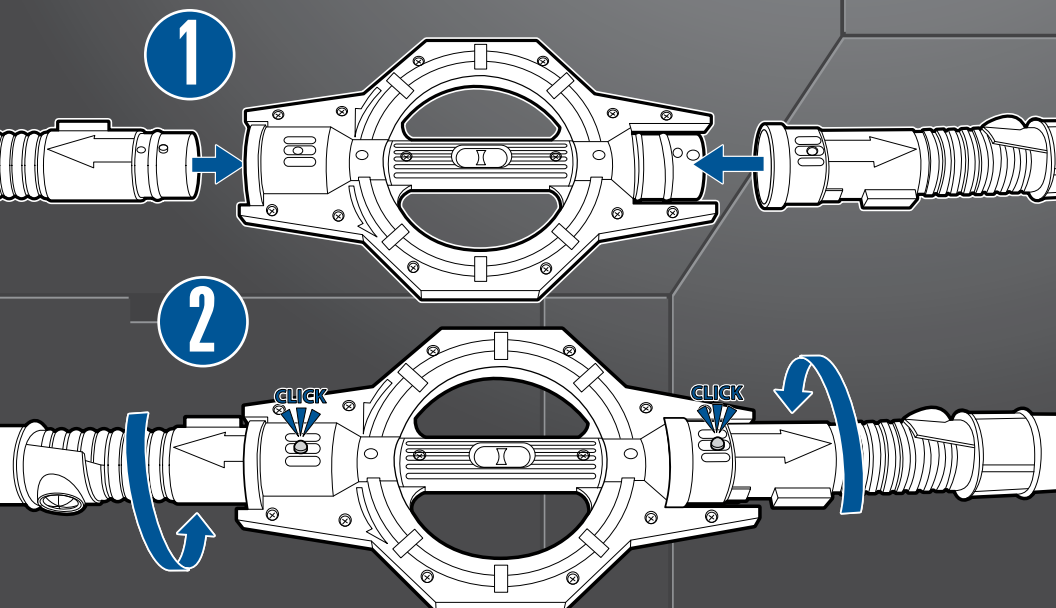


ASSEMBLY

Double-bladed lightsaber

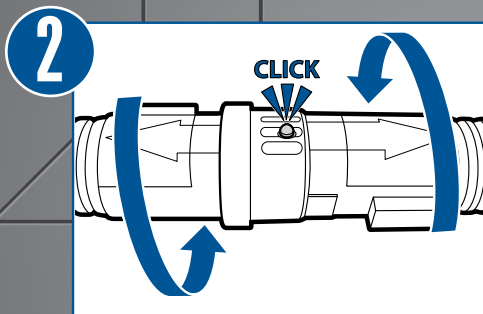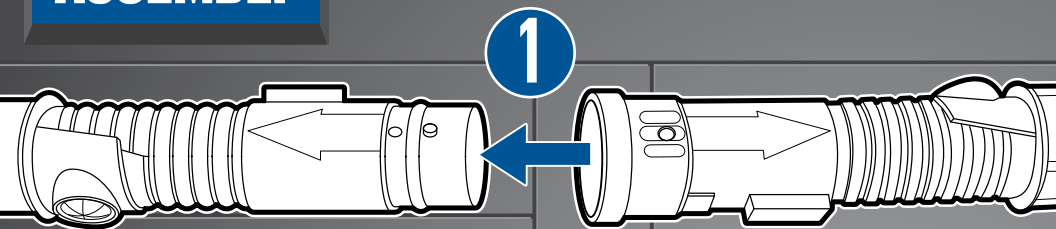


DETACH

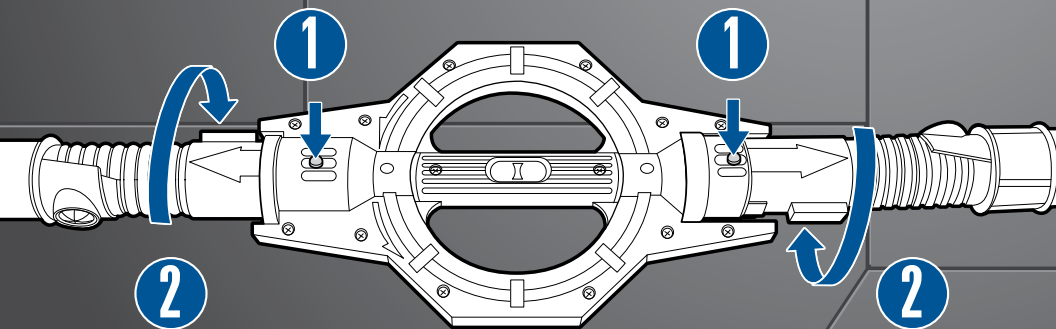


LIGHT-UP BLADE:

- Blades automatically light up when spun or connected.
- Press button to activate light or deactivate light when not in use.

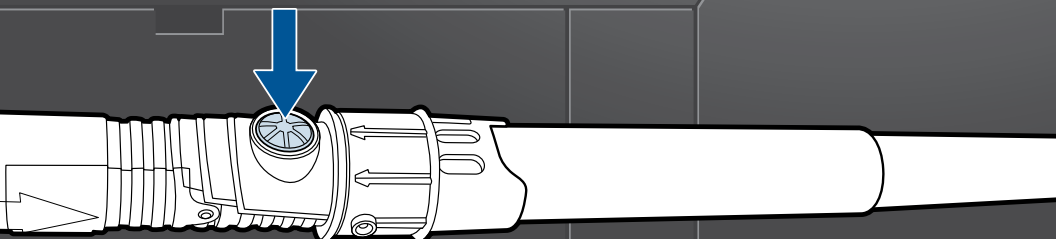


- Lightsabers automatically shut down after approximately 30 seconds of inactivity.

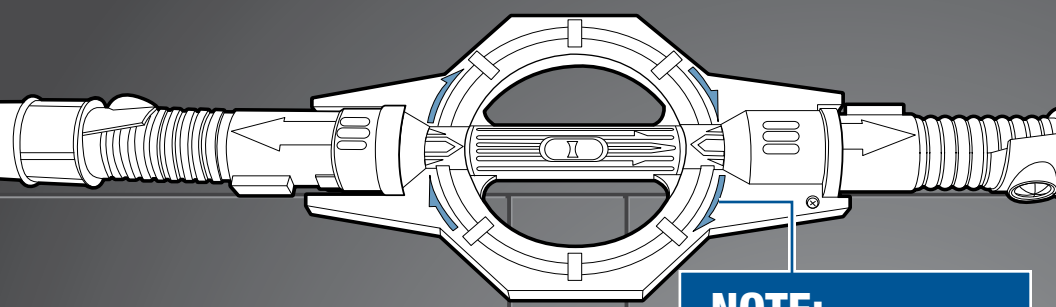


NOTE: Blades will spin only in direction of arrows marked on gyro-grip.

LOCKING MECHANISM

To lock gyro-grip (will not spin): Align bar with arrows. Slide switch to locked position.

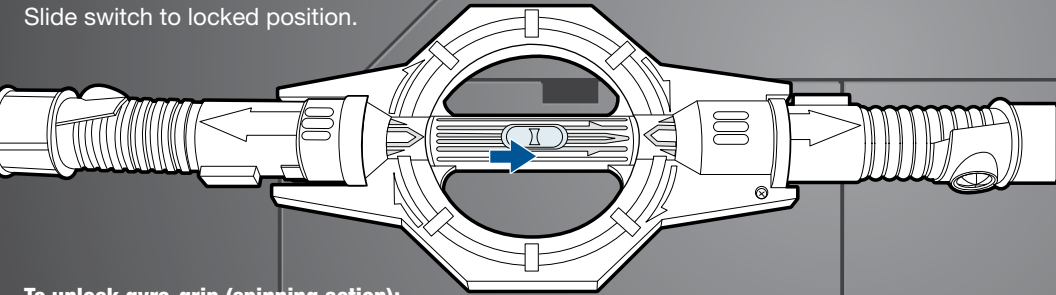

To unlock gyro-grip (spinning action): Slide switch to unlocked position.

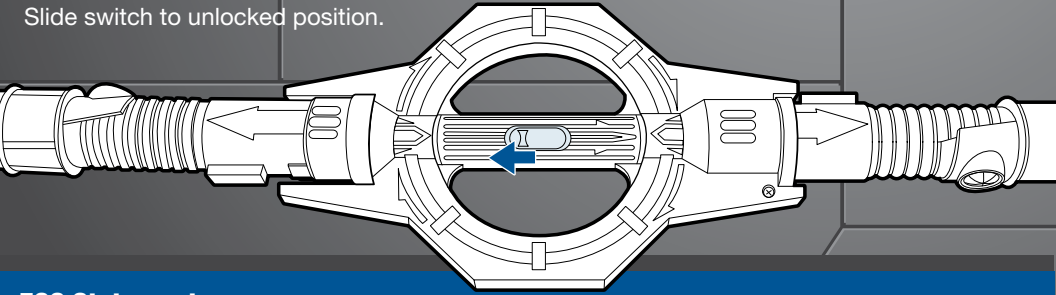

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



Product and colors may vary.
© 2010 Lucasfilm Ltd. & © or TM where indicated.
All rights reserved.
®* and/or TM* & © 2009 Hasbro. All Rights Reserved.
TM & © denote U.S. Trademarks.



Not suitable for children under 3 years because of small parts — choking hazard.

P/N 702116000