

⚠ CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

⚠ CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert item correctly by matching the + and - polarity markings.
2. Remove exhausted or dead batteries from the product.
3. Remove batteries if product is not to be played with for a long time.
4. Do not short circuit the supply terminals.
5. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
6. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Consult the dealer or an experienced radio/TV technician for help.



Products and colors may vary.
© 2005 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks
U.S. Patent No. 6811461 and Patent Pending.
P/N 6568410000
51396

AGES 3+
51396

TJ Bearytales

PLAYSKOOL

SHARING the GIFT of STORY

Includes T.J. BEARYTALES Bear
and SHARE & TELL™ Storybook



1.5V D/LR20 size

NOT INCLUDED

BATTERIES REQUIRED

Thank you for purchasing this
PLAYSKOOL brand product!

Phillips/cross head screwdriver (not included)
needed to insert batteries.

GETTING STARTED.

Please follow instructions for best results.


NOTE: Insert batteries as per instructions on opposite page.

1. To power your T.J. BEARYTALES toy up, slide the switch at the top of his backpack to LOW for quieter playtime or HIGH for regular volume.
2. Every time you turn T.J. BEARYTALES from OFF to either LOW or HIGH he moves his head and arms into his starting position.

During this time T.J. BEARYTALES' buttons are inactive.

3. Once movement has stopped, press any button to activate T.J. BEARYTALES' built-in story and activity features.
4. For more stories and activity features, insert a T.J. BEARYTALES cartridge (each sold separately) by following the "Inserting a Cartridge" instructions.

BACKPACK CONTROLS:

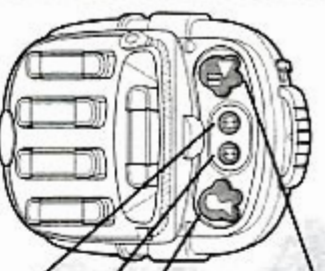

Press to PLAY STORY at any time (or to resume playing after a pause). To PAUSE during play, press again; T.J. BEARYTALES toy will hold your place for about 3 minutes. He will then go into sleep mode and will start the story from the beginning when this button is pressed again.

Press to PLAY SONGS AND ACTIVITIES at any time.

Press to SKIP FORWARD through the story (2 pages at a time) or songs and activities at any time.

Press to SKIP BACK or replay parts of the story or songs and activities at any time.

Press to SKIP BACK or replay parts of the story or songs and activities at any time.

STORY TIME.

Begin by settling in with T.J. BEARYTALES toy and the SHARE & TELL™ storybook. Press the  button to play the story. As you follow along in the book, listen for the page-turn sound cue.

NOTE: Like all good storytellers, T.J. BEARYTALES will keep things interesting by making comments, asking open-ended questions and telling jokes that are not written in the storybook itself!

 
SONGS & ACTIVITIES TIME.

T.J. BEARYTALES toy offers a number of book-related songs and activities that your child can enjoy either alone or with you. Press the  button at any time for story-related songs and activities. Press the  button at any time to switch back to story time.

NOTE: At the back of the book you'll find great parent-directed activities to do with your child!

BATTERY-SAVING FEATURES.

At the end of the story or activities, T.J. BEARYTALES toy will invite you to press a button on his backpack to continue playing with him. If there is no response, he will say "See you later," and power down into battery-saving sleep mode. You can shut him off at any time simply by sliding the power switch at the top of his backpack to OFF.

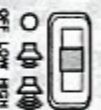

INSERTING A CARTRIDGE.

Power switch needs to be OFF when a cartridge is inserted or removed.

Insert the cartridge into the slot located in the backpack. (Cartridge only fits one way.)

NOTE: T.J. BEARYTALES comes with his own built-in story and activities that you can play if you do not have a cartridge. Look for the full range of T.J. BEARYTALES SHARE & TELL™ books and cartridges. Each book is developed to help teach skills that help get your child ready to learn! (Each sold separately.)



TROUBLESHOOTING.

- If speech or movement becomes slow, or if the product stops functioning, try replacing the batteries with new ones.
- If you do not hear the correct story after inserting a book cartridge, make sure that the cartridge is pushed all the way into the slot.
- If the bear fails to respond properly, slide the power switch to OFF, then back ON.

CLEANING INSTRUCTIONS.

To clean your T.J. BEARYTALES bear, gently brush fur with a cloth or soft brush to loosen any dirt. Then use a slightly damp cloth to remove stains.

- Do not put in the washing machine.
- Do not submerge in water.
- Do not use detergent or stain removers on fur.
- Do not get wet; to remove stains use only a slightly damp cloth on the fur.
- To prevent staining fur, wipe off dirt immediately.
- If toy gets wet, remove batteries and dry the fur; once fur is completely dry, replace batteries.
- Avoid spilling food or beverages on the toy.
- Do not throw or kick the toy, and do not push sharp objects through the speaker openings.
- Do not leave toy in direct sunlight; high temperatures will destroy the mechanism.

TO INSTALL BATTERIES:

Use a Phillips/cross head screwdriver (not included) to loosen two screws in battery compartment door (screws remain attached to door). Insert 4 x 1.5V "D" or LR20 size batteries. Alkaline batteries required. Fit door onto unit. Tighten screws.

