


AGES  
3+

# Tonka<sup>®</sup> CHUCK & FRIENDS<sup>®</sup>

**ADVENTURE RIG**  
WITH CHUCK THE DUMP TRUCK<sup>®</sup>

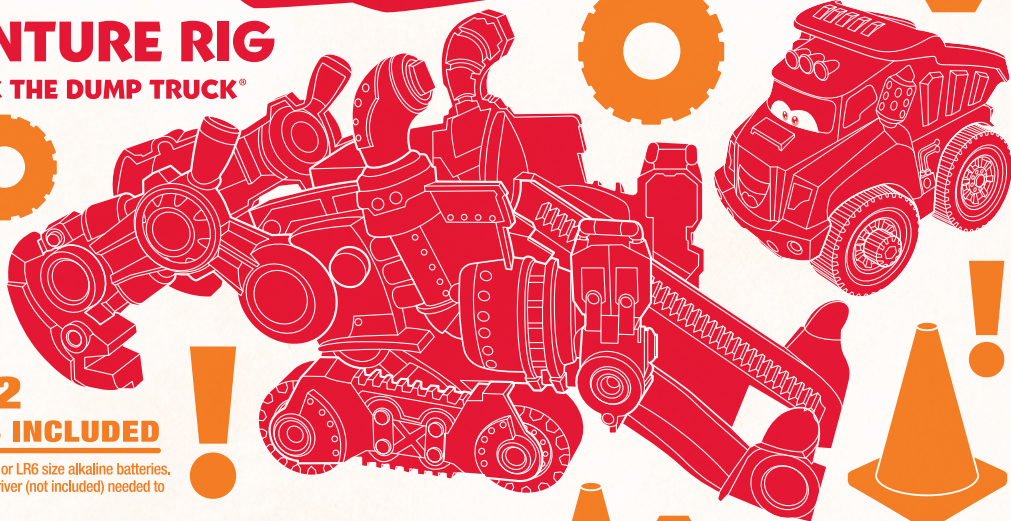

**x2**  
**BATTERIES INCLUDED**

Replace with 2 x 1.5V "AA" or LR6 size alkaline batteries.  
Phillips/cross head screwdriver (not included) needed to  
replace batteries.

**⚠ CAUTION:**





Hair entanglement may result if child's hair comes in contact  
with moving parts of toy. Adult supervision is required.

# IMPORTANT!

Before you begin:  
Flip the switch as  
shown. You only  
need to do this once.

# PLAY:


**NOTE:** For best performance use  
on a hard, smooth surface.

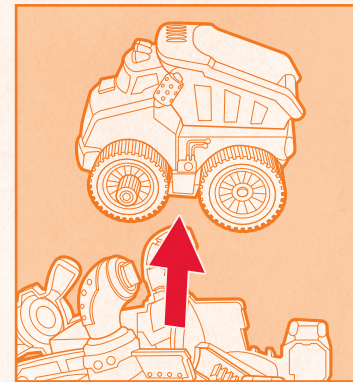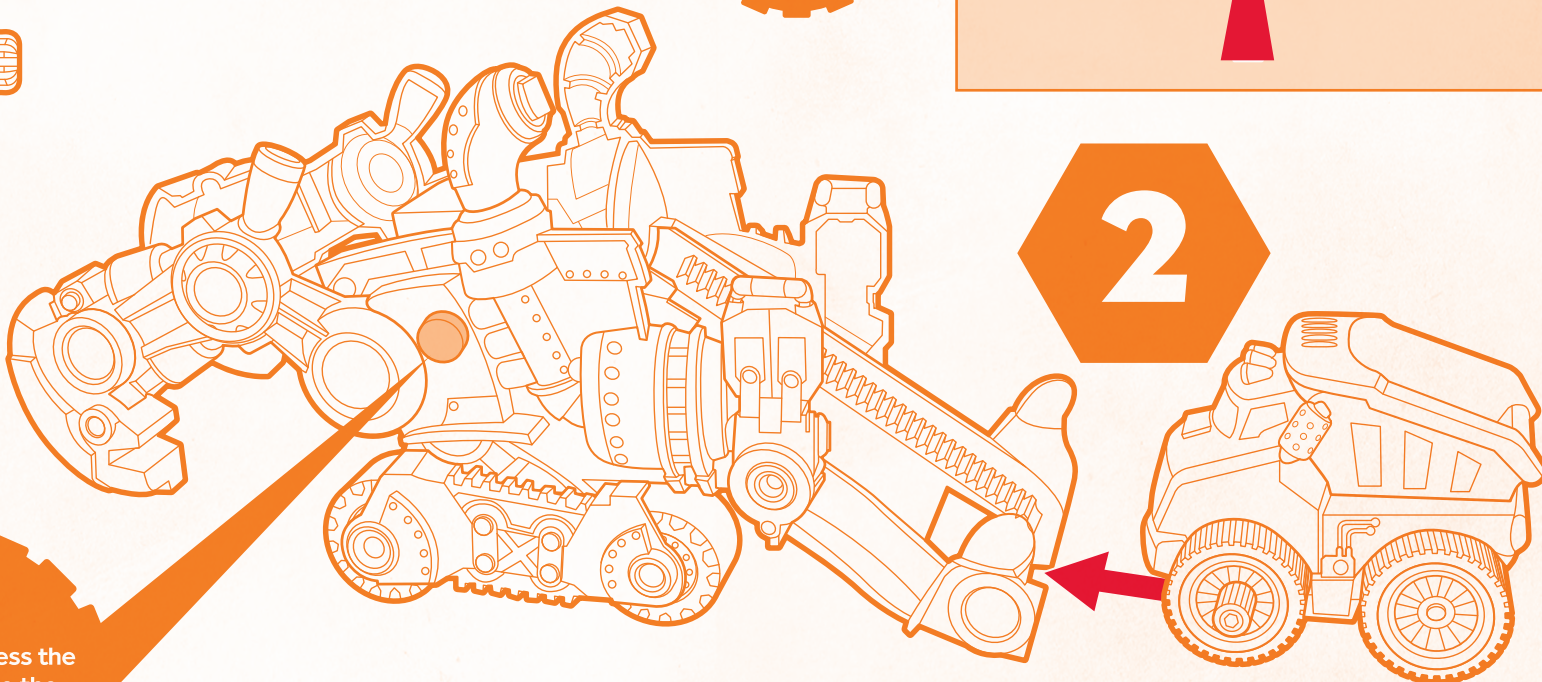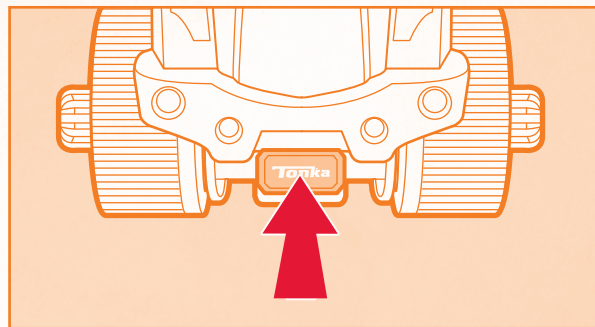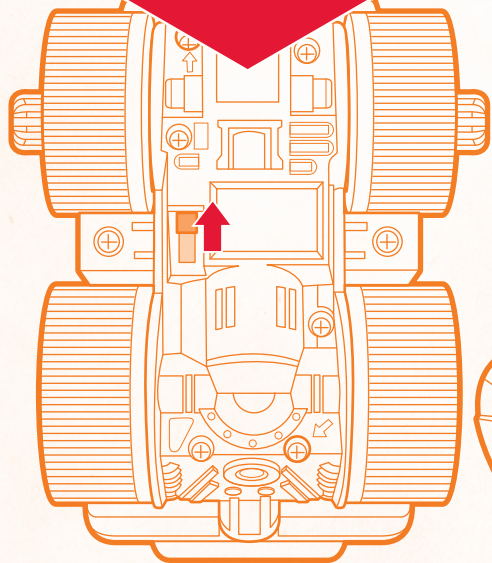

**Tip:** You can press the  
button to make the  
action stop. Press it  
again to restart.

**Tip:** To remove CHUCK from the rig  
lift him straight up.



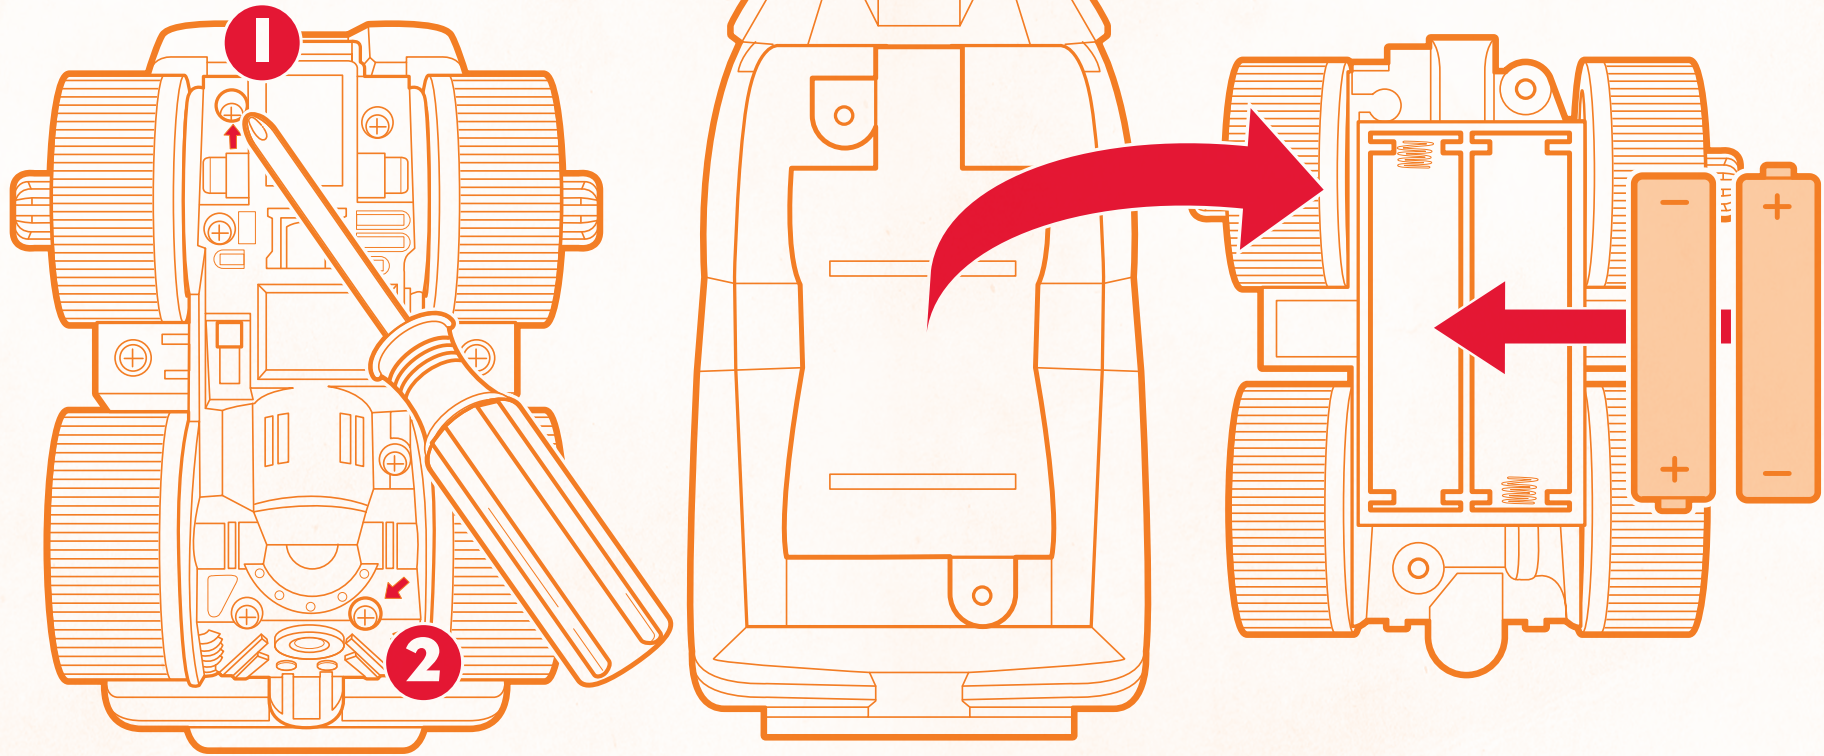

### **TO REPLACE BATTERIES:**

Using a Phillips/cross head screwdriver (not included), loosen screws as shown. Screws will remain attached to undercarriage. Remove and discard old batteries. Insert 2 x 1.5V "AA" or LR6 size alkaline batteries (not included). Replace undercarriage and tighten screws.

## IMPORTANT: BATTERY INFORMATION

### CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and – polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging.  
Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**



Product and colors may vary.  
© 2010 Hasbro. All Rights Reserved.  
TM & ® denote U.S Trademarks.  
PN:



Questions? Call: 1-800-327-8264