

Hasbro

**SPEED
STARS**

 
AGES 3+
18277

TRANSFORMERS

REMOVING PRODUCT FROM PACKAGE

Use a Phillips/cross head screwdriver (not included) to remove the screws from the wheels.
Discard screws before giving toy to child.

**PRESS TO ACTIVATE
SOUNDS AND PHRASES.**

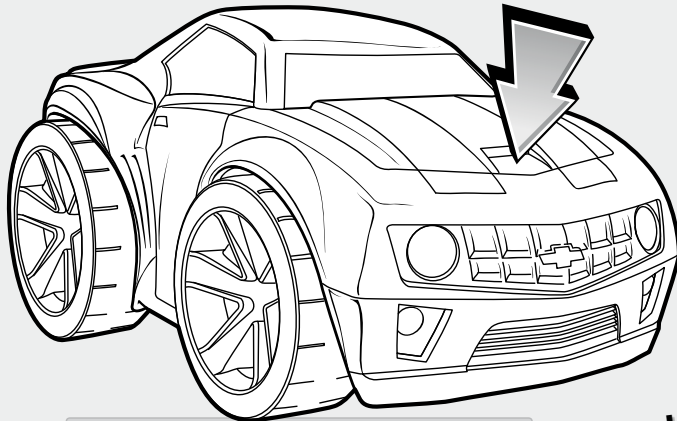


VEHICLE MODE

**SPINNING WHEELS
ACTIVATES SOUNDS.**

**LIFT BY FRONT BUMPER
TO ACTIVATE CONVERSION
SOUNDS AND ENTER
ROBOT MODE.**

 **LOWER WHEELS TO RETURN
TO VEHICLE MODE.**

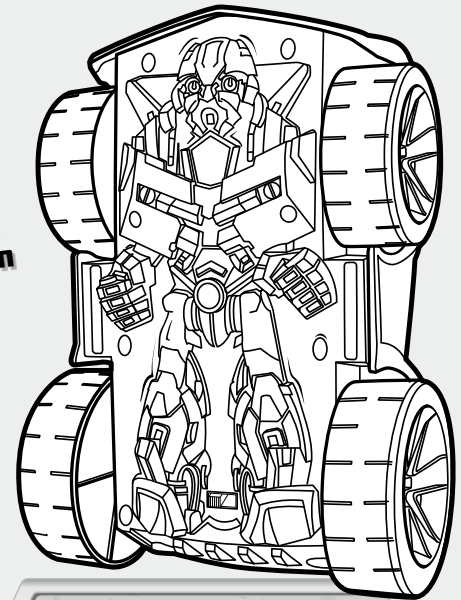


ROBOT MODE



LIGHTS & SOUNDS
BUMBLEBEE™
AUTOBOT®

**PRODUCT DOES
NOT CONVERT.**

 
 **x3**
1.5VAA or R6 size

BATTERIES INCLUDED

Replace with 3 x 1.5V "AA" or R6 size batteries.
Alkaline batteries recommended. Phillips/cross head
screwdriver (not included) needed to replace batteries.

TO REPLACE BATTERIES:

Use a Phillips/cross head screwdriver (not included) to loosen screw in battery compartment door. Remove door and discard old batteries. Insert 3 x 1.5V "AA" or R6 size batteries. Alkaline batteries recommended. Replace door and tighten screw.

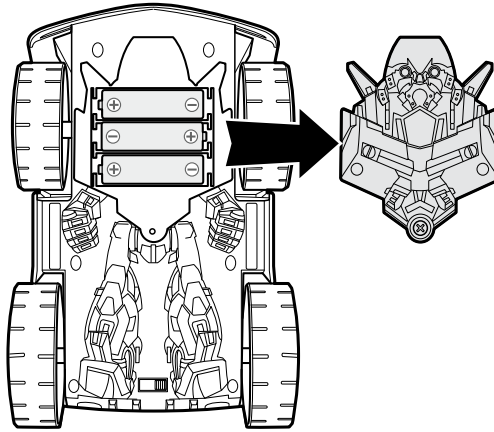

FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

 
CAUTION: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT: BATTERY INFORMATION




CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

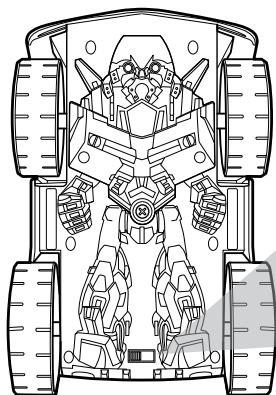

 Power Switch
Switch to ON for the full range
of lights and sounds.

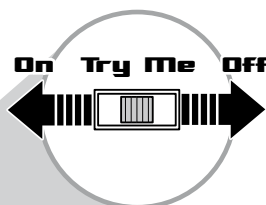

Retain instructions for
future reference.

Product and colors may vary.



DREAMWORKS
PICTURES

© 2010 DreamWorks LLC and Paramount Pictures Corporation.
® and/or TM* & © 2010 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks.



P/N 7068520000

TRANSFORMERS.com



Camaro and all related
Emblems and body designs
are General Motors
Trademarks used under
license to Hasbro, Inc.



Not suitable for children
under 3 years because of
small parts - choking hazard.