

# TRANSFORMERS™

## RPMs

ROBOT POWERED MACHINES

 
**AGES 5+**  
94926/90327 Asst.



### CAUTION:

Hair entanglement may result if child's hair comes in contact with moving parts of toy. Adult supervision is required.



49 MHz

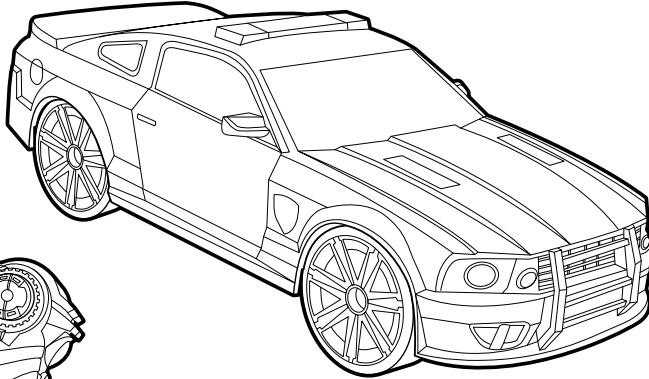



**BARRICADE**®  
RADIO CONTROL

### POWER SWITCH

  Switch Remote and Vehicle to **ON** for the full range of features.


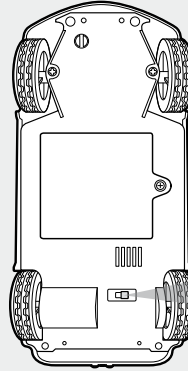


VEHICLE

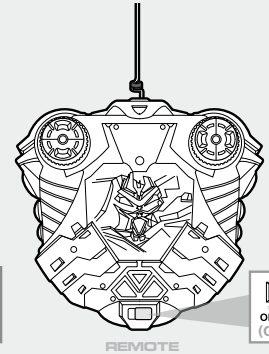  

REMOTE

### DRIVING VEHICLE

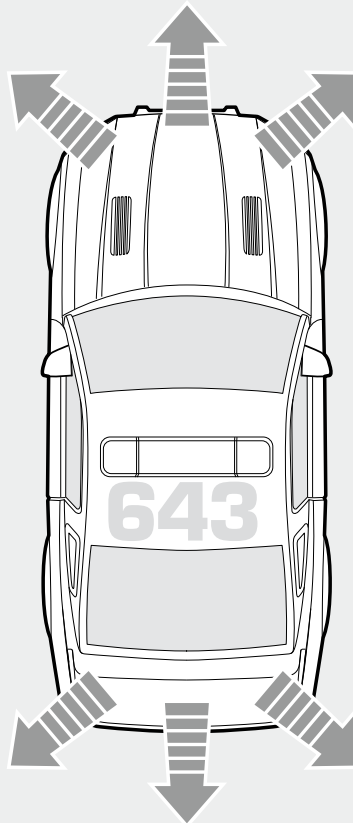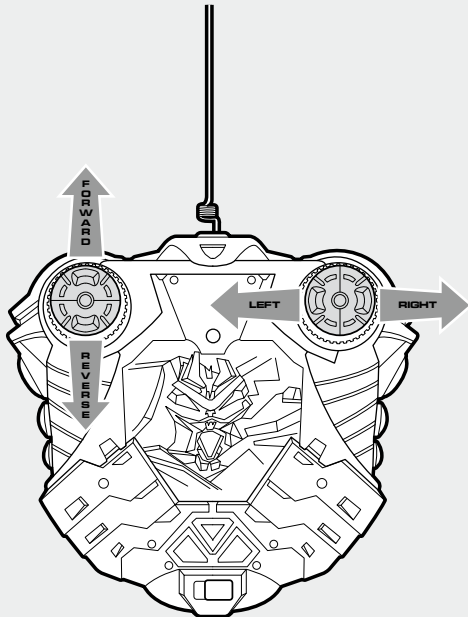  


Do not operate your vehicle on the street or on wet surfaces.

If your vehicle is not responding to the remote:

- > Make sure both the vehicle and remote are turned **ON**.
- > Move the remote closer to the vehicle.
- > You may be experiencing interference from other household items, move away from the source of interference and try again.
- > Replace the batteries in both the vehicle and remote.

### TO ADJUST STEERING:

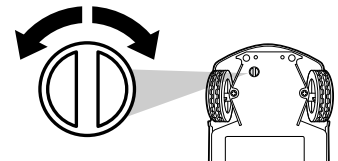 

Using a flat head screwdriver, turn the adjustment knob on the bottom of your vehicle.

- > If the vehicle is pulling to the left, turn the knob clockwise.
- > If the vehicle is pulling to the right, turn the knob counterclockwise.

**PRODUCT DOES NOT CONVERT.**



### ALKALINE BATTERIES REQUIRED

 
1.5V AA or LR6 size  
**NOT INCLUDED**

Phillips/cross head screwdriver (not included) needed to insert batteries.

TRANSFORMERS.COM


### TO INSERT BATTERIES IN VEHICLE:

Use a Phillips/cross head screwdriver (not included) to loosen screws in battery compartment door. Remove door and discard old batteries. Insert 4 x 1.5V "AA" or LR6 size batteries. Alkaline batteries required. Replace door and tighten screws.

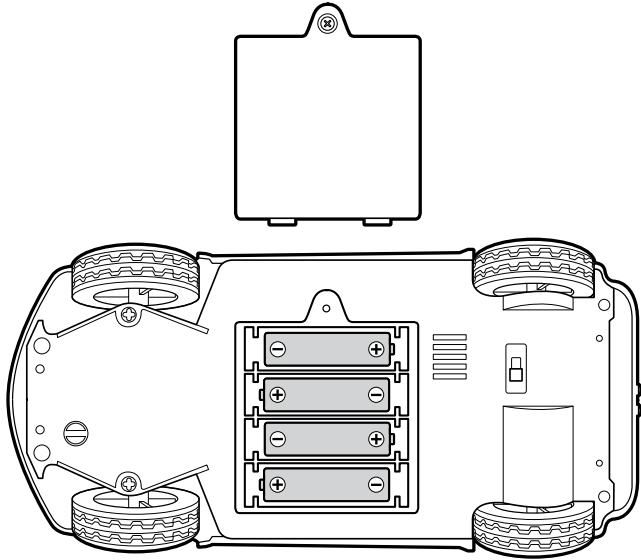

### TO INSERT BATTERIES IN REMOTE:

 Use a Phillips/cross head screwdriver (not included) to loosen screws in battery compartment door. Remove door and discard old batteries. Insert 2 x 1.5V "AA" or LR6 size batteries. Alkaline batteries required. Replace door and tighten screws.

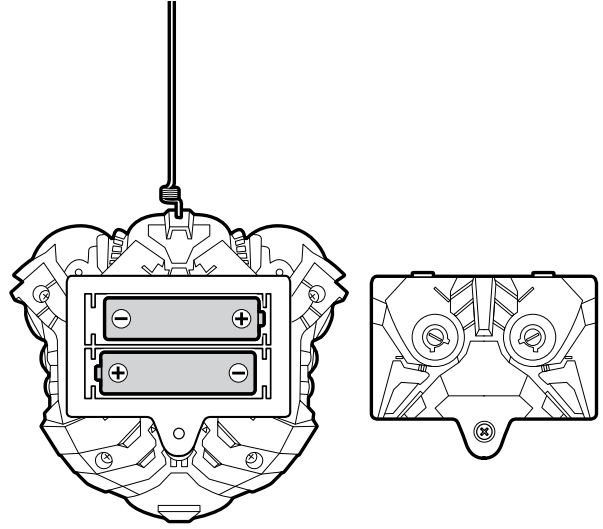

## IMPORTANT: BATTERY INFORMATION

### ! CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. **RECHARGEABLE BATTERIES:** Do not mix these with any other types of batteries. Always remove from the product before recharging. Recharge batteries under adult supervision. **DO NOT RECHARGE OTHER TYPES OF BATTERIES.**

### FCC STATEMENT

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**DREAMWORKS**  
PICTURES



NOTE TO UK CONSUMERS: This product and its batteries must be disposed of separately at your local waste recycling centre. Do not dispose of in your household waste bin.

P/N 7008990000

**TRANSFORMERS.COM**



Some poses may require hand support.

© 2009 DreamWorks LLC and Paramount Pictures Corporation  
® and/or TM® & © 2009 Hasbro. All Rights Reserved.  
TM & © denote U.S. Trademarks.



Saleen®, S281™ and vehicle designs are trademarks of MJA, Inc. used under license to Hasbro, Inc. © MJ Acquisitions Inc. 2009. Ford Oval and Mustang are registered trademarks owned and licensed by Ford Motor Company. Manufactured by Hasbro, Inc. www.ford.com



Not suitable for children under 3 years because of small parts - choking hazard.