


NOTE: Some parts are made to detach if excessive force is applied and are designed to be reattached if separation occurs. Adult supervision may be necessary for younger children.


### CHANGING TO MECH

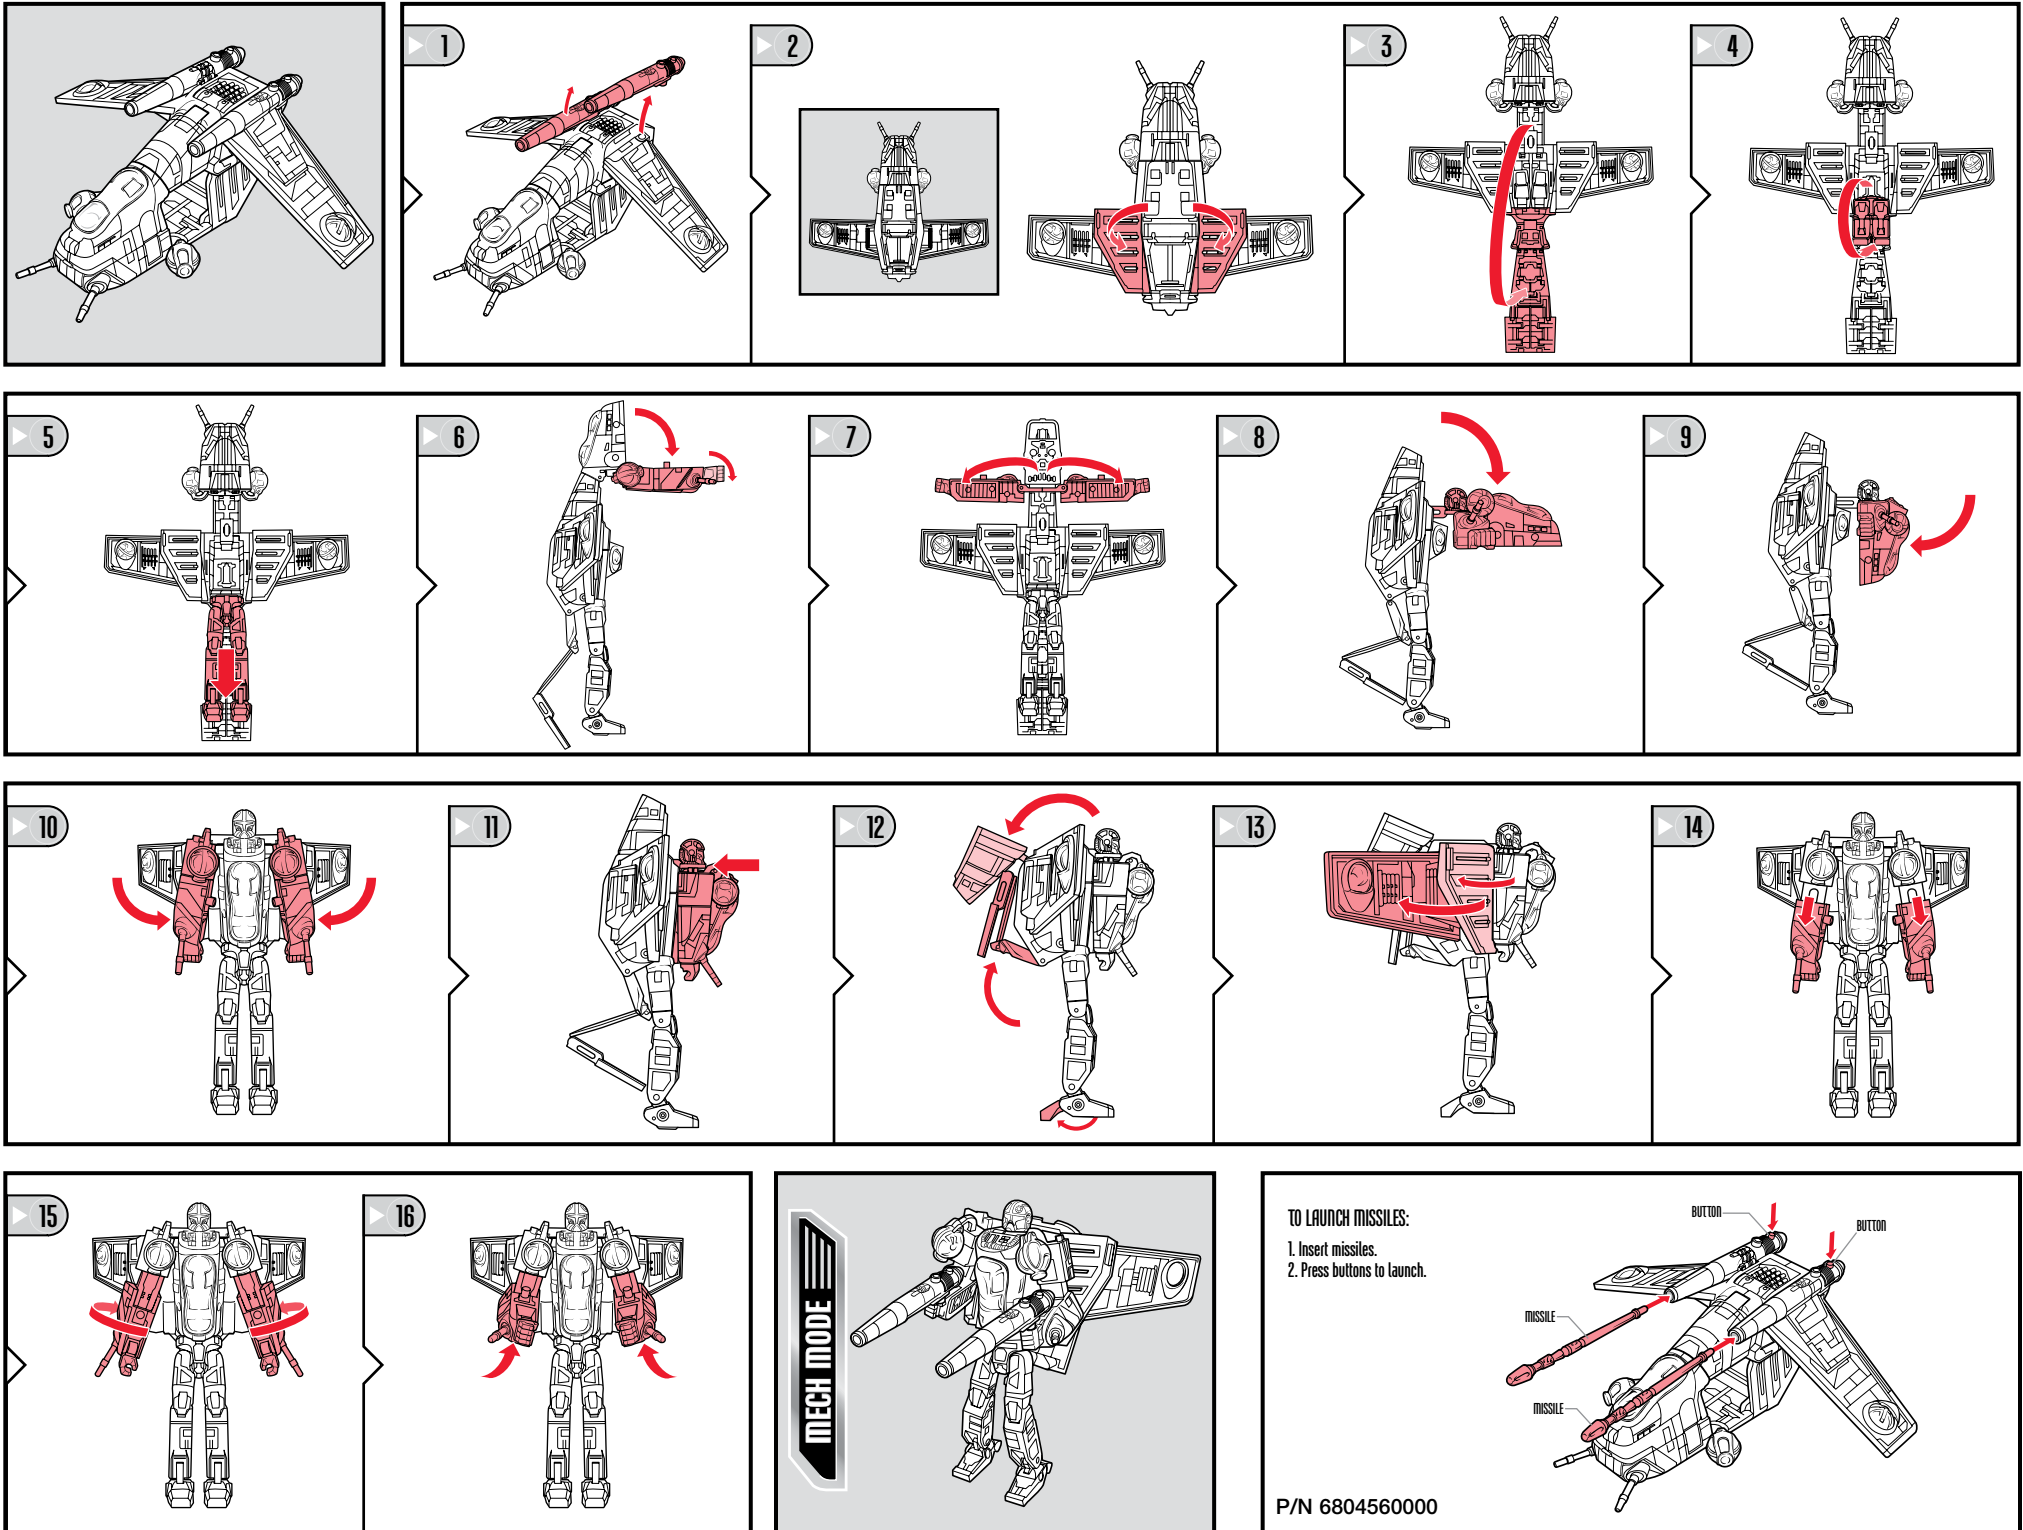

MECH MODE

#### TO LAUNCH MISSILES:

1. Insert missiles.
2. Press buttons to launch.

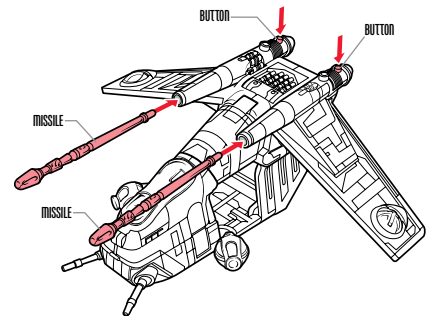

P/N 6804560000



Not suitable for children under 3 years because of small parts – choking hazard.

Reverse order of instructions to convert back into vehicle.