

TRANSFORMERS™

AGES 4+

82906/82414 Asst.

Disc Blast DECEPTICON FRENZY™

TRANSFORMERS.COM













NOTE: Some parts are made to detach if excessive force is applied and are designed to be reattached if separation occurs. Adult supervision may be necessary for younger children.

CHANGING TO RADIO




1. INSERT DISK INTO LAUNCHER.

2. PUSH TO FIRE.

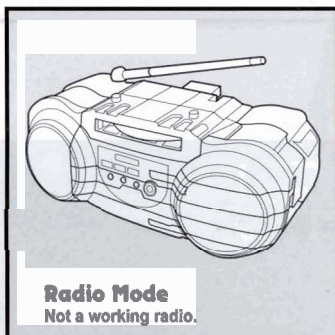
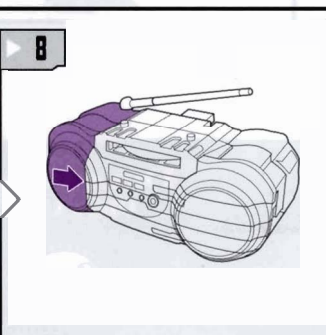
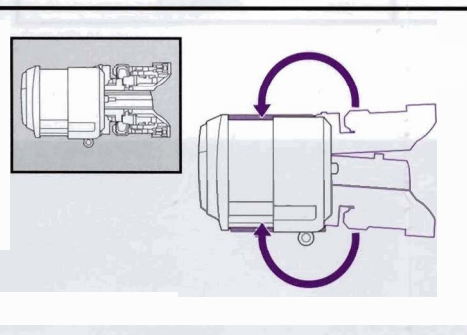
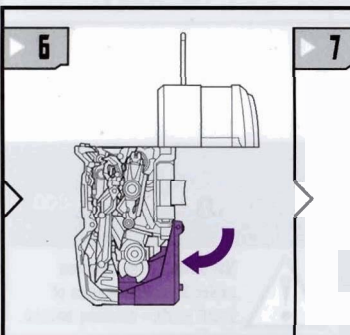
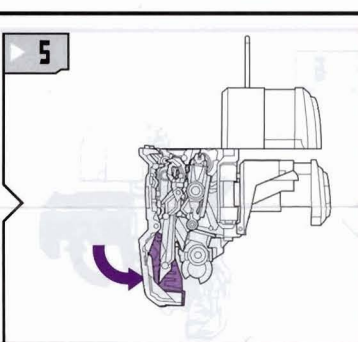
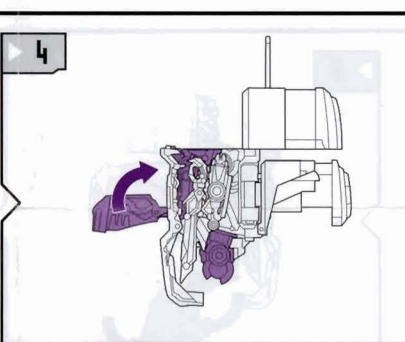
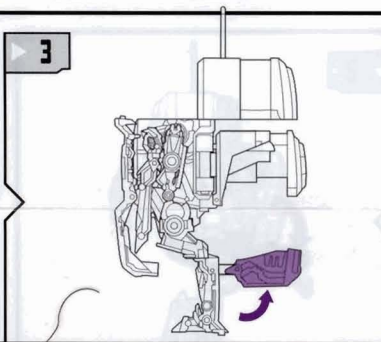
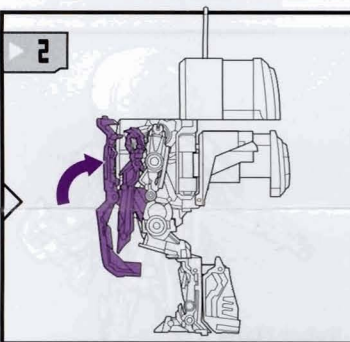
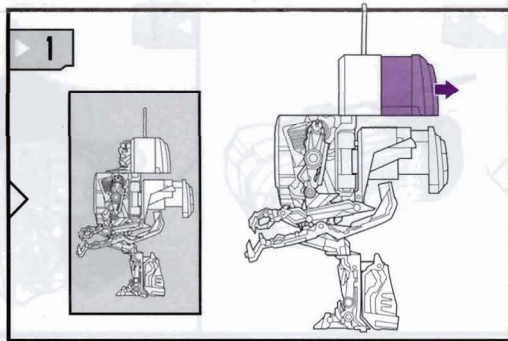
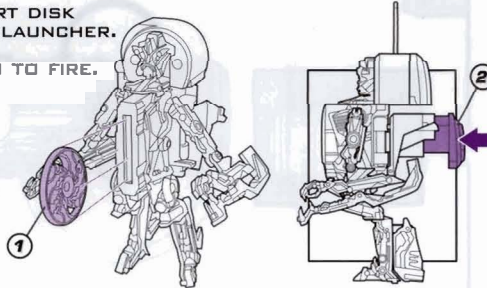


Radio Mode
Not a working radio.

CHANGING TO ROBOT

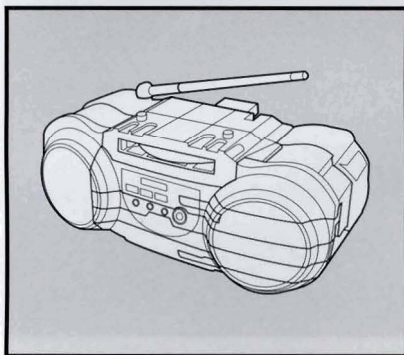

1. INSERT DISK INTO LAUNCHER.
2. PUSH BUTTON TO FIRE.

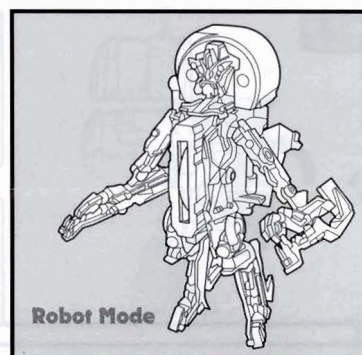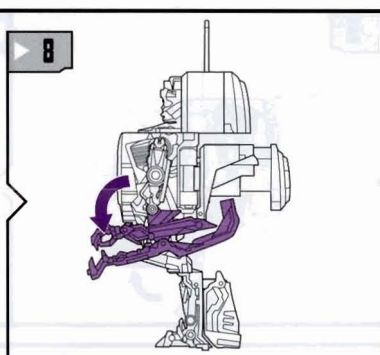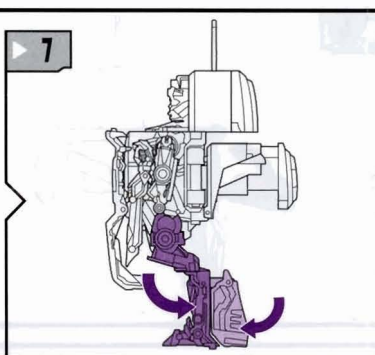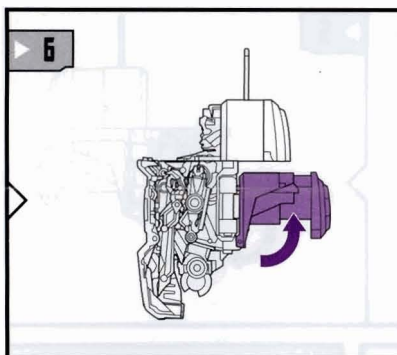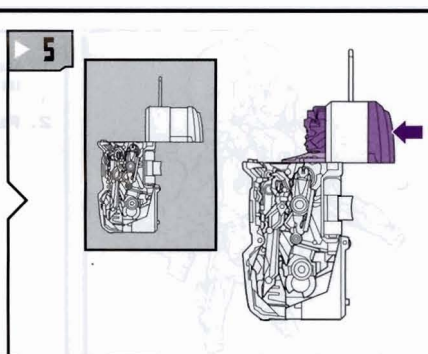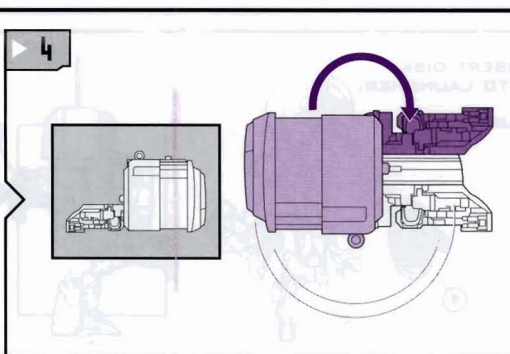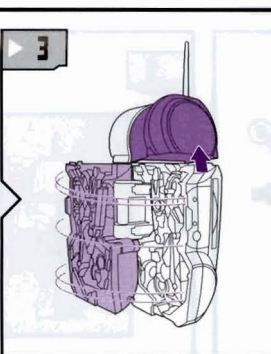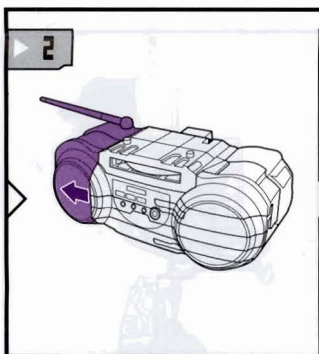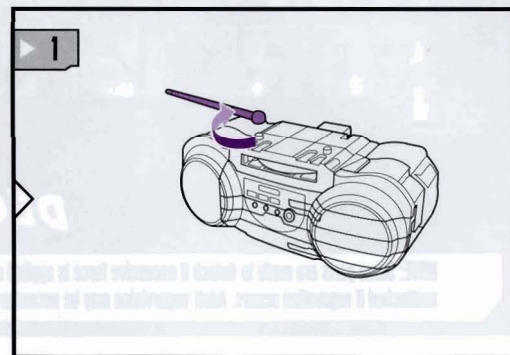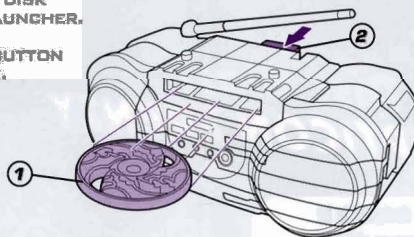

DREAMWORKS
PICTURES

TRANSFORMERS.COM

P/N 669511000

© 2007 DreamWorks LLC and Paramount Pictures Corporation
© 2007 Hasbro. All Rights Reserved.
TM & © denote U.S. Trademarks.
Manufactured under license from Tomy Company, Ltd.



Some poses may require hand support.

