

Easy-Bake REAL MEAL™ OVEN

AGES 8+

65759


IMPORTANT NOTICE FOR REAL MEAL OVEN INSTRUCTIONS FOR MACARONI AND CHEESE AND CHOCOLATE CHIP COOKIES:

Please follow these instructions when making your REAL MEAL Oven Macaroni and Cheese and Chocolate Chip Cookies. Use these instructions instead of the ones in the instruction/recipe booklet.


Macaroni and Cheese

Makes one pan of macaroni


1. Preheat oven for 15 minutes.
2. Spray pan with cooking spray.

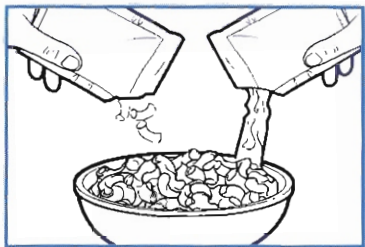


3. Pour contents of 1 macaroni packet and 1 cheese packet into mixing bowl. Add 1/3 cup of warm water and stir thoroughly until cheese powder is well mixed.

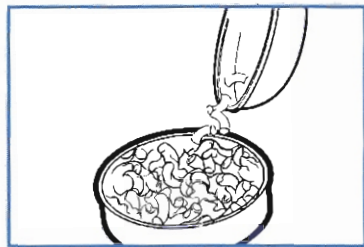

4. Pour mixture into cooking pan. Make sure macaroni is spread evenly in pan.

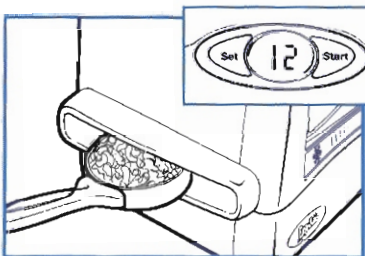

5. Place pan in cooking chamber chute, then use pan pusher to insert pan into cooking chamber. Make sure both metal oven doors are closed. Set timer for 12 minutes and press START.

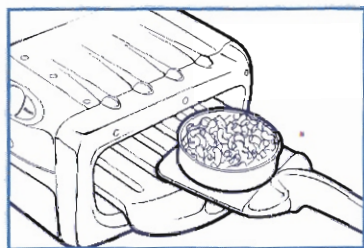

6. When cooking time is complete, use pan pusher to push cooking pan all the way through to the cooling chamber. Allow to cool for 10 minutes.
7. Pull out cooling rack, then use pan pusher to remove pan from rack.

Chocolate Chip Cookies

Makes 4 cookies


1. Preheat oven for 15 minutes.
2. Spray pans with cooking spray.




3. Pour contents of cookie mix into mixing bowl and stir to break up lumps.
4. Add 3/4 teaspoon of water and stir to form dough.



5. Sprinkle your hands with flour. Remove dough from bowl and roll dough in your hands until dough is less sticky and can be easily rolled into one large ball.
6. Divide dough into 4 equal pieces. Roll each piece into a ball. Place 2 cookies in a baking pan. Place remaining 2 cookies in another baking pan.

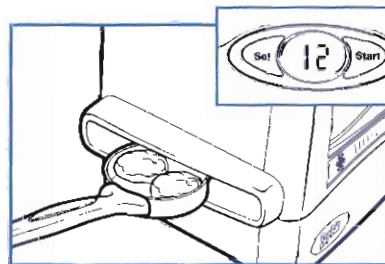

7. Place pan in cooking chamber chute, then use pan pusher to insert pan into cooking chamber. Repeat for second pan so that they are side by side in the cooking chamber. Make sure metal doors are closed. Bake for 12 minutes.

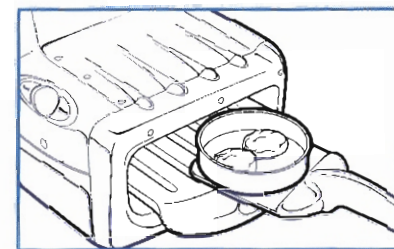

8. When cooling time is complete, use pan pusher to push cooking pans all the way through to the cooling chamber. Allow pans to cool for 10 minutes.
9. Pull out cooling rack, then use pan pusher to remove pans from rack.

Product and colors may vary.
Cooking times may vary.

Food items manufactured for Hasbro, Inc. © 2005 Hasbro. All Rights Reserved.
TM & ® denote U.S. Trademarks. U.S. Pat. No. D486533. P/N 6518190000