



60353


## NERF® Bow 'N' Arrow™ Game Assembly:

- See illustrations below and large photo on package back.
- **IMPORTANT:** Please assemble parts in the order below.

**Pieces:** Bow Body • 2 Limbs (Upper and Lower) • 2 Strings • Arrow Holder • 3 Arrows

- 1** Hold the Arrow Holder so the notched side faces front, and slide it down over the Bow Body until the raised notch fits into the slotted notch.
- 2** The Upper and Lower Limbs are identical pieces; they will only snap into the Bow Body one way, so don't force them.
- 3** Hold the Bow Body tightly in one hand and snap in one Limb so it curves back towards the handle. Repeat with the other Limb. Once snapped in, pull on each to make sure it's locked in place.
- 4** To attach the strings: Slip the unfinished end of one string through the hole in the end of either Limb and tie a double knot in it. Slip the small metal piece on the other end into the hole in that side of the handle and pull to make it secure. Repeat with the other string.

**NOTE: The strings are for decoration only and are not required to launch the arrows.**

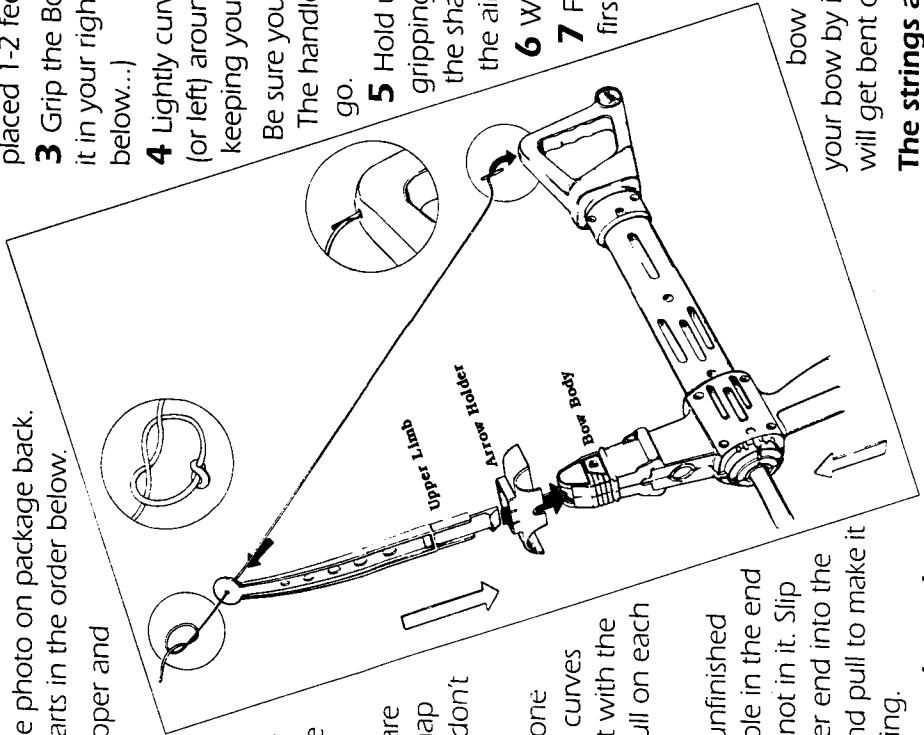

- 5** Load one of the arrows onto the nose of the bow; snap the other two spare arrows into each clip of the arrow holder.

## Proper Archery Technique for the NERF® Bow 'N' Arrow™ Game

- 1** Load your first arrow onto the "nose" on the front of the bow making sure the end with the "feathers" is nearest the bow.
- 2** Stand up straight, with your shoulders pulled back and your feet placed 1-2 feet apart.
- 3** Grip the Bow Body in your left hand. (If you're left-handed, grip it in your right hand. Directions for lefties are given in parentheses below...)
- 4** Lightly curve the tips of your first three fingers of your right hand (or left) around the handle, leaving your little finger free and keeping your palm open.  
Be sure you don't grab the handle in a fist with all your fingers. The handle should "slip" from your fingers easily when you let go.
- 5** Hold up the bow, making sure your left (right) arm that's gripping the Bow Body is slightly bent and nearly parallel with the shaft on the bow. Note: Aiming the bow slightly up in the air gets greater distance from the arrows.
- 6** With a light grip on the handle, pull it back all the way.
- 7** Find your target—and release the handle to launch the first arrow!

## Care of Your Bow 'N' Arrow™ Game

We recommend you remove all three arrows from the bow and clips (so they won't be damaged) and hang up your bow by its handle. Don't leave the arrows where the "feathers" will get bent or the shaft will get dented, as this affects their flight.

**The strings are designed to "break-away" for your safety. Do not carry the bow by the strings or "sling it" over your shoulder.**

