




FLASH FLOOD™ Instructions

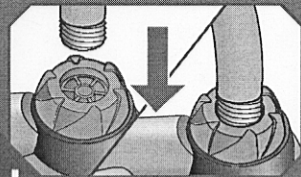


1 Place end of hose/faucet into Quick Fill Cap. Press down and fill with clean, clear water.

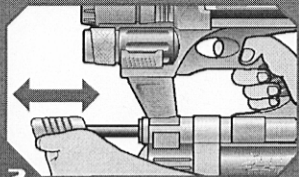

2 Pump 30 to 35 times to pressurize.

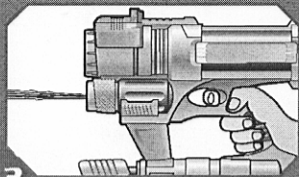

3 Pull trigger to blast out streams of water.

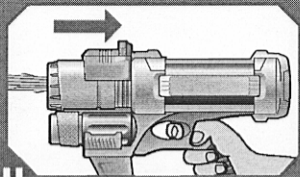


4 Pull back FLASH FLOOD trigger for a drenching blast of water.

Body Target Instructions



1 Remove Body Target paper backing and dispose of properly.

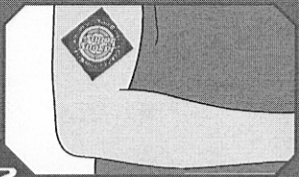

2 Stick adhesive side of Body Target onto your body and blast away!

IMPORTANT: SUPER SOAKER SOAKERTAG ELITE Body Targets have been thoroughly tested. However, as with cosmetics, some individuals may experience minor irritation. If irritation occurs, rinse with water and discontinue use.