

STAR WARS®

DARTH VADER VOICE CHANGER™

BEST PERFORMANCE GUIDE

Dear Consumer,

Here are some quick tips to help you achieve the best performance with the DARTH VADER VOICE CHANGER:

- **IMPORTANT! PLEASE READ INSTRUCTION SHEET (included) COMPLETELY BEFORE WEARING TOY!**
- This toy is packaged in a "Try Me" mode, which has de-activated the Voice Changer feature. To **re-activate** the Voice Changer feature, slide the **switch to one of the 3 settings** before first playing with the toy. See instruction sheet for details.
- The microphone is **adjustable**. Bend it closer to the wearer's mouth for optimal voice clarity.
- **Adjust the straps** for best fit. See instruction sheet for complete details.
- If the voices and sounds are slow or unclear, **check the batteries** to make sure they are inserted correctly and are fresh.



Product and colors may vary.
© 2005 Lucasfilm Ltd. & ® or TM where indicated.
All rights reserved.
®* and/or TM* & © 2005 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.

P/N 6457470000



GUÍA PARA MEJORES RESULTADOS

Estimado cliente,

Los siguientes consejos te ayudarán a obtener óptimos resultados con el DARTH VADER VOICE CHANGER:

- **¡¡IMPORTANTE! FAVOR LEE LAS INSTRUCCIONES (incluidas) POR COMPLETO ANTES DE PONERSE EL JUGUETE.**
- Este juguete ha sido empacado en el modo "¡Pruébame!", en el cual se ha desactivado la función del modulador vocal. Para **reactivar** dicha función, desliza **el selector a cualquiera de los 3 ajustes** antes de jugar por primera vez con el juguete. Lee las instrucciones para más detalles.
- El micrófono es **ajustable**. Inclínalo cerca de la boca del que lo usa para obtener mayor claridad en la voz.
- **Ajusta bien las correas** para estar cómodo. Lee las instrucciones para más detalles.
- Si las voces y los sonidos se escuchan lentos y sin claridad, **verifica las pilas** para asegurarte de que estén colocadas correctamente y no estén gastadas.



El producto y los colores pueden variar.

Imp. por: Servicios Mexicanos de Manufactura S. de R.L. de C.V. Cedros Business Park, Autopista Federal México-Querétaro, km 42,5 C.P.54600 Tepetzotlán, Estado de México. R.F.C. SMM-990712-156. Centro de Servicio para México: Tel.: 5876-2998 y para el

interior de la República 01-800-712-6225.

STAR WARS

DARTH VADER™

electronic lightsaber™

AGES 5 through adult

85412


Requires 2 x 1.5V "C" or R14 size batteries (not included).
Alkaline batteries recommended. Phillips/cross head
screwdriver (not included) needed to replace light bulb.

TO ACTIVATE SOUNDS:

When you swing the lightsaber in the air, you activate "whoosh" sounds. When the lightsaber comes in contact with another object, you hear "clash" sounds.

POWER-ACTIVATION:

Press button to "ignite" lightsaber.

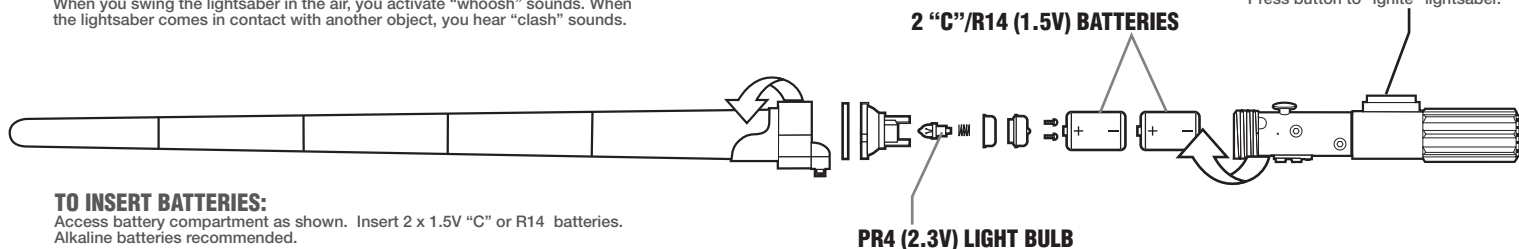

TO INSERT BATTERIES:

Access battery compartment as shown. Insert 2 x 1.5V "C" or R14 batteries.
Alkaline batteries recommended.

TO REPLACE LIGHTBULB:

Adult replacement of light bulb required. An adult should unscrew the light bulb holder from the light tube collar and take it apart to replace the bulb. Phillips/crosshead screwdriver (not included) needed. Use the illustration as a guide.

! CAUTION: TO AVOID BATTERY LEAKAGE

1. Be sure to insert the batteries correctly and always follow the toy and battery manufacturers' instructions;
2. Do not mix old and new batteries or alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries;
3. Always remove weak or dead batteries from the product.

IMPORTANT: BATTERY INFORMATION

Please retain this information for future reference.

Batteries should be replaced by an adult.

! CAUTION:

1. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings.
2. Do not mix old batteries and new batteries, or standard (carbon-zinc) with alkaline batteries.
3. Remove exhausted or dead batteries from the product.
4. Remove batteries if product is not to be played with for a long time.
5. Do not short-circuit the supply terminals.
6. Should this product cause, or be affected by, local electrical interference, move it away from other electrical equipment. Reset (switching off and back on again or removing and re-inserting batteries) if necessary.
7. RECHARGEABLE BATTERIES: Do not mix these with any other types of battery. Always remove from the product before recharging. Recharge batteries under adult supervision. DO NOT RECHARGE OTHER TYPES OF BATTERIES.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.



Product and colors may vary.
© 2005 Lucasfilm Ltd. & ® or TM where indicated. All rights reserved.
®* and/or TM* & © 2005 Hasbro. All Rights Reserved.
® denotes Reg. U.S. Pat. & TM Office.

For more toy information visit
www.starwars.hasbro.com



starwars.com

P/N 6457480000

STAR WARS

DARTH VADER™

sable láser electrónico


EDAD: 5
años a adulto

85412

Requiere 2 pilas C o R14 de 1,5 V (no incluidas). Se recomiendan pilas alcalinas.
Se necesita un destornillador en cruz no incluido para cambiar la bombilla.
Tensión: 1,5 V x 2 Consumo: 0,3 A

PARA ACTIVAR LOS SONIDOS:

Al mover el sable láser en los aires, activas unos zumbidos.
Al entrar en contacto el sable láser con otro objeto, oírás sonidos de choques.

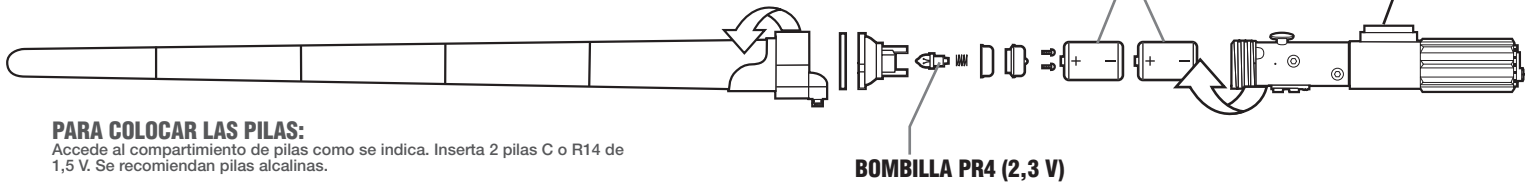

PARA COLOCAR LAS PILAS:

Accede al compartimento de pilas como se indica. Inserta 2 pilas C o R14 de 1,5 V. Se recomiendan pilas alcalinas.

PARA CAMBIAR LA BOMBILLA:

Un adulto debe cambiar la bombilla. Este debe desenroscar el portabombilla de la abrazadera del tubo luminoso y desarmarlo para cambiar la bombilla. Se necesita un destornillador en cruz (no incluido). Guíate por la ilustración.

⚠ ADVERTENCIA: PARA EVITAR QUE LAS PILAS SE DERRAMEN

1. Asegúrese de que las pilas estén colocadas correctamente y de seguir las instrucciones de los fabricantes del juguete y de las pilas.
2. No combine pilas viejas con pilas nuevas, ni pilas alcalinas con pilas estándar (carbón y zinc) o con pilas recargables (níquel y cadmio).
3. Siempre retire del producto las pilas débiles o gastadas.

IMPORTANTE: INFORMACIÓN SOBRE LAS PILAS

Conserve esta información para futura referencia.
Las pilas deben ser cambiadas por un adulto.

⚠ ADVERTENCIA:

1. Siga cuidadosamente las instrucciones. Use solo las pilas recomendadas y asegúrese de colocarlas correctamente según la polaridad + y - indicada.
2. No combine pilas gastadas con pilas nuevas, ni pilas alcalinas con pilas estándar (carbón y zinc).
3. Retire las pilas gastadas o agotadas del producto.
4. Retire las pilas del producto si no va a jugar con éste por un largo período de tiempo.
5. No origine cortocircuitos en los bornes del compartimento de las pilas.
6. Si el producto provoca interferencias o es afectado por ellas, debe alejarlo de aparatos eléctricos y, si fuera necesario, reinicializarlo encendiéndolo y apagándolo, o bien sacando y reinsertando sus pilas.
7. PILAS RECARGABLES: No las combine con ningún otro tipo de pilas. Retírelas siempre del producto antes de recargarlas bajo la supervisión de un adulto. NO RECARGUE OTRO TIPO DE PILAS.



El producto y los colores pueden variar.
Imp. por: Servicios Mexicanos de Manufactura S. de R.L. de C.V. Cedros Business Park,
Autopista Federal México-Querétaro, km 42,5 C.P.54600 Tepetzotlán, Estado de México.
R.F.C. SMM-990712-156. Centro de Servicio para México: Tel.: 5876-2998 y para el
interior de la República 01-800-712-6225.

Para más información sobre los juguetes, visita
www.starwars.hasbro.com

