


# ALIENS

## EVAC FIGHTER VEHICLE INSTRUCTIONS

Remove parts from box and arrange parts as shown below. Apply labels to unassembled parts using the numbers on the label sheet and these illustrations as a guide.

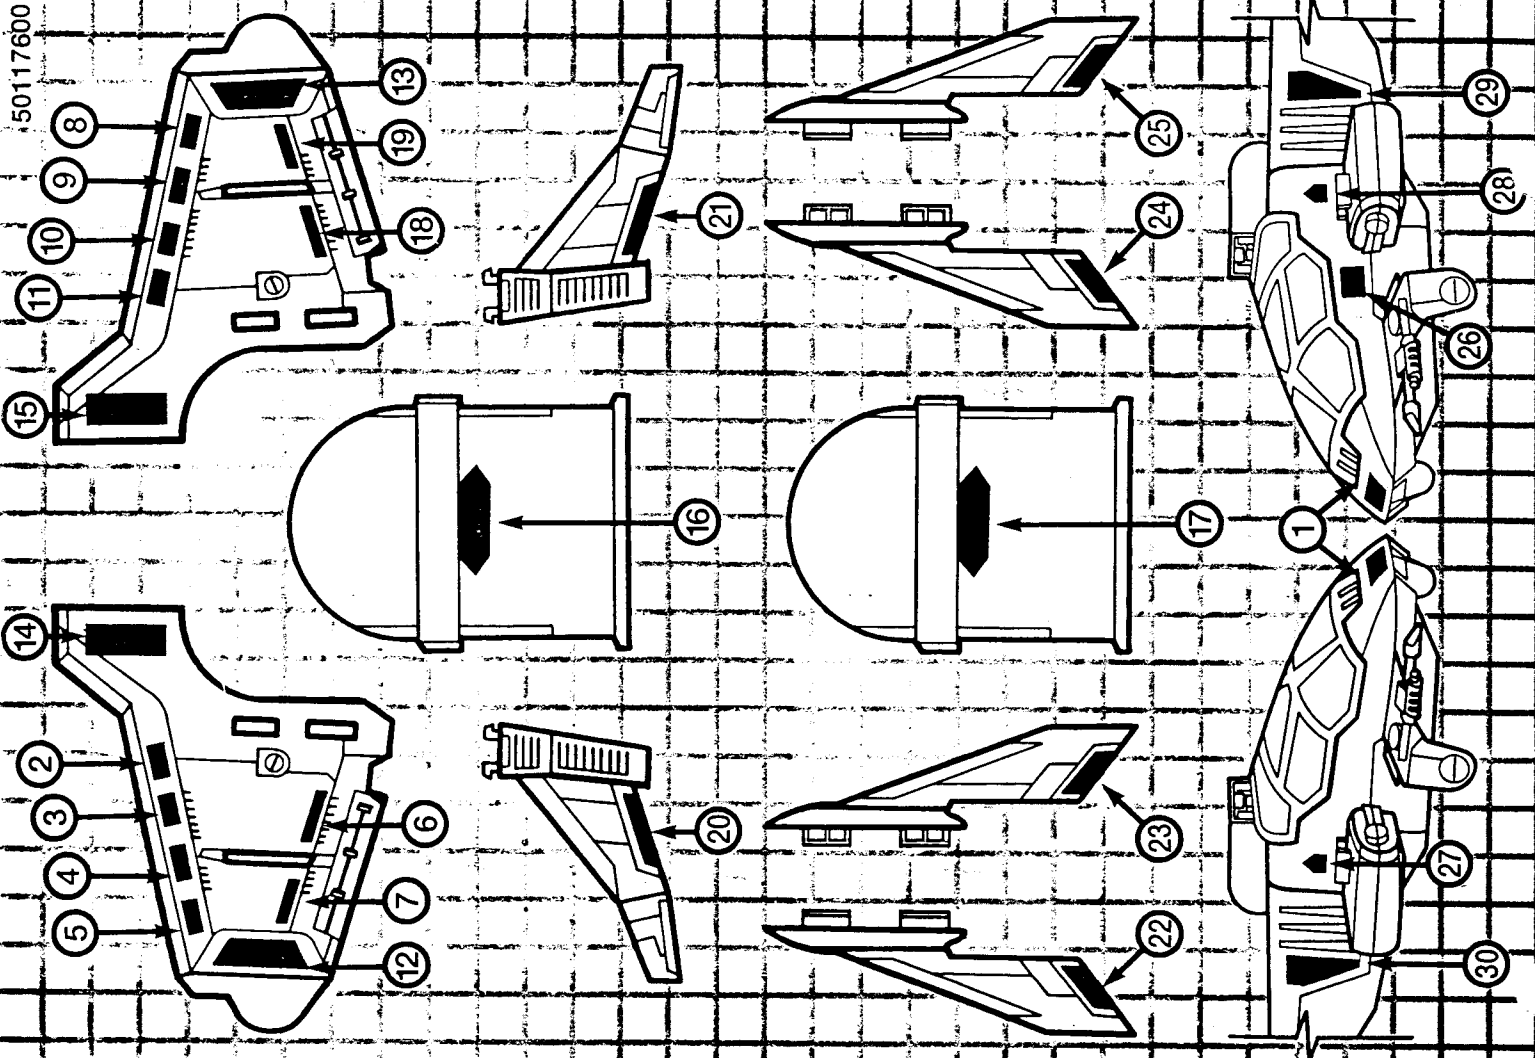


50117600




©Kemper, A Division of Tomka Corporation Cincinnati, Ohio 45220

Aliens™ ©1986, 1993 Twentieth Century Fox Film Corporation All Rights Reserved.

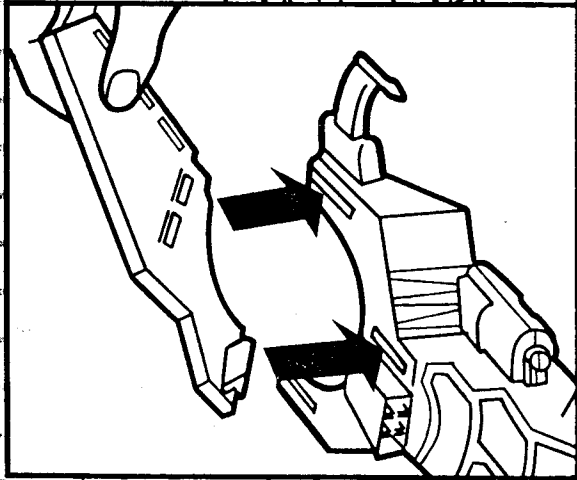


**2** Snap large wings in place first.

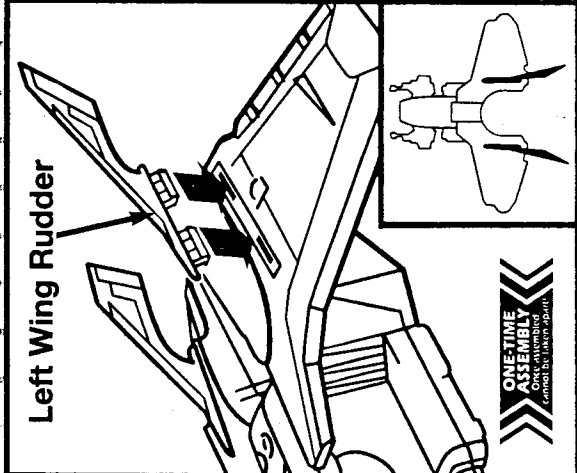


Left Wing Rudder

**3** The wing rudders pass through the slots in the wing and snap into the body permanently.

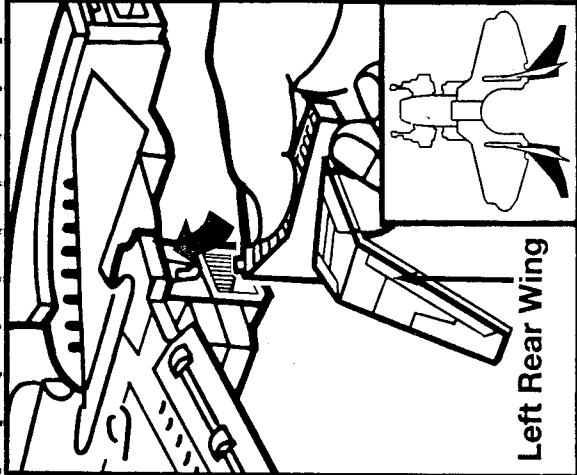


Left Rear Wing


**4** Hook the rear wing under the large wing and rotate it down until it snaps in place, one on each side.

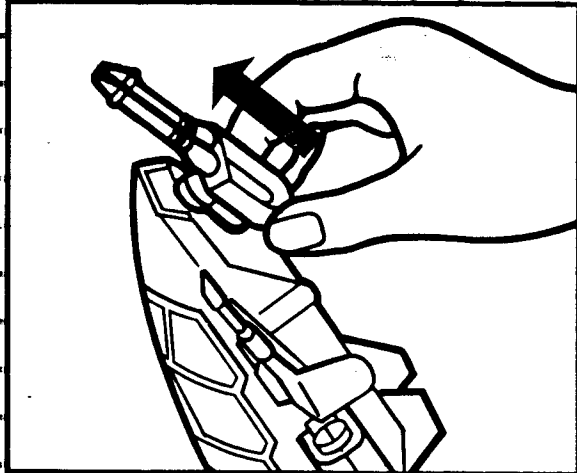


**5** Slide front cannon into place. Cannons can rotate 180°.

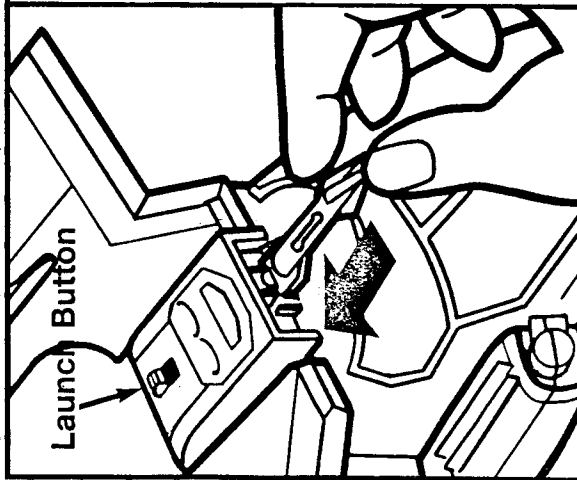


**6** Push missile into missile launcher until it locks in place. Push launch button forward to fire.

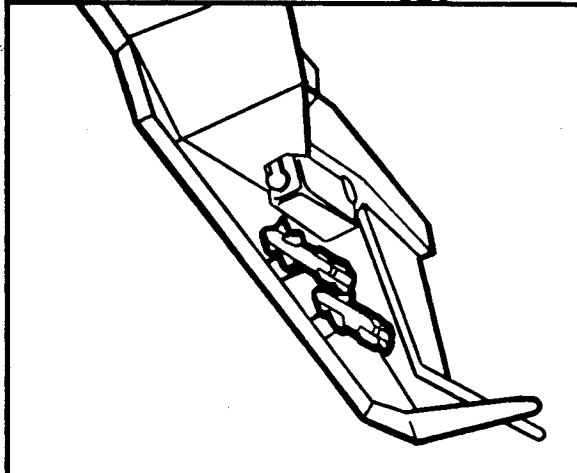

**7** Store additional missiles under the large wings.

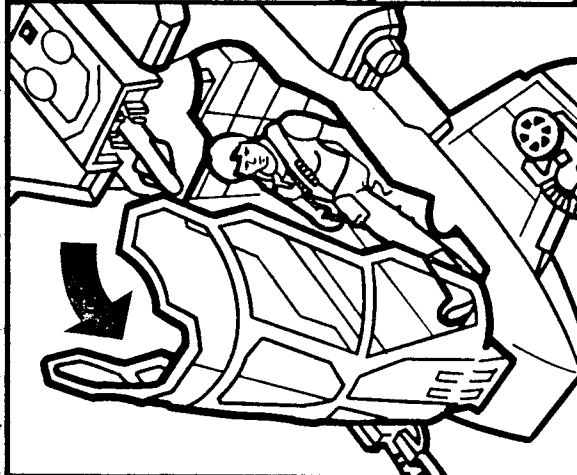

**8** Raise cockpit canopy and insert figure into the cockpit.

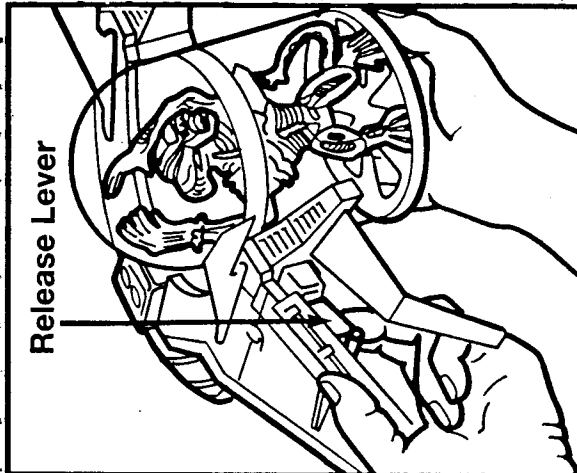

Release Lever

**9** Insert figure into capture pod and snap lid on. Pull the release lever to release the capture pod.