


TM and © Indicate a trademark of DC Comics Inc. BATMAN, THE PENGUIN, ROBIN and all related characters, accessories and indicia are trademarks of DC Comics Inc. © 1991. All Rights Reserved.




**KEMMER**  
Kenner Products,  
A Division of Tonka Corporation  
63550

# BATMAN<sup>®</sup> BRUCE WAYNE<sup>™</sup> CUSTOM COUPE OPERATION INSTRUCTIONS


**1** Apply labels to vehicle using the numbers on the label sheet and this illustration as a guide.

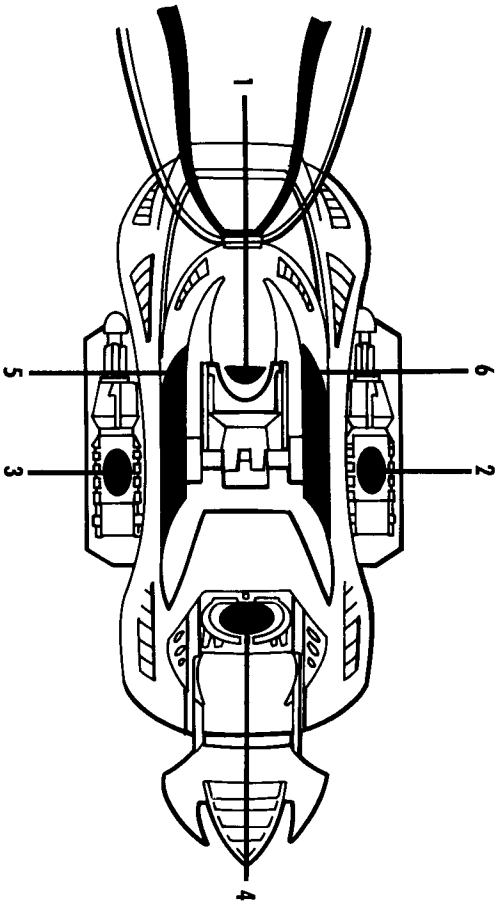

**2** Open cockpit by pressing in on the tabs on either side of windshield and pulling up.

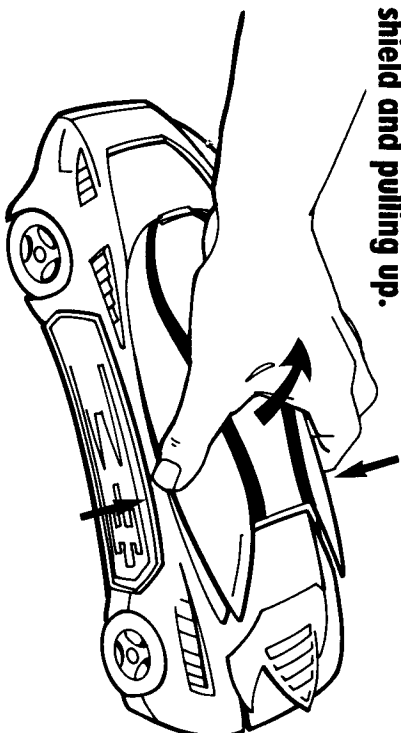


**3** Pull back on rear spoiler to open launcher compartments and expose secret compartment inside of vehicle. Load projectiles into launchers.

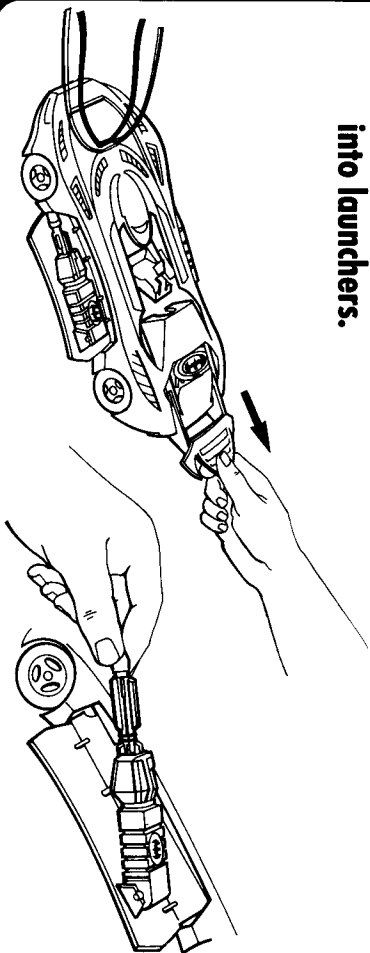

**4** Place your BATMAN<sup>®</sup> figure feet first and with his arms down into secret compartment seat. Top bar of bracket should go between figure's ears as shown. (Fits most figures.)




**5.** Slide spoiler forward to conceal **BATMAN®** figure.

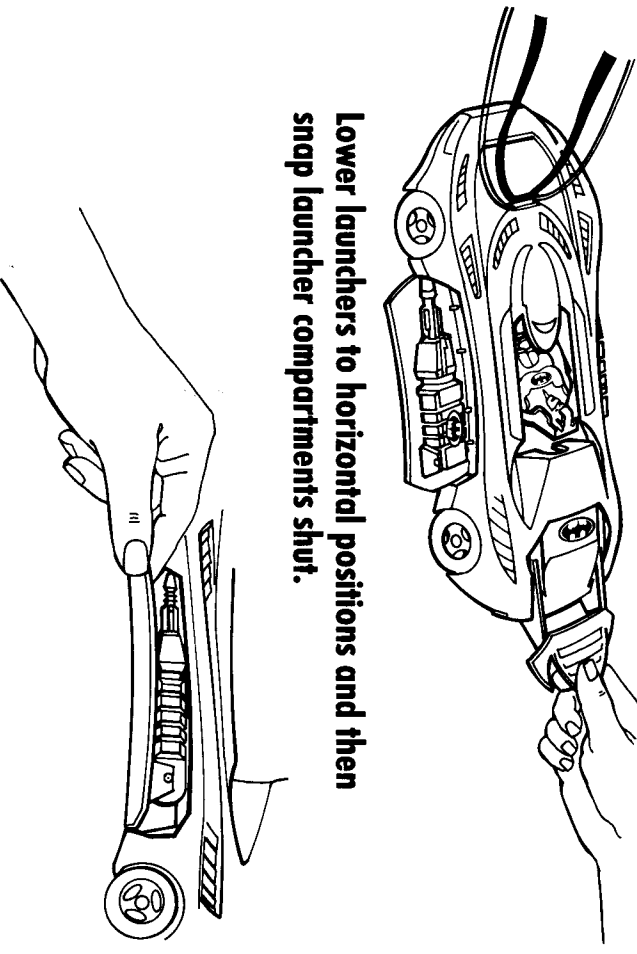


Lower launchers to horizontal positions and then snap launcher compartments shut.

**7.** At the first sign of danger, pull back on the spoiler to “change” Bruce Wayne™ into **BATMAN®** and expose launchers for fire power.

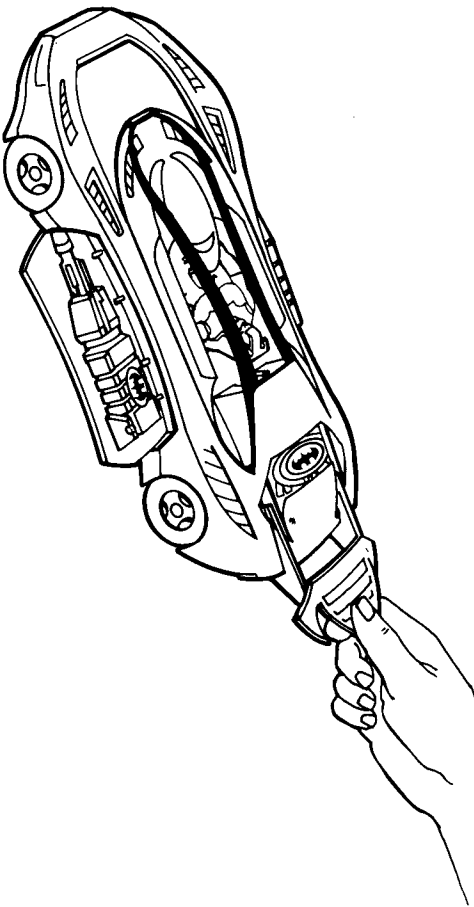

**6.** After concealing **BATMAN®** figure, fasten Bruce Wayne™ figure into the waist clip in the backseat. Close windshield.

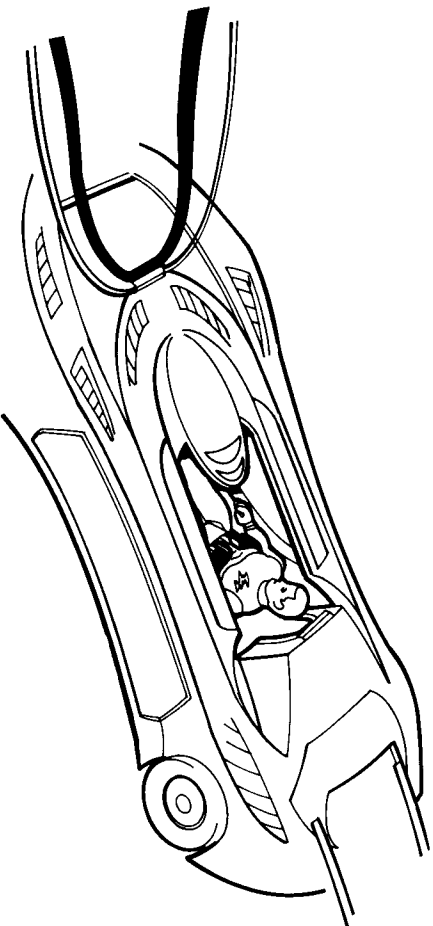

**8.** Tilt launchers up and fire projectiles by pressing the buttons on the sides. Remember, always lower launchers to horizontal positions before closing the launcher compartments.

