

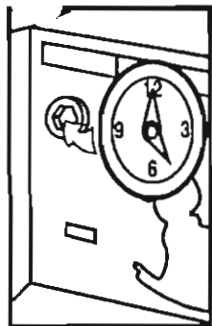


# ASSEMBLY


Slide individual interior shelf sections into place.

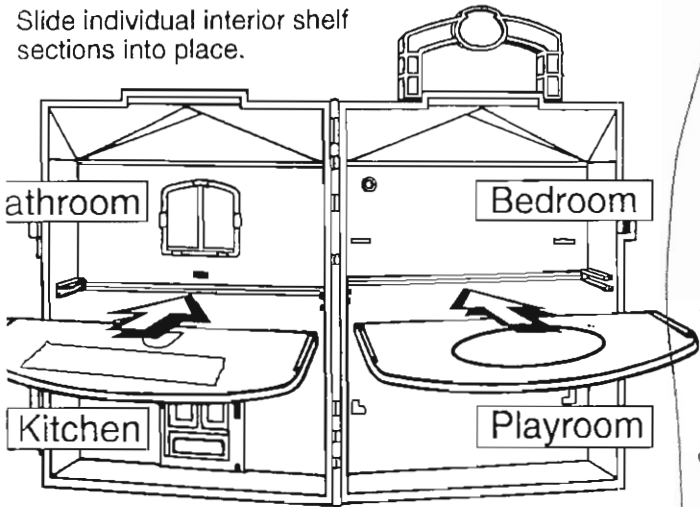


2. Attach clock to bedroom wall.

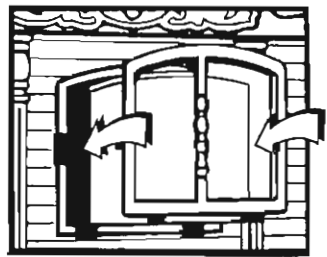


3. Place clear window in window frame. Snap window and window frame into position as shown.

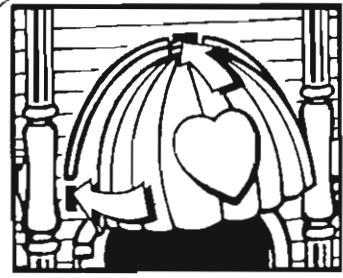

4. Snap awning onto front of nursery above door. Insert bottom pegs first.

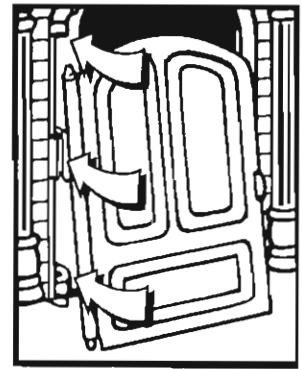

5. Snap door into place as shown.

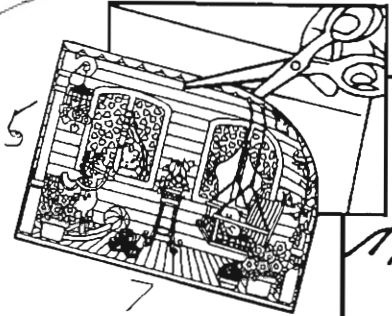

6. Cut out window illustration from side of carton and position on nursery back as shown.

IMPORTANT NOTE

The cut out size should be 5" x 7" which is smaller than the printed dotted line on the package.

