



DREADNOK THUNDER MACHINE

INSTRUCTIONS


Remove all pieces from plastic frames. If you have difficulty, use safety scissors.

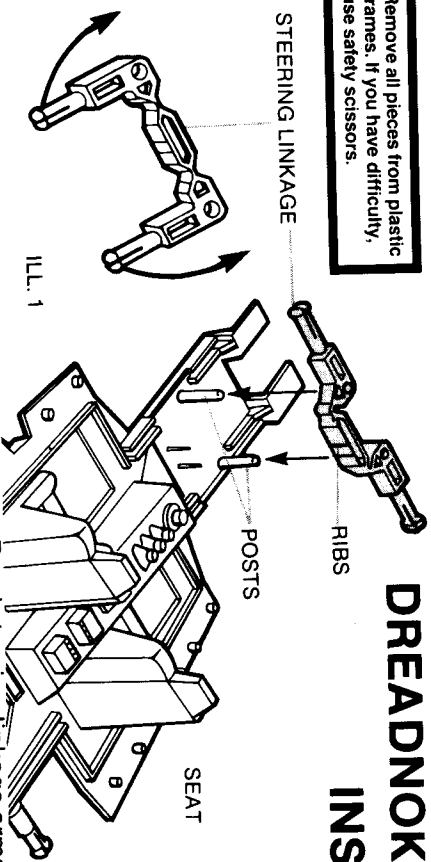


- 1 Hold steering linkage with arrow facing up. Bend steering linkage arms out to position shown. With ribs on linkage facing seats, slide holes over two posts on front of chassis. Press down firmly. (ILL. 1)

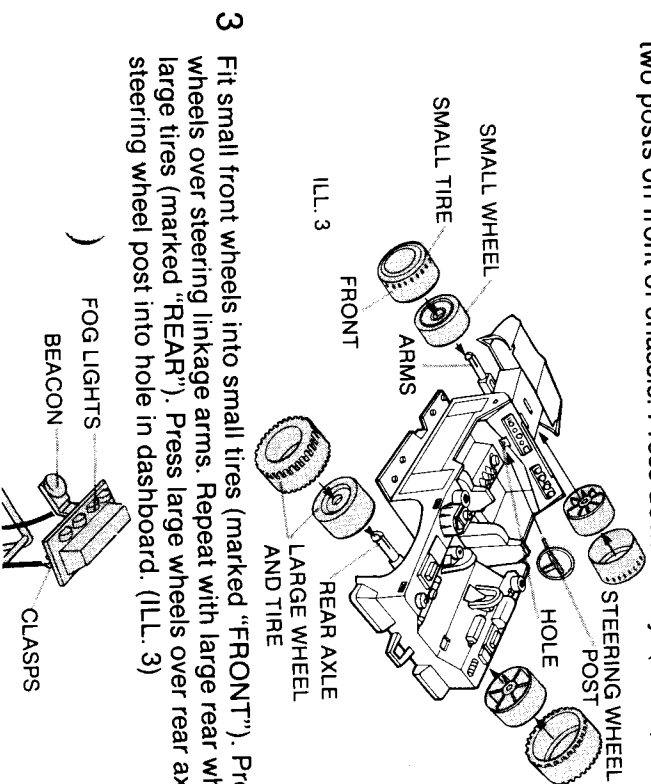


- 3 Fit small front wheels into small tires (marked "FRONT"). Press holes in wheels over steering linkage arms. Repeat with large rear wheels and large tires (marked "REAR"). Press large wheels over rear axles. Insert steering wheel post into hole in dashboard. (ILL. 3)

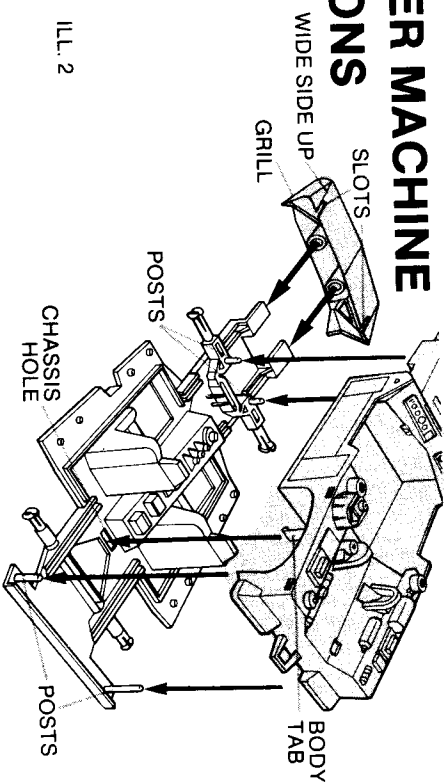


- 2 Slide four posts on chassis into four holes under body. Press together so tab in middle of body snaps into hole underneath chassis. Fit holes in front grill over posts on front of vehicle. (ILL. 2)

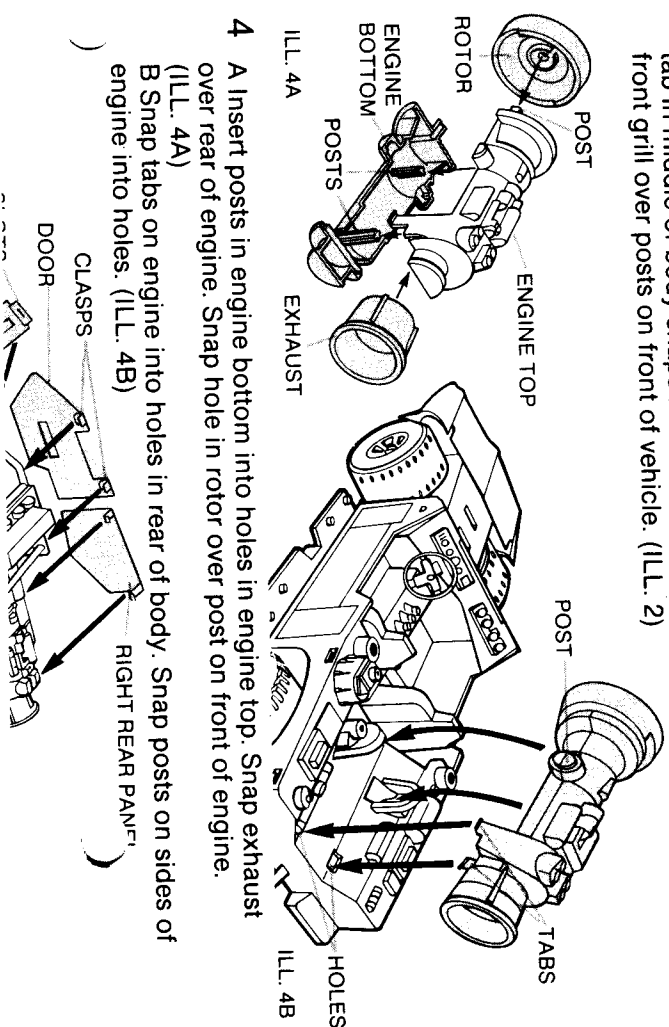


- 4 A Insert posts in engine bottom into holes in engine top. Snap exhaust over rear of engine. Snap hole in rotor over post on front of engine. (ILL. 4A)
B Snap tabs on engine into holes in rear of body. Snap posts on sides of engine into holes. (ILL. 4B)

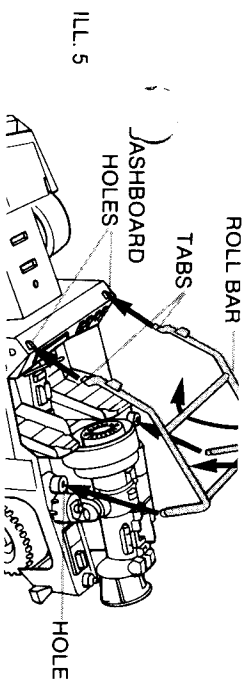


- 5 Insert tabs on angled roll bar into holes on top of dashboard as shown. Insert straight bars into holes in body. With fog lights facing forward, place beacon light under front roll bar. Snap clasps on each side of fog lights over side roll bars. (ILL. 5)

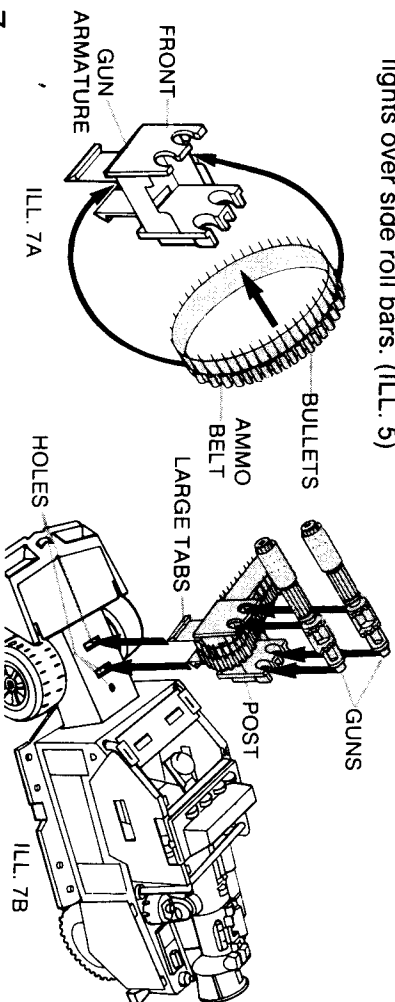


- 7 A With bullets facing front, wrap ammo belt around middle of gun armature. (ILL. 7A)
 B With belt between large tabs, snap tabs and post into holes in front body. Snap guns (over belt) into armature as shown. (Pull ammo belt to rotate machine guns). (ILL. 7B)

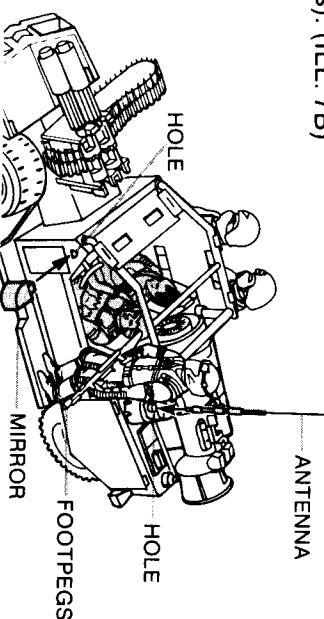


- 9 Insert antenna into hole in rear of body. Insert side view mirror into hole on left side of body. Remove fog light roof panel to place Dreadnok driver THRASHER and additional figure in seats. Pose eight more figures on running board foot pegs. (Other figures sold separately). (ILL. 9)

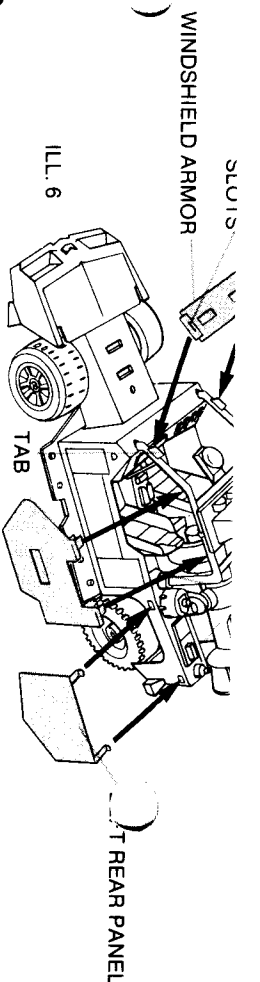

- 6 Snap slots in windshield armor over tabs on front of roll bar. Snap clasps on left and right armored doors over side roll bars. Insert tabs on rear armor panels (marked "L" and "R") into slots over rear tires. (ILL. 6)

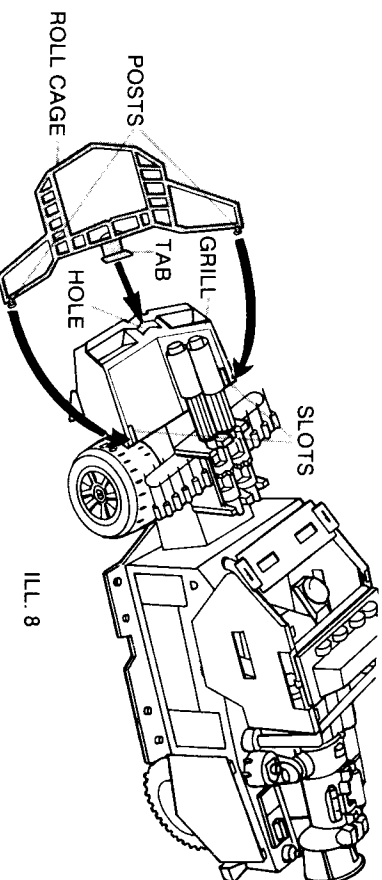

- 8 Snap tab on front roll cage into hole in front grill. Bend sides of front roll cage back and slide posts into slots in hood. (ILL. 8)

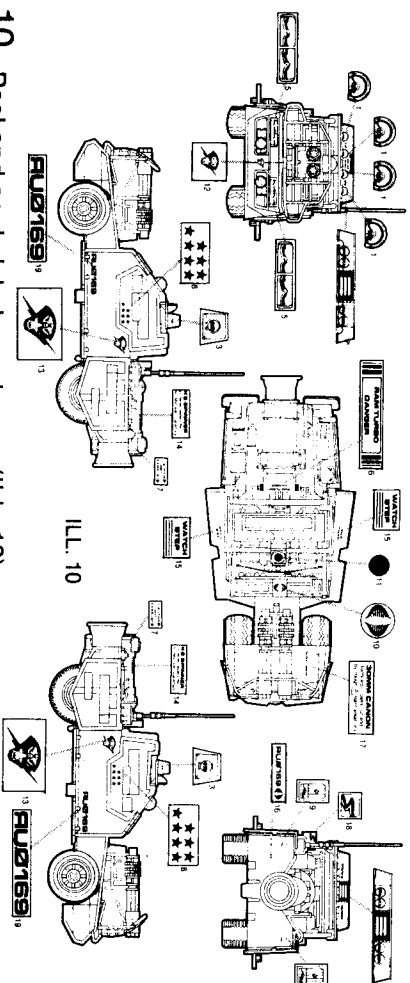

- 10 Peel and apply labels as shown. (ILL. 10)
 ©1986 Hasbro, Inc. Pawtucket, RI 02862 USA. All Rights Reserved. 6042 P/N 174068.008

THUNDER MACHINE

- 1) "HIGH NOON" HIGH INTENSITY XENON SPOT LAMPS
- 2) INFRARED TARGET ACQUISITION SCANNER
- 3) PRESELECTABLE MULTIBAND PROCESSOR/ANTENNA
- 4) REINFORCED TUBULAR FORWARD PROTECTION ROLL CAGE
- 5) "JUNKED" RACE CAR FRONT GRILL
- 6) DUAL SYNCHRONIZED "PENETRATOR" GATLING CANNONS
- 7) "FAST FIRE" WOVEN ALLOY AMMO BELT
- 8) 205/50 - VR15 RACING TIRES
- 9) FULLY-ADJUSTABLE VARIABLE SELECT SUSPENSION
- 10) TWO STATION LATERAL PERSONNEL PLATFORM
- 11) INDIVIDUAL HIGH-BACK BIO-FORM COMMAND SEATS
- 12) PERSONNEL PROTECTION SIDE ARMOR SHIELDS
- 13) EXTEND TUBULAR SPACE FRAME ROLL CAGE
- 14) MULTI-VANE ADJUSTABLE ALLOY JET INTAKE
- 15) "KNOCK-DEAD" 21K THRUST LB. TURBOJET
- 16) 225/60 - HR15 OFF-ROAD TIRES
- 17) HAND-LAID CARBON/GRAPHITE TIRE SHIELDS

