



GARGOYLES XANATOS XI-44 ROADSTER


ASSEMBLY AND INSTRUCTIONS

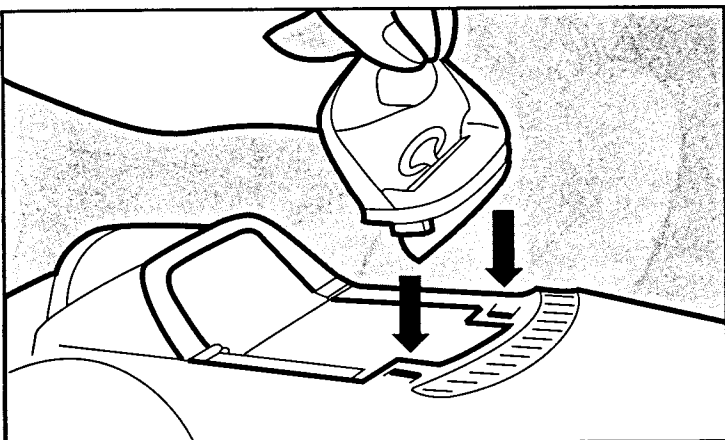


1 Snap windshield into position.

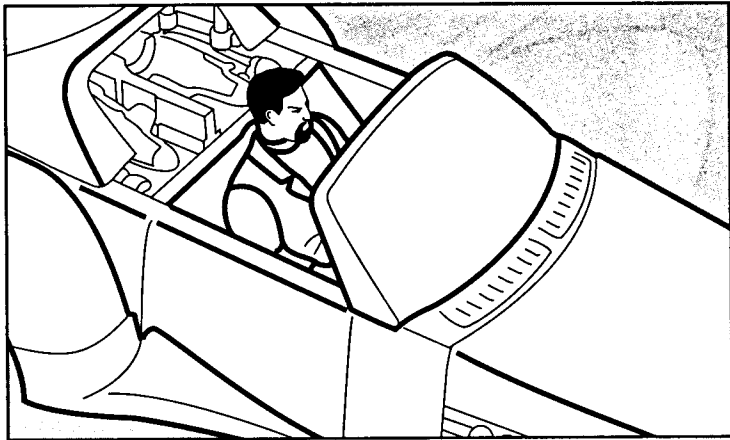


2 Place figure in vehicle as shown.

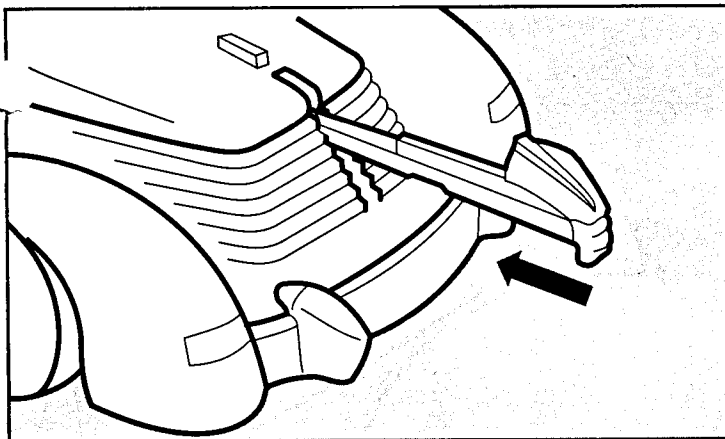


3 Load hood ornament missile all the way into front of vehicle.

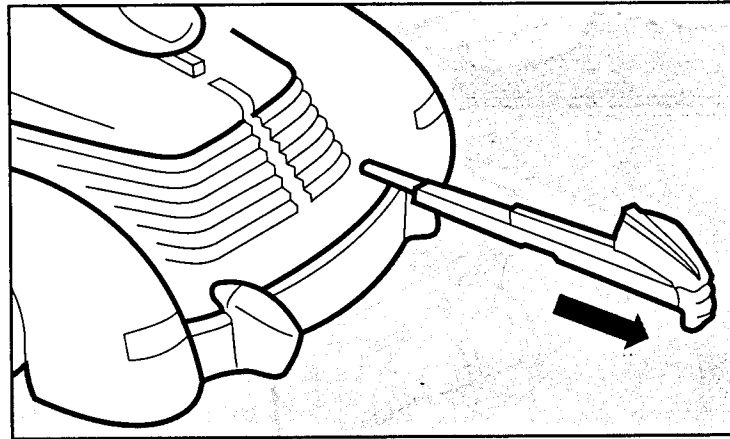


4 Press firing button to launch hood ornament missile.

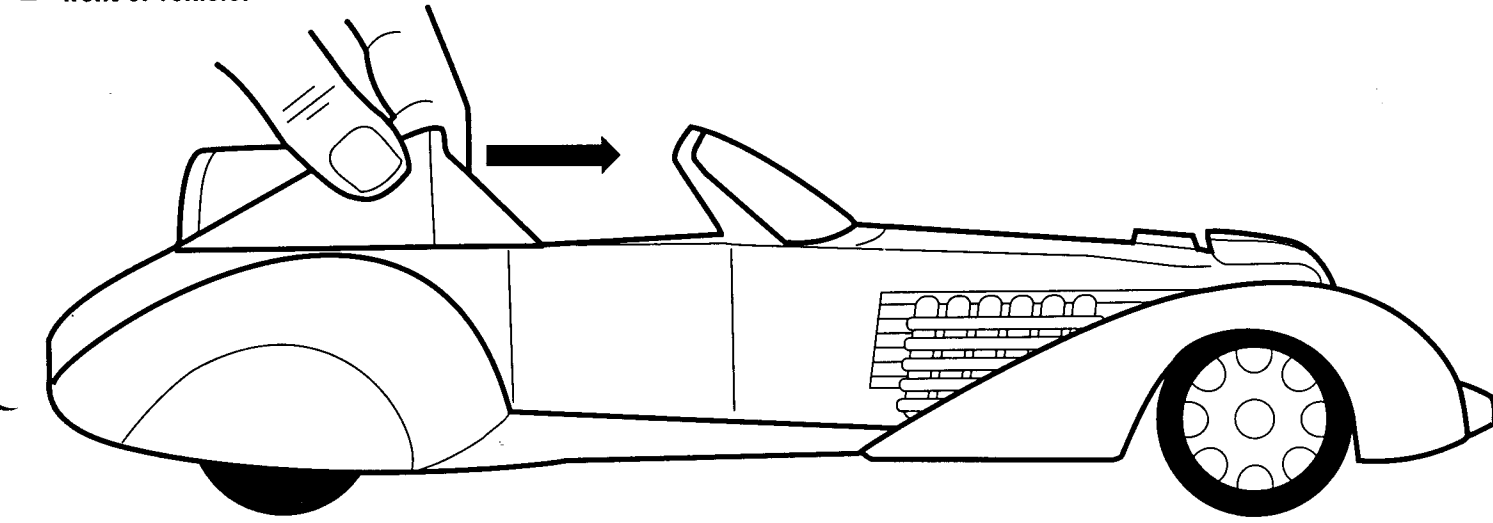


5 Slide roof forward to hide figure and expose thruster compartment.

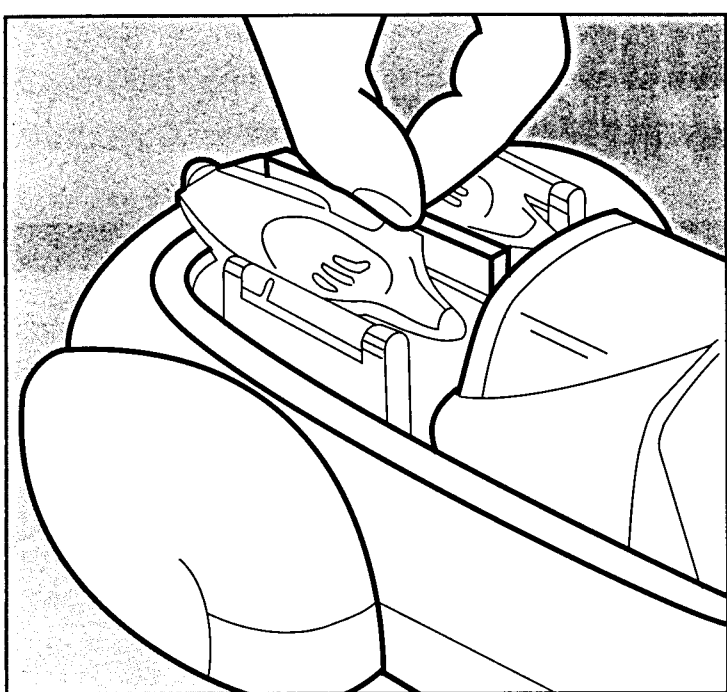


6 Pull thruster compartment up.

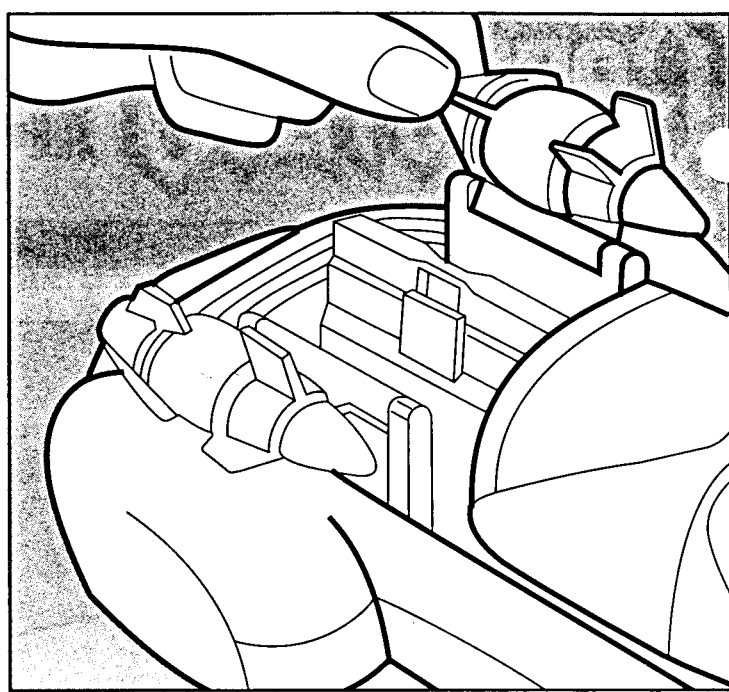


7 Rotate each thruster outward.

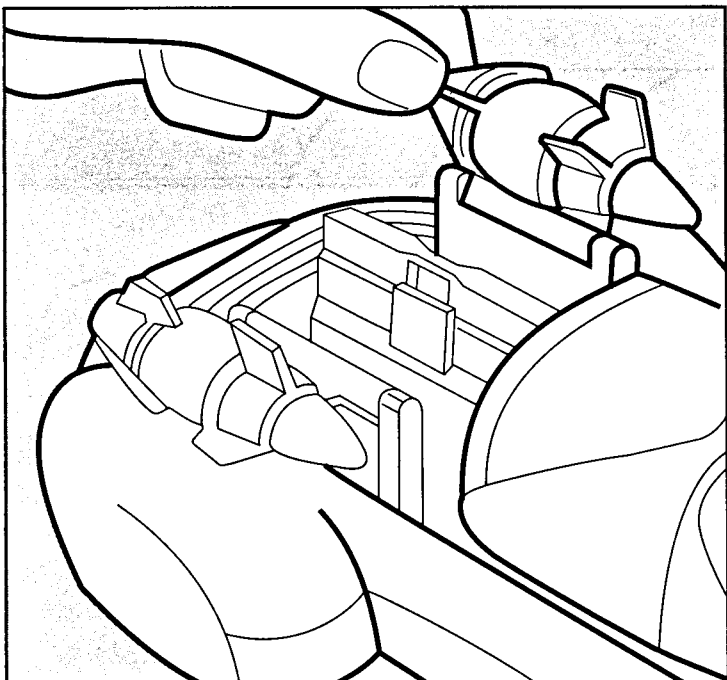

8 Replace each thruster by rotating back into compartment.

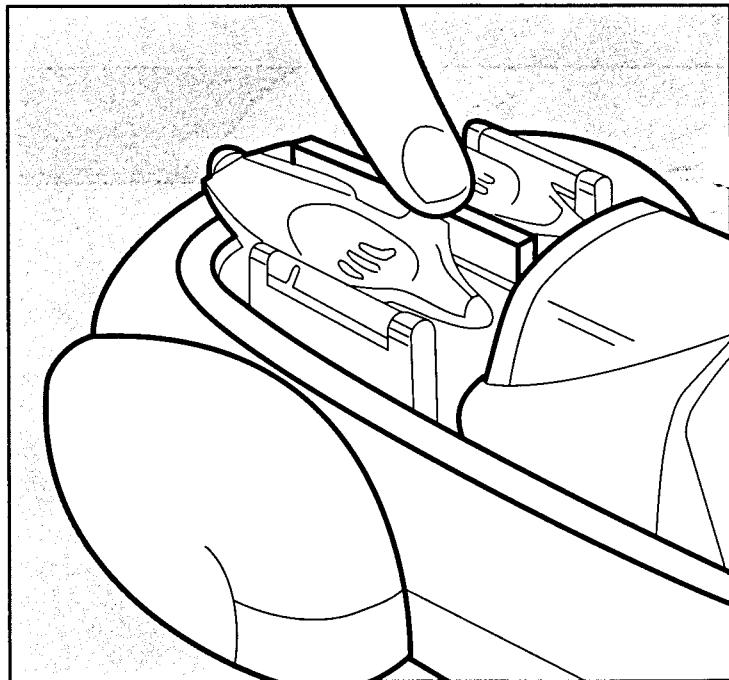

9 Push thruster compartment down. Slide roof back to cover thruster compartment.

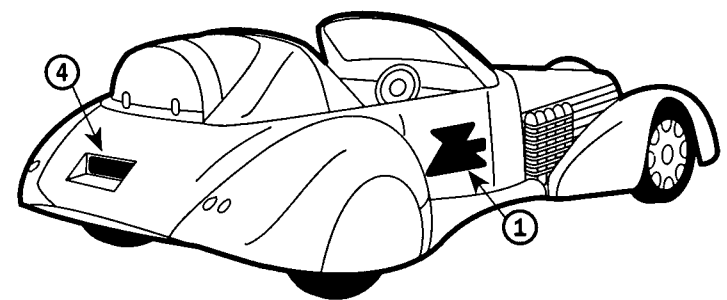

10 Apply labels using the numbers on the label sheet and these illustrations as a guide.

