

4478


# MITTLE PONY™

## Scrub-A-Dub Tub™

### Instructions


Remove all pieces from plastic frames. If you have difficulty, have an adult use safety scissors. Remove all pieces from plastic bags and discard bags IMMEDIATELY.

1. Locate Sea Pony™ tub leg marked "1" (found on wrong side of leg). Turn tub upside down. Locate slot in bottom of tub marked "1" (found on side of tub). Slip bar on leg into slot in tub. (ILL. 1) Repeat for remaining three legs, matching the number on the leg to the number on the tub.

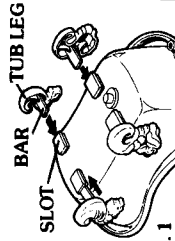


ILL. 1

2. Turn tub right side up. Press drain plug into hole inside tub. (ILL. 2)

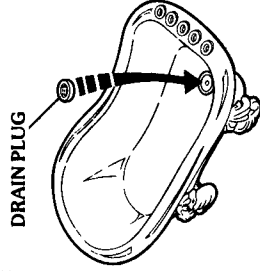


ILL. 2

3. Insert post on shower head face into hole in shower head. Attach assembled shower head to end of arch on shower holder. (ILL. 3)

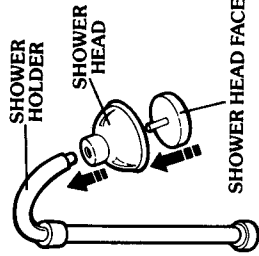


ILL. 3

4. Insert posts on shower holder into holes in shower support front. Make sure pony design on shower support front is positioned with right side up. (ILL. 4)

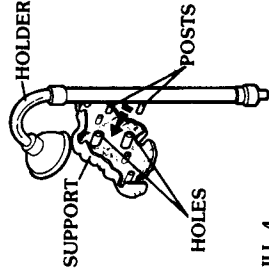


ILL. 4

5. With large end of curtain rod holder pointing down, and pony design on shower support front positioned with right side up, insert post on holder into hole in shower support (extreme left or right hole). Repeat for remaining holder. (ILL. 5)

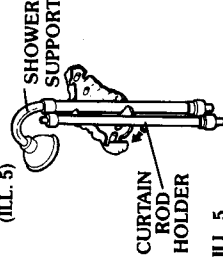

ILL. 5


6. With arrow facing up, insert posts on shower support back into holes in shower support front. (ILL. 6)

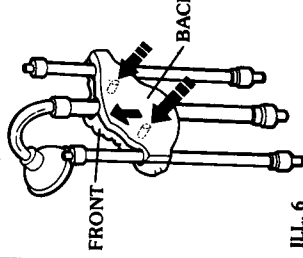

ILL. 6




7. With shower head facing into tub, insert posts on assembled shower into holes in end of tub. (ILL. 7)

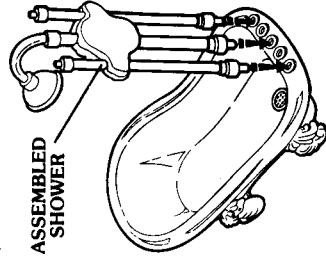


ILL. 7

8. With faucet handle facing into tub, snap post on end of faucet into hole in end of tub. Repeat for remaining faucet. Faucets should turn easily if properly attached. (ILL. 8)

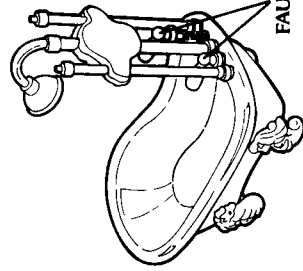


ILL. 8

9. Hold shower curtain rod so that the holes in the ends of the rod are facing down. Grasping each shower curtain hook with the small end down and the slit facing away from the rod, slip hooks onto rod. (ILL. 9)

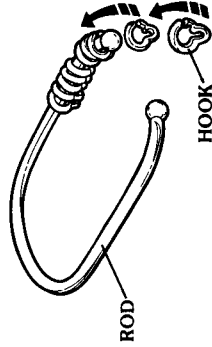


ILL. 9

10. Attach curtain rod to top of curtain rod holders. (ILL. 10)

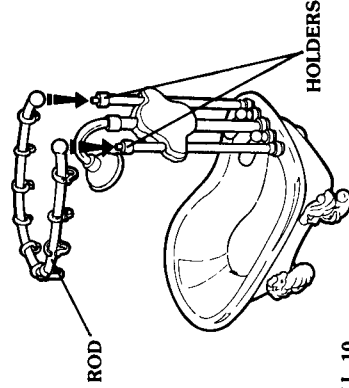


ILL. 10

11. Working from left to right, attach one curtain to the first six shower hooks. Now, working from right to left, attach the other curtain to the remaining six hooks. (ILL. 11)

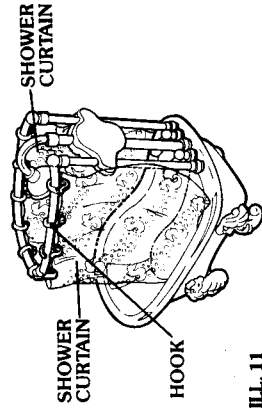

ILL. 11

12. Place soap dish over side of tub with dish hanging inside tub. (ILL. 12)

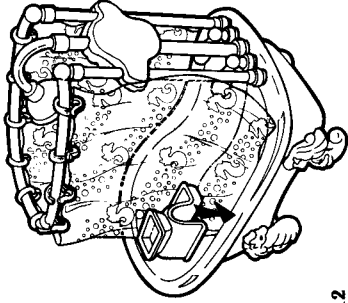

ILL. 12