

MONSTER TRUCK:




Choose a clear car mold and snap it onto top of monster truck chassis. Place monster truck assembly onto top of car lift as shown and twist to lock in place.

CAR LIFT EXTRUDER:



Roll PLAY-DOH® modeling compound as shown and fill bottom of car lift tube with compound.

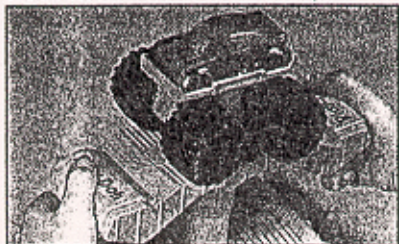

Fit car lift tube over base pole and press down with both hands as shown to extrude compound up into car until mold is completely filled.




Remove truck assembly by twisting and lifting up as shown. Your monster truck is ready to roll!

CAR BOOK MOLDS:



Overfill both sides of mold with compound. Tightly close the mold, open it, remove excess and lift out the cars. Line up the cars and roll the monster truck over them to smash 'em up!

ADDITIONAL MOLDS:

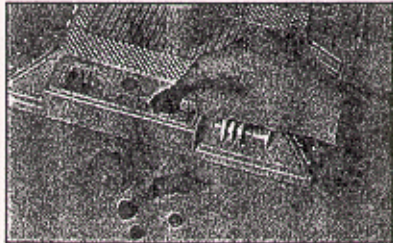

The car lift base also has additional molds to make car parts and tools for your mechanic's pit!

CLEAN-UP:

DO NOT USE HOT WATER OR CLEANING SOLUTIONS to clean PLAY-DOH® modeling compound from carpets or fabrics. For best results, remove excess and allow compound to dry. Loosen compound with stiff brush and vacuum clean. If necessary, wash with gentle soap, COLD water and brush. Repeat if necessary.

The clear molds should periodically be washed with mild soap and water. For best results, do not mix classic PLAY-DOH® modeling compound with Sparkle PLAY-DOH® compound.

NONTOXIC CONFORMS TO ASTM D-4236-89
 PLAY-DOH® and PLAY-DOH® logo are registered trademarks of Tonka Corporation identifying quality modeling compound products produced exclusively by Playskool, Inc.
 ©1993 Tonka Corporation.
 ©1993 Playskool, Inc., Pawtucket, RI 02862 USA.
 All Rights Reserved.
MADE IN USA.



Questions? Call:™

1-800-PLAYSKL

