
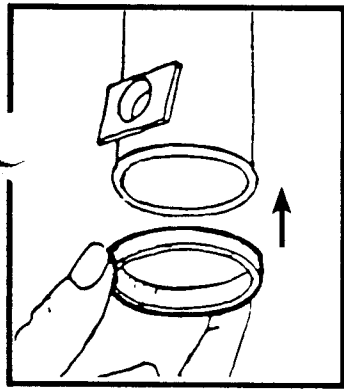
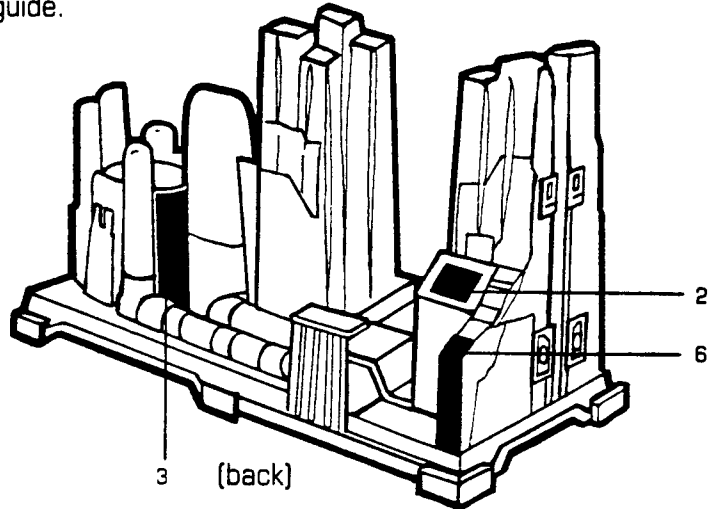




TERMINATOR™ 2

Bio-Flesh Regenerator™ Playset Instruction Sheet


1. Apply labels using numbers on the label sheet and these illustrations as a guide.

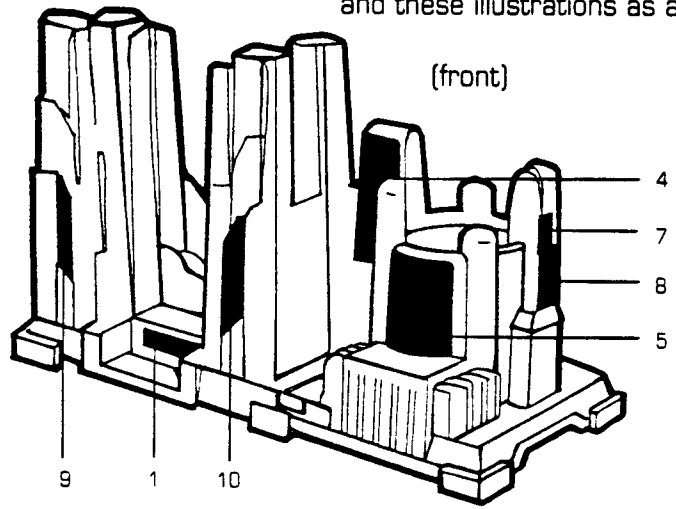


2. Place plastic cap on round cylinder. Slide black plate with hole onto square guides of cylinder to rib, making sure hole in cylinder is covered and arrow is pointing up.

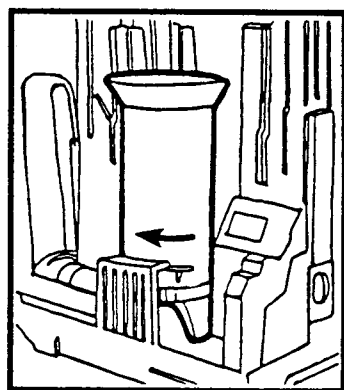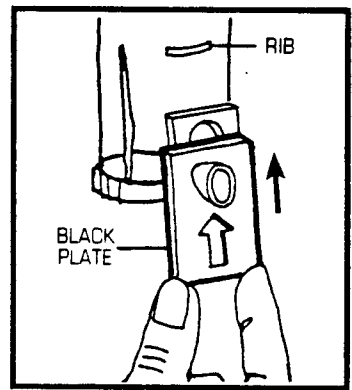


3. Place Playset on play-mat. Place cylinder onto base as shown and rotate black plate to front of base.

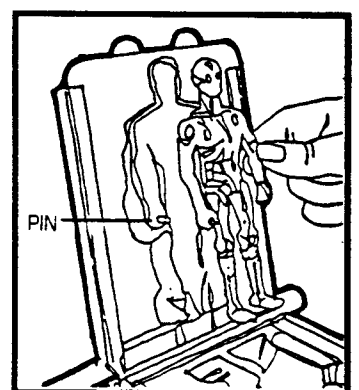


4. Place endoskeleton figure in mold with right hand around pin. Close mold and set aside.

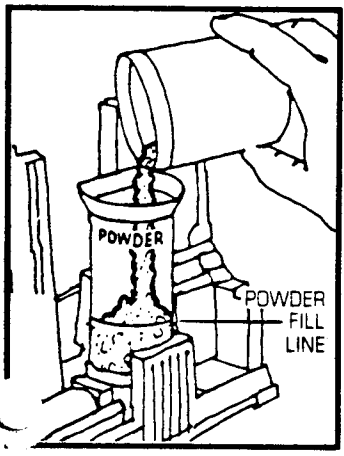


5. Add powder to the cylinder up to fill line. Powder can be stored in provided can.

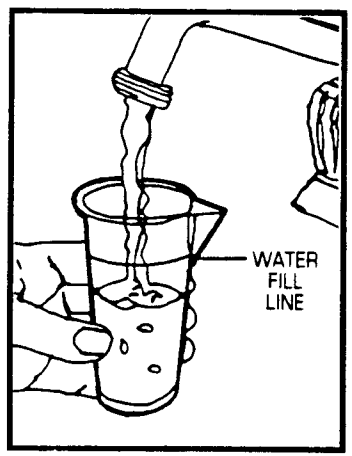


6. Fill measuring cup with cold tap water up to fill line (hot water will set material too quickly).

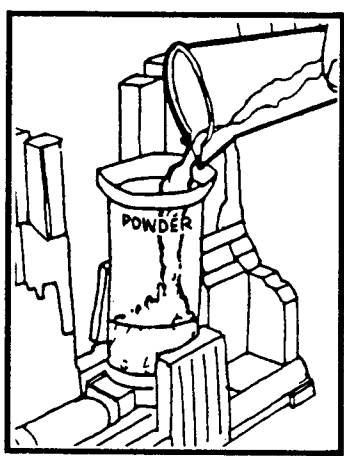


7. Pour water from cup into cylinder and mix with the large knife.

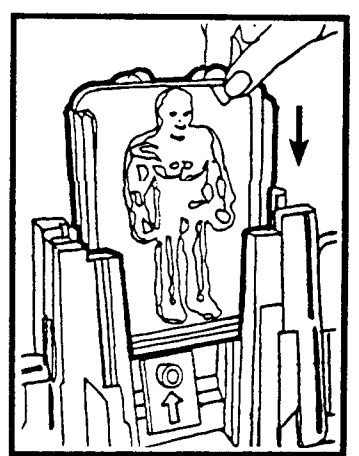


8. Push mold down into base. Hole in black plate should now align with hole in mold.

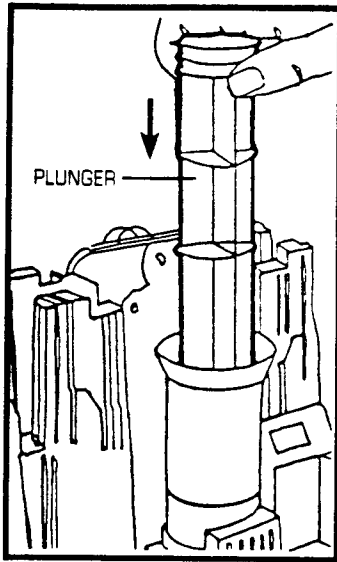


9. Slowly push plunger into cylinder to force material into mold. Allow material 3 to 5 minutes to set.

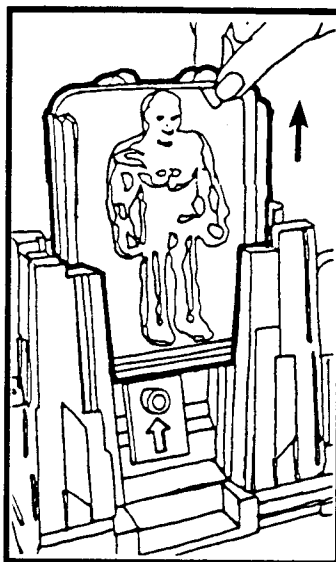

10. Lift mold out of base.

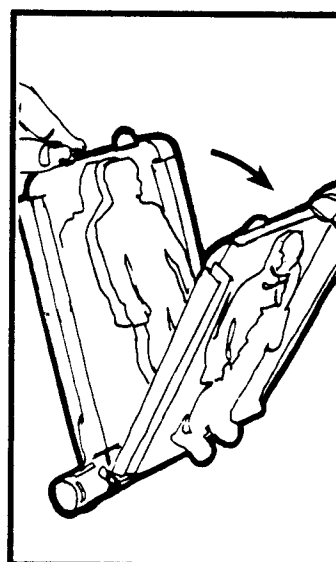


11. Open mold and carefully remove the figure.

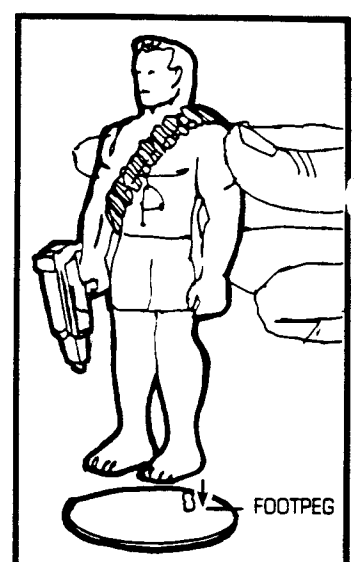


12. Figure can stand by inserting footpeg on base into foot. Figure can hold weapons.

IMPORTANT
DO NOT PUT POWDER OR MIXTURE DOWN A SINK.
CAN CLOG PIPES. DISPOSE OF IN TRASH CAN ONLY.


CLEAN UP: Clean Playset after each use. Let "Bio-Flesh Regenerator" mixture dry before cleaning. Remove cap from cylinder and scrape all remaining material into garbage can. First pick up partially dry pieces by hand; vacuum remaining pieces or wash with water using a soft bristle brush. Clean soiled fabrics as called for in fabric's cleaning instructions. Vacuum dry "Bio-Flesh Regenerator" powder from carpet or fabrics.

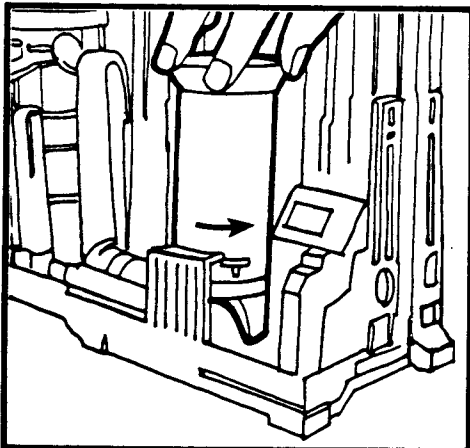

1. Slide black plate up to rib, turn and remove cylinder.

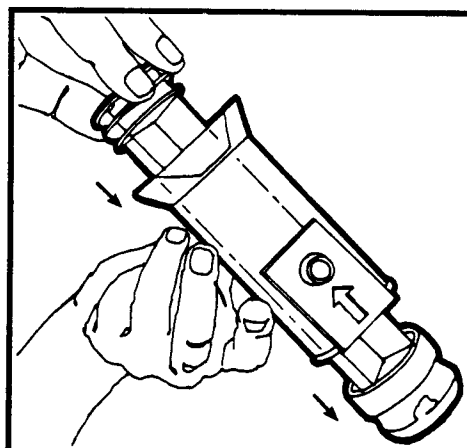

2. Remove cap. Push plunger all the way through cylinder to clean.

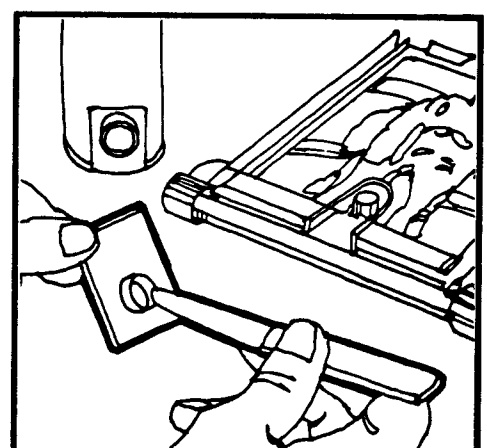

3. Remove black plate. With any tool, push material from holes in plate, cylinder, and mold.