



MIRAGE SX-100™


ASSEMBLY AND INSTRUCTIONS

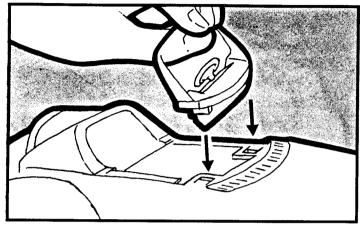


Snap windshield into position.

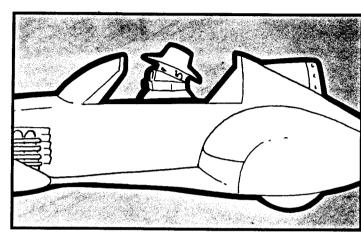


Place figure in vehicle as shown.

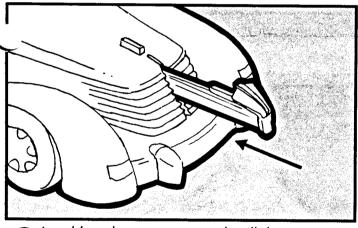


3 Load hood ornament missile all the way into front of vehicle.

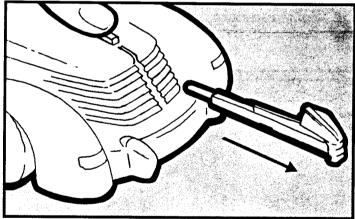


Press firing button to launch hood ornament missile.

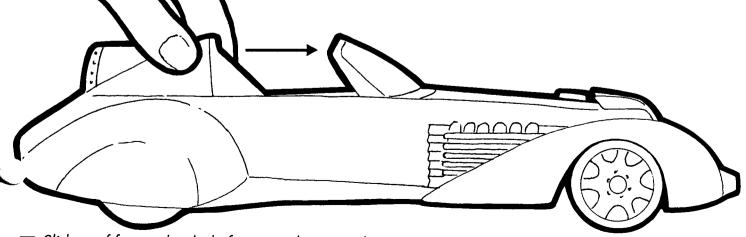


Slide roof forward to hide figure and expose thruster compartment.

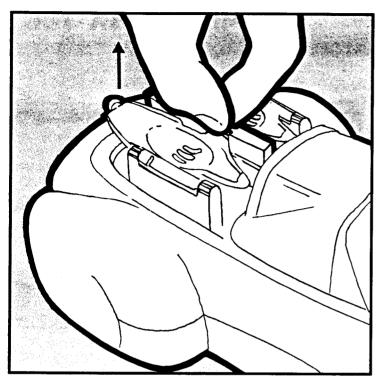


6 Pull thruster compartment up.

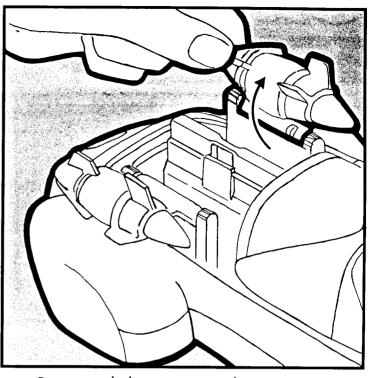

7 Rotate each thruster outward.

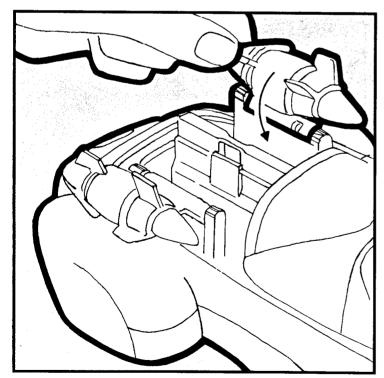

8 Replace each thruster by rotating back into compartment.

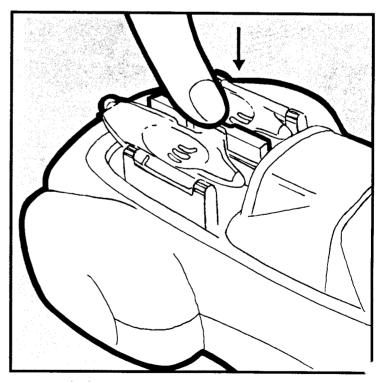

9 Push thruster compartment down. Slide roof back to cover thruster compartment.