

STAR WARS™ EPISODE I

ROYAL NABOO STARSHIP ANSWERING MACHINE



OWNER'S MANUAL INSTALLATION AND OPERATING INSTRUCTION

The Royal Naboo™ Starship Answering Machine is a replica of the ship used by the dignitaries of Naboo when they travel on official business. Incorporated into the ship's design is a full-feature digital answering machine with three sound effect keys that play five phrases of actual character speech from the movie allowing you to play them or record them into your outgoing message.

SPECIAL FEATURES

This Digital Answering System uses the latest technology to provide you with a high-performance tool. Your new Digital Answering System includes the following special features:

- Fully Digital Answering System - Record and receive your messages on a digital voice chip for excellent sound quality and reliability.
- Sound Effects - 3 sound effect keys play 5 phrases of actual character speech.
- Pre-recorded Outgoing Message (OGM) - Automatically answer calls with the pre-record message if no personal outgoing message is recorded.
- Personal Outgoing Message - Record your own message up to 60 seconds in length. Add one of the character phrases to your message for even more fun.
- Extra-long recording capacity - Provides 14 minutes of digital message recording capacity.
- Day/Time Stamping - Day and time of the ICM will be announced at the end of each message.
- Instant Message Playback - Messages will play back instantly, unlike conventional audiocassette tape systems which require rewinding.
- Instant Skip & Repeat Message - Skip to next message and repeat a message instantly during playback.
- Multiple Remote Features - Control all functions of the Answering System -- On/Off, message playback, skip/erase message, from a remote touch tone phone. Also change OGM and codes by remote control.
- Call Breakthrough - Alert people in your home to answer your remote telephone call.
- Memory Backup - saves all messages in the event of power failure. (when optional 5x1.5V LR44 button cell batteries are installed.)

CONTENTS

| | |
|--|--|
| Care and Maintenance | Listening to your Message |
| Important Safety Instructions | To Pause Message playback |
| Battery Safety | To Skip Message playback |
| Location and Function | To Repeat Message playback |
| Wall or Table Mount Assembly | To Erase Message |
| Getting Started | To Erase all Messages |
| Installing the Batteries | To Save all Messages |
| Setting the Clock | Pin Security & Call Breakthrough (CBT) Codes |
| Answering System Operation | Power Failure Security |
| Preparing for use | Remote Operation |
| Turning the Answering System On and Off | Remote Operation through Touch Tone Phone |
| Recording Your Outgoing Message (OGM) | Access to your Answering System using the Remote Security Code |
| Checking Your Outgoing Message and Display | Other Information |
| Automatic Call Termination | Problem Solving Guide |
| | Care and Maintenance |
| | FCC Requirements |

CARE AND MAINTENANCE:

- Parent should examine the unit and adaptor periodically, in case there is any damage, the toy must not be used until that damage has been properly repaired.
- Clean the unit with a soft, damp cloth.
- Please do not put the unit in direct sunlight or near any source of heat.
- Please remove the batteries if you won't be using the unit for a long period of time.
- Do not use any chemical solvent to clean the unit.
- Don't spill anything on the unit.
- For indoor use only.
- Do not immerse in water.

IMPORTANT SAFETY INSTRUCTIONS

When using your telephone equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock or injury to persons, including the following:


- Read and understand all instructions.
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
- Slots and openings in the cabinet and the back or bottom are provided for ventilation and to protect it from overheating. These openings must not be blocked or covered. Ventilation slots should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
- This product should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
- (If provided with a grounded type attachment plug) - This product is equipped with a three wire grounding type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug. (If provided with a polarized attachment plug) - This product is equipped with a polarized line plug (a plug having one blade wider than the other) This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- Do not allow anything to rest on the power cord. Do not locate this product where the cord will be damaged by persons walking on it.
- Do not overload wall outlets and extension cords since this can result in the risk of fire or electric shock.
- Never push objects of any kind into this product through cabinet slots since they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- To reduce the risk of electric shock, do not disassemble this product. Take it to a qualified serviceman when service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect re-assembly can cause electric shock when the appliance is subsequently used.
- Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power supply cord or plug is damaged or frayed.
 - If liquid has been spilled into the product.
 - If the product has been exposed to rain or water.
 - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
 - If the product has been dropped or the cabinet has been damaged.
 - If the product exhibits a distinct change in performance.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.

SAVE THESE INSTRUCTIONS

BATTERY SAFETY:

To reduce the risk of fire or personal injury, read and follow these instructions.

- Use only the following type and size of battery:
5 x 1.5V, LR44 Button Cell.
- Do not dispose of the battery in a fire. It may explode. Check with local codes for possible special disposal instructions.
- Do not open or mutilate the battery. Released electrolyte is corrosive and may cause damage to the eyes and skin. It may be toxic if swallowed.
- Exercise care in handling batteries to prevent shorting the battery with such conducting materials as rings, bracelets and keys. The battery or conductor may overheat and cause burns.
- Do not attempt to recharge the battery identified for use with this product. The battery may leak corrosive electrolyte or explode.
- Do not attempt to rejuvenate the battery identified for use with this product by heating it. Sudden release of the battery electrolyte may occur causing burns or irritation to eyes or skin.
- When replacing batteries, all batteries should be replaced at the same time. Mixing fresh and discharged batteries could increase internal cell pressure and rupture the discharged battery(ies). (Applies to products employing more than one separately replaceable primary battery).
- When inserting batteries into this product, the proper polarity or direction must be observed. Reverse insertion of batteries can cause charging, and it may result in leakage or explosion. (Applies to products employing more than one separately replaceable primary battery).
- Remove the battery from this product if the product will not be used for a long period of time (several months or more) since during this time the battery could leak in the product.
- Discard a "dead" battery as soon as possible since a "dead" battery is more likely to leak in a product.
- Do not store this product, or the battery identified for use with this product, in high temperature areas. Batteries that are stored in a freezer or refrigerator for the purpose of extending shelf life should be protected from condensation during storage and defrosting. Batteries should be stabilized at room temperature prior to use after cold storage.

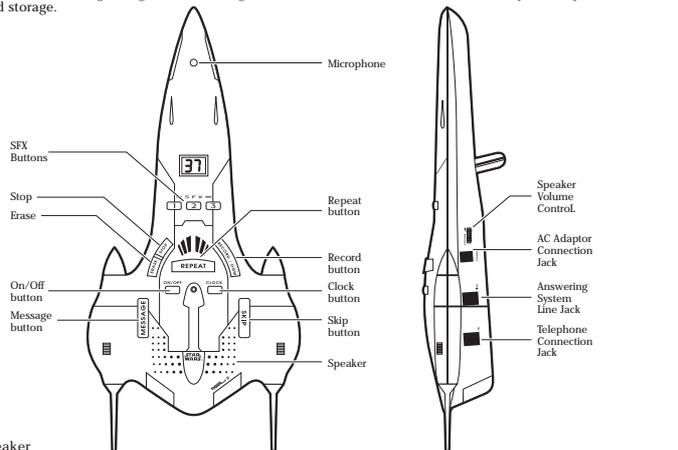

- Speaker
 - Microphone
 - Message button
 - Skip button
 - Record button
 - On/Off button
 - Repeat button
 - Clock button
 - Erase
 - Stop
 - Message Display
 - SFX Buttons
 - Speaker Volume Control
 - AC Adaptor Connection Jack
 - Telephone Connection Jack
 - Answering System Line Jack
 - Battery Compartment
- Record outgoing message on your Answering System
 - Press to retrieve incoming messages
 - Press to skip forward to hear the next message during playback, and for day/time adjustment.
 - Press to record OGM
 - Press to turn answering system On and Off, and pause during message playback
 - Press to repeat the same message during playback
 - Press to announce the day/time, and to change clock setting mode
 - Press and delete all ICM
 - Press to stop message play or clock setting
 - Illuminated digital display shows the number of recorded message and indicates system status
 - Press to generate through the speaker, or record sound effect into your OGM.
 - Set Speaker Volume
 - connect to AC adaptor.
 - Connect to telephone
 - Connect into your house telephone jack
 - For storing the 5x1.5V LR44 or G13A button cell used for memory back-up to save messages in the event of power failure.

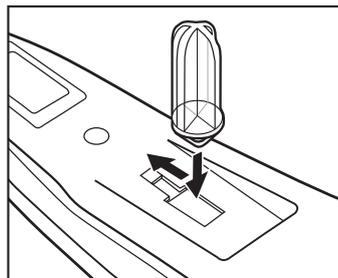


Fig. 1 If you wish to place your answering machine on a tabletop, insert the clear table mount peg into the square slot located on the underside of the unit. Slide the peg forward into the slot to secure (Fig. 1).

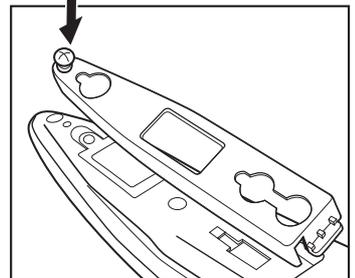


Fig. 2 If you wish to mount the answering machine on the wall, position the bracket as shown in the illustration. Using the screws supplied, fasten to the main unit to secure (Fig. 2)

GETTING STARTED

Connecting your Answering System

- Carefully remove your Answering System from its shipping carton. If there is any visible damage, do not attempt to operate this equipment. Return it to place of purchase.
- Check to be sure that you have all items that come with this answering system. You should have the answering system, AC adaptor, standard telephone line cord, wall mounting bracket, clear table mount and Owner's Manual.
- Insert one end of the telephone line cord into the line jack (marked LINE on the rear side of the Answering System) and the other end into the house telephone jack.
- Connect the telephone line cord of your telephone to the telephone connection jack (marked TEL) on the rear side of the Answering System.
- Insert the small plug on the end of the AC adaptor into the jack (marked POWER on the rear side of the Answering System).

Note: Use only with a Class 2 power Source.
Input 120V A.C 60Hz
Output 9V A.C 4VA

- Plug the AC adaptor into a standard 120V AC wall outlet. A beep will be heard. The message display will count up from 0 to 15. A beep will be heard and the display will read "0" and "CL" alternatively. (If REMOVABLE).
- Lift the handset of your telephone and confirm that you have a dial tone. (If you do not hear a dial tone, review steps 3 through 6)


INSTALLATION OF BATTERY

The system uses 5x1.5V LR44 or G13A button cells as backup power for the digital memory to prevent loss of messages during power failure. When the display reads "LO", you should install or replace with new button cells.

- To install the batteries:
- Remove the battery compartment lid by loosening the screw with a screw driver
- Insert 5 pieces of button cell into the battery compartment with correct polarities.
- Slide the battery compartment lid into the end slot, then press it down and tighten the screw with a screwdriver.

TO ENSURE PROPER FUNCTION :

- DO NOT MIX OLD AND NEW BATTERIES.
- DO NOT MIX ALKALINE, STANDARD OR RECHARGEABLE BATTERIES.
- BATTERY INSTALLATION SHOULD BE DONE BY AN ADULT.
- NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.
- RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED (IF REMOVABLE).
- RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT supervision (IF REMOVABLE).
- ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.
- BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.
- EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.
- THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.

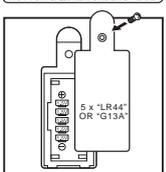

CLOCK SETTING

This system incorporates a Day/Time stamp feature that lets you know exactly when a call or message is received. The clock is preset at SUNDAY, 12:00 AM by the factory. Therefore, you must set the clock after powering up your system.

To set the clock

- Press and hold the CLOCK button for 2 seconds. You will hear a voice prompt SUNDAY, and the message display shows "1." ("2" refers to Monday, "3" refers to Tuesday, and so on).
- Press the FORWARD button or the REPEAT button until display shows "4" which refers to Wednesday. A voice prompt WEDNESDAY will be heard.
- Press the CLOCK button once to enter the day WEDNESDAY, and you will hear a voice prompt TWELVE AM with the display shows "12" which guides you to the setting of the hour.
- Press the FORWARD buttons or the REPEAT buttons until the display shows "10". Voice prompt "TEN AM" will be heard.
- Press the CLOCK button once to enter the hour "10" and you will hear a voice prompt "OH" with the display showing "00" which guides you to the setting of the minutes.
- Press the FORWARD button or the REPEAT button until the display shows "30". A voice prompt "THIRTY" will be heard.
- Press the CLOCK button once to enter the minute "30", you will hear a voice prompt "WEDNESDAY, TEN THIRTY AM". Please note that the clock will start functioning once the system is powered up. As long as the system is powered up with battery or AC power, the clock will function.

ANSWERING SYSTEM OPERATION

Prepare for use

It is important that you record the OGM before operating the Answering System. Otherwise, the default OGM will be announced "PLEASE LEAVE YOUR MESSAGE AFTER THE TONE".

Turning the Answering System On and Off

When the Answering System is On, the display will show the "0" and the LED is on.

To Turn Off the Answering System

Press the "On/Off" button, the LED will be turned off and a beep tone will be heard. The display should read "OFF" and then "0".

To Turn On the Answering System

Press the "On/Off" button, the LED will be turned on and a beep tone will be heard. The display should read "On" and then "0".

Record Your Outgoing Message (OGM)

Your Answering System has the capability to hold one 60 second OGM.

To Record Your OGM

- Press and hold the RECORD button for 2 seconds until a beep tone is heard and the display reads A1.
- Speak clearly into the microphone from 6 to 8 inches away and the display will count up. Press STOP when you have finished your message. A beep tone will be heard. The Answering System will play back your OGM and then the display should read A1.

To Insert Sound Effects into Your OGM

Press any of the three sound effects keys while recording your outgoing message to insert phrases into your message. You may insert as many as time allows. Watch the display to keep track of your remaining time.

CHECKING YOUR OGM AND DISPLAY

To check the OGM

- Press and release the RECORD button, a beep tone is heard and display reads A1.

Checking the Message display

The Message Display provides a lighted digital readout to let you check the number of ICM and system's status at a glance. Following are examples of how the display might look.

| | |
|--------------------|--|
| Display reads "0" | Answering System is On, but there is no message. |
| Display reads "08" | There are eight messages in the Answering System. |
| Display reads "FU" | Answering System's 14-minute recording capacity is full and there are messages waiting. In this instance, all subsequent calls will be answered, but no messages will be recorded. |

AUTOMATIC CALL TERMINATION

When a caller is leaving a message, there are certain conditions when the Answering System will terminate the call:

- If the duration of the call exceeds 1 minute in length.
 - If the caller pauses (is silent) for 8 seconds or more while leaving a message.
 - If the answering machine's 14-minute recording capacity becomes full.
- Note: If the recording capacity becomes full, the display will flash four times with "FU" and then display the no of messages.

LISTENING TO YOUR MESSAGES

If you have two messages, press the "MESSAGE" button, a voice prompt "YOU HAVE TWO MESSAGES" will be heard and the Answering System will play back the messages. The message display will read the number of each message during playback.

To Pause Message Playback

Message playback will pause by pressing the "MESSAGE" button. The display should read "PS".

To Stop Message Playback

Message playback will stop by pressing the "STOP" button.

To Skip Message Playback

Message playback will skip by pressing the "SKIP" button.

To Repeat Message Playback

Message playback will repeat by pressing the "REPEAT" button.

To Erase Message

Press and release the "ERASE" button during message playback will erase your message.

To Erase All Messages

Press and hold the "ERASE" button for 2 seconds, the display should read "ES". All messages will be erased. A beep tone will be heard and the display should show "0".

To Save All Messages

If you have erased all messages by mistake, press and hold the "ERASE" button for 2 seconds again. The display will show "SA" and erased messages will be saved after a long beep tone. The message display will show the number of messages recorded.

Pin Security & Call Breakthrough (CBT) Codes

The PIN security code is the code you use to get access to your system when you are away. CBT code allows callers to alert you to answer their call. This allows you to avoid answering calls that you are not expecting.

The factory preset PIN security code and CBT are "159" and "267" respectively.

To change the PIN Security Code and CBT code

PIN Security code

- Press and hold the "SKIP" button for 2 seconds, a beep tone is heard and the display reads an original Security code "SC, = 1, = 5, = 9, = 1". Press the "SKIP" and "REPEAT" button until you choose the 1st digit.
- Press the "On/Off" button once to enter the 1st digit. Display should read = 5. Press the "SKIP" and "REPEAT" button until you choose the 2nd digit.
- Press the "On/Off" button once to enter the 2nd digit. Display should read "_ 9". Press the "SKIP" and "REPEAT" button once until you choose the 3rd digit.
- Press the "On/Off" button once to enter the 3rd digit

Note: If no key is pressed within 8 seconds, the setup procedure will be aborted.

CBT code

- Press and hold the "REPEAT" button for 2 seconds, a beep tone is heard and the display reads an original security code "Cc, = 2, = 6, = 7, = 2". Press the "SKIP" and "REPEAT" button until you choose the 1st digit.
- Press the "On/Off" button once to enter the 1st digit. Display should read "= 6". Press the "SKIP" and "REPEAT" button until you choose the 2nd digit.
- Press the "On/Off" button once to enter the 2nd digit. Display should read "_ 7". Press the "SKIP" and "REPEAT" button once until you choose the 3rd digit.
- Press the "On/Off" button once to enter the 3rd digit

Note: If no key is pressed within 8 seconds, the setup procedure will be aborted.

Power Failure Security

The memory of the system will be protected during an AC power failure if the 5x1.5V or G13A button cells are installed. After power resumes, the system will return to its previous state. If there is no cell installed or the cells were dead, once AC power resumes, all memory will be erased. You have to re-program all settings like Date/Time, OGM, PIN Security and CBT codes.

REMOTE OPERATION

Remote Operation through Touch Tone Phone

You can operate your system remotely from any Touch Tone phone to:

- Turn the Answering System On and Off
- Play back ICM
- Save and erase ICM
- Record a new OGM
- Use Call Breakthrough
- Change of your PIN Security and CBT

Access to your Answering System using the Remote Security Code

- Call your system and wait for the OGM.
- Press the "*" button when your OGM is played.
- Enter your PIN SECURITY CODE after the tone.
- Upon successful entry, the system will say "YOU HAVE NO MESSAGES" or "YOU HAVE X MESSAGES" and prompt you with the Help Menu.

- To record outgoing message, press * 1.
 - To monitor room, press 3.
 - To play memo, press 4.
 - To play all messages, press 5.
 - To play new messages, press 6.
 - To delete all messages, press star * 7.
 - To stop functions, press 8.
 - To play the message menu, press 0.
 - If you press "0", message play menu will be announced.
 - To repeat message, press 4.
 - To skip message, press 6.
 - To delete message, press 7.
 - To stop play, press 8.
- Note: this remote comment will not be announced
- To record OGM, press * 1.
 - To record MEMO, press * 3.
 - To change CBT, press * 4.
 - To change security code, press * 6
 - To erase all messages, press * 7
 - To end of remote operation, press #.
- Note: If you press the Touch Tone button by mistake during remote operation, press "8" to erase the previous comment.

PROBLEM SOLVING GUIDE

No sound during ICM playback or call monitoring.

Adjust the speaker volume control

Cannot record an outgoing message (OGM).

Make sure you press and hold the OGM button for 2 seconds until the message display counts up.

The OGM changed after a power failure.

Backup batteries were not installed or need replacing.

Answering System takes calls on the wrong number of rings.

Extension phones operating on the same line of your Answering System weaken the signal received by the system.

This may cause your answering system to take longer to answer.

Answering System does not record ICM.

Make sure the message Display is not showing "FU"

CARE AND MAINTENANCE

Treat this product as you would any fine electronic equipment.

- Keep your telephone Answering System away from sources of excessive heat and moisture.
- Keep liquids from spilling onto or into any of your telephone Answering System components.
- Periodically clean the exterior surface by wiping with clean cloth. Do not use solvents, abrasive, glass cleaners, etc. These may scratch the surface and damage the external finish of your equipment.
- Do not let the cords become knotted or twisted.
- Never open the telephone Answering System housing
- Locate your telephone Answering System in a safe place. Place it on a solid flat surface where its cords will be out of the way and where it is not likely to be knocked off.

FCC REQUIREMENTS

Federal Communications Commission Requirements

This equipment complies with Part 68 of FCC Rules. A label on the Base Unit of this equipment contains, among other information, the FCC Registration Number and the Ringer Equivalence Number (REN) for this equipment. You must, upon request, provide this information to your telephone company.

The REN also is useful in determining the quantity of devices that you may connect to your telephone line and still allow all of these devices to ring when your telephone number is called. In most areas, but not all, the sum of the RENs for all devices connected to one line should not exceed five (5.0). To be certain of the number of devices that you may connect to your line, you should contact your local telephone company.

If your equipment should cause harm to the telephone network, the telephone company may temporarily disconnect your service. If possible, they will notify you in advance that temporary discontinuance of service may be required.

However, when advance written notice is not possible, the telephone company may temporarily discontinue service without notice if such action is necessary under the circumstances. The telephone company may make changes in its communication facilities, equipment, operations, or procedures where such action is reasonably required in the operation of its business and is not inconsistent with the rules and regulations of the Federal Communications Commission.

Do not attempt to repair or modify this equipment. Changes or modifications not expressly approved by the party responsible for its compliance could void the user's authority to operate the equipment.

This equipment should not be used on coin telephone lines. Connection to party line service is subject to state tariffs. If trouble is experienced, disconnect this equipment from the telephone line to determine if it is causing the malfunction. If the equipment is determined to be malfunctioning, its use should be discontinued until the problem has been corrected.

Current FCC Regulations specify that any direct connections to a telephone company line be done using only standard phone jacks and plugs that meet FCC Regulations.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

If you experience trouble with this equipment, please contact the following address and phone number for information on obtaining service or repairs.

Company: Tiger Electronics, Ltd., Repair Dept.
Address: 980 Woodlands Parkway
Vernon Hills, IL 60061, U.S.A.
Tel. No.: 847-913-8100

90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (Tiger), warrants to the original consumer purchaser of this product that the product will be free of defects in material or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replace (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replace (at Tiger's option) for a service fee of \$35.00. Payment must be by check or money order payable to Tiger Electronics, Ltd.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All products returned must be shipped prepaid and insured for loss or damage to:

Tiger Electronics, Ltd.
980 Woodlands Parkway
Vernon Hills, Illinois 60061 U.S.A.

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

© Lucasfilm Ltd. & TM. All rights reserved. Used under authorization.

TIGER
ELECTRONICS, LTD.

©, TM, & © 1999 Tiger Electronics, Ltd. All rights reserved.
980 Woodlands Parkway, Vernon Hills, Illinois 60061, U.S.A.

©, TM, & © 1999 Tiger Electronics UK Ltd. All rights reserved.
Belvedere House, Victoria Avenue, Harrogate, North Yorkshire HG1 1EL, England.
www.tiger toys.com

PRINTED IN CHINA